

# CHRYSLER CORPORATION

## SERVICE MANUAL and SUPPLEMENT

### 1998 RAM TRUCK 1500 - 3500

To order the special service tools used and illustrated, please refer to the instructions on inside back cover.



NO PART OF THIS PUBLICATION MAY BE REPRODUCED, STORED IN A RETRIEVAL SYSTEM, OR TRANSMITTED, IN ANY FORM OR BY ANY MEANS, ELECTRONIC, MECHANICAL, PHOTOCOPYING, RECORDING, OR OTHERWISE, WITHOUT THE PRIOR WRITTEN PERMISSION OF CHRYSLER CORPORATION.

Chrysler Corporation reserves the right to make changes in design or to make additions to or improvements in its products without imposing any obligations upon itself to install them on its products previously manufactured.

Litho in U.S.A. Copyright © 1997 Chrysler Corporation 15M0797



Paper Content  
50% Recycled

**NEXT PAGE ►**

# FOREWORD

The information contained in this service manual has been prepared for the professional automotive technician involved in daily repair operations. This manual does not cover theory of operation, which is addressed in service training material. Information describing the operation and use of standard and optional equipment is included in the Owner's Manual provided with the vehicle.

Information in this manual is divided into groups. These groups contain general information, diagnosis, testing, adjustments, removal, installation, disassembly, and assembly procedures for the systems and components. To assist in locating a group title page, use the Group Tab Locator on the following page. The solid bar after the group title is aligned to a solid tab on the first page of each group. The first page of the group has a contents section that lists major topics within the group. If you are not sure which Group contains the information you need, look up the Component/System in the alphabetical index located in the rear of this manual.

A Service Manual Comment form is included at the rear of this manual. Use the form to provide Chrysler Corporation with your comments and suggestions.

Tightening torques are provided as a specific value throughout this manual. This value represents the midpoint of the acceptable engineering torque range for a given fastener application. These torque values are intended for use in service assembly and installation procedures using the correct OEM fasteners. When replacing fasteners, always use the same type (part number) fastener as removed.

Chrysler Corporation reserves the right to change testing procedures, specifications, diagnosis, repair methods, or vehicle wiring at any time without prior notice or incurring obligation.

## GROUP TAB LOCATOR

IN	Introduction	
IN-S	Introduction	
0	Lubrication and Maintenance	
0-S	Lubrication and Maintenance	
2	Suspension	
3	Differential and Driveline	
5	Brakes	
6	Clutch	
7	Cooling System	
7-S	Cooling System	
8A	Battery	
8B	Starting Systems	
8C	Charging System	
8C-S	Charging System	
8D	Ignition System	
8E	Instrument Panel Systems	
8F	Audio Systems	
8G	Horn Systems	
8H	Vehicle Speed Control System	
8H-S	Vehicle Speed Control System	
8J	Turn Signal and Hazard Warning Systems	
8K	Wiper and Washer Systems	
8L	Lamps	
8M	Passive Restraint Systems	
8N	Electrically Heated Systems	

8P	Power Door Locks	
8Q	Vehicle Theft/Security Systems	
8R	Power Seat Systems	
8S	Power Window Systems	
8T	Power Mirror Systems	
8U	Chime/Buzzer Warning Systems	
8V	Overhead Console Systems	
8W	Wiring Diagrams	
8W-S	Wiring Diagrams	
9	Engine	
9-S	Engine	
11	Exhaust System and Intake Manifold	
11-S	Exhaust System and Intake Manifold	
13	Frame and Bumpers	
14	Fuel System	
14-S	Fuel System	
19	Steering	
21	Transmission and Transfer Case	
22	Tires and Wheels	
23	Body	
24	Heating and Air Conditioning	
25	Emission Control Systems	
25-S	Emission Control Systems	
	Component and System Index	

**NOTE:** Groups with the suffix "-S" are Supplements to the original service manual publication.

