

Description	Group-Page	Description	Group-Page	Description	Group-Page
ABS BRAKE SYSTEM, BLEEDING	5-53	AIR CONDITIONING (A/C) CLUTCH RELAY—PCM OUTPUT	14-40	ANALYZING ROAD TEST	21-215,21-96
ABS SERVICE PRECAUTIONS	5-48	AIR CONDITIONING (A/C) CONTROLS—PCM INPUT	14-119,14-32	ANGLE MEASUREMENT PREPARATION, DRIVELINE	3-4
ABS WARNING LAMP	5-53	AIR CONDITIONING CLUTCH RELAY—PCM OUTPUT	14-124	ANGLE MEASUREMENT, PROPELLER SHAFT	3-5
ABSOLUTE PRESSURE (MAP) SENSOR, MANIFOLD	8D-23,8D-6	AIR CONDITIONING/HEATER, 8W-42	8-1	ANGLE, PROPELLER SHAFT JOINT	3-2
ABSOLUTE PRESSURE (MAP) SENSOR TEST—3.9L/5.2L/5.9L ENGINES, MANIFOLD	14-51	AIR CONTROL (IAC) MOTOR—3.9L/5.2L/5.9L ENGINES, IDLE	14-55,14-61	ANTENNA	8F-10,8F-11,8F-2,8F-6
ABSOLUTE PRESSURE (MAP) SENSOR TEST—8.0L ENGINE, MANIFOLD	14-52	AIR CONTROL (IAC) MOTOR—3.9L/5.2L/5.9L ENGINES—PCM OUTPUT, IDLE	14-42	ANTILOCK BRAKE SYSTEM	5-51
ABSOLUTE PRESSURE (MAP) SENSOR—3.9L/5.2L/5.9L ENGINES, MANIFOLD	14-62	AIR CONTROL (IAC) MOTOR—8.0L ENGINE, IDLE	14-55,14-61	ANTILOCK BRAKE SYSTEM, FOUR WHEEL	5-51
ABSOLUTE PRESSURE (MAP) SENSOR—3.9L/5.2L/5.9L ENGINES—PCM INPUT, MANIFOLD	14-36	AIR CONTROL (IAC) MOTOR—8.0L ENGINE—PCM OUTPUT, IDLE	14-42	ANTI-LOCK BRAKE SYSTEM LAMP	8E-17,8E-7
ABSOLUTE PRESSURE (MAP) SENSOR—8.0L ENGINE, MANIFOLD	14-62	AIR COOLER, CHARGE	11-19	ANTILOCK BRAKES	5-53
ABSOLUTE PRESSURE (MAP) SENSOR—8.0L ENGINE—PCM INPUT, MANIFOLD	14-36	AIR COOLER, INTERCOOLER—CHARGE	11-13	ANTI-LOCK BRAKES, 8W-34 REAR WHEEL	8-1
ABSORBER, SHOCK	2-15,2-24,2-8	AIR COOLER—DIESEL, CHARGE	11-17	ANTI-LOCK BRAKES, 8W-35 ALL-WHEEL	8-1
A/C PERFORMANCE	24-11	AIR DAM, FRONT BUMPER	13-2	ANTILOCK BRAKES, CONTROLLER	5-45,5-52,5-54
ACCELERATOR PEDAL	14-24,14-95	AIR EXHAUSTER, CARGO DOOR	23-38	ANTILOCK BRAKES, REAR WHEEL	5-43
ACCESSORY DRIVE BELT DIAGNOSIS	7-22	AIR FILTER—8.0L V-10 ENGINE, AIR INJECTION PUMP	25-26	ANTILOCK CONTROL ASSEMBLY	5-54
ACCESSORY DRIVE BELTS	7-48	AIR FLOW CHECK PROCEDURE, THROTTLE BODY MINIMUM	14-57	ANTILOCK, REAR WHEEL	5-43,5-48
ACCESSORY DRIVE BELTS, ENGINE	7-5	AIR HEATER ELEMENTS, INTAKE MANIFOLD	14-134	A-PILLAR GRAB HANDLE	23-54
ACCESSORY EQUIPMENT, PTO	21-391	AIR HEATER, INTAKE MANIFOLD	14-120	A-PILLAR TRIM	23-55
ACCUMULATOR: HEATING AND AIR CONDITIONING	24-33,24-4	AIR HEATER RELAY TEST, INTAKE MANIFOLD	14-129	APPLICATION, BULB	8L-16
ACCUMULATOR: TRANSMISSION AND TRANSFER CASE	21-181,21-304	AIR HEATER RELAYS—PCM OUTPUT, INTAKE MANIFOLD	14-121	APPLICATION, CLUTCH COVER	6-2
ACTION TEST MODE, CIRCUIT	25-3	AIR HEATER TEST, INTAKE MANIFOLD	14-128	APPLICATION, CLUTCH DISC	6-1
ACTUATOR, CARGO DOOR INSIDE HANDLE	23-43	AIR IN FUEL SYSTEM	14-77	APPLIQUE, B-PILLAR	23-28
ACTUATOR, FRONT DOOR INSIDE HANDLE	23-34	AIR INJECTION PUMP	25-24,25-25	APPLIQUE, TAILGATE	23-53
ACTUATOR, MODE DOOR VACUUM	24-42	AIR INJECTION PUMP AIR FILTER—8.0L V-10 ENGINE	25-26	AREA LEAKS, INSPECTION FOR REAR SEAL	9-9
ADAPTER	21-394,21-408	AIR INJECTION SYSTEM OPERATION	25-23	ARM AND BLADE, WIPER	8K-2
ADAPTER BRACKET, CAB CHASSIS	13-6	AIR INJECTION SYSTEM—HDC GAS ENGINES	25-23	ARM, LOWER SUSPENSION	2-10,2-16
ADAPTER IDENTIFICATION	21-391	AIR TEMPERATURE SENSOR, INTAKE MANIFOLD: FUEL SYSTEM	14-133	ARM, UPPER SUSPENSION	2-10,2-16
ADAPTER, NV 021	21-409,21-410	AIR TEMPERATURE SENSOR, INTAKE MANIFOLD: IGNITION SYSTEM	8D-13,8D-23,8D-6	ARM, WIPER	8K-7
ADAPTER, NV021 PTO	21-389	AIR TEMPERATURE SENSOR TEST, INTAKE MANIFOLD	14-127	ARMING	8Q-1
ADAPTER OPERATING RANGES AND SHIFTING, PTO	21-391	AIR TEMPERATURE SENSOR—3.9L/5.2L/5.9L ENGINES, INTAKE MANIFOLD	14-55,14-67	ARMS AND PUSH RODS, ROCKER	9-101,9-135,9-67
ADAPTER OVERHAUL	21-395	AIR TEMPERATURE SENSOR—3.9L/5.2L/5.9L ENGINES—PCM INPUT, INTAKE MANIFOLD	14-35	ASD AND FUEL PUMP RELAYS	14-51
ADAPTER SERVICE DIAGNOSIS	21-392	AIR TEMPERATURE SENSOR—8.0L ENGINE, INTAKE MANIFOLD	14-56,14-67	ASH RECEIVER	8E-31
ADAPTER SERVICE, PTO	21-392	AIR TEMPERATURE SENSOR—8.0L ENGINE—PCM INPUT, INTAKE MANIFOLD	14-35	ASSEMBLY, ANTILOCK CONTROL	5-54
ADDING ADDITIONAL COOLANT—ROUTINE	7-26	AIR TEMPERATURE SENSOR—PCM INPUT, INTAKE MANIFOLD	14-119	ASSEMBLY, AXLE	3-24
ADDITIONAL COOLANT—ROUTINE, ADDING	7-26	AIR TESTING TRANSMISSION CLUTCH AND BAND OPERATION	21-100,21-219	ASSEMBLY, CYLINDER HEAD	9-117
ADJUSTER AND MOTOR, POWER LUMBAR	8R-2,8R-3,8R-5	AIRBAG CONTROL MODULE	8M-3,8M-9	ASSEMBLY, ENGINE	9-133,9-177,9-31,9-65,9-99
ADJUSTER AND MOTORS, POWER SEAT	8R-1,8R-2,8R-4	AIRBAG DISARM SWITCH, PASSENGER	8M-3,8M-8	ASSEMBLY, FINAL	3-104,3-40,3-74
ADJUSTER—QUAD CAB, FRONT SEAT TRACK	23-14	AIRBAG INDICATOR LAMP	8E-16,8E-7	ASSEMBLY, INSTRUMENT PANEL	8E-35
ADJUSTMENT AT AXLE WITH LEAF SPRINGS	3-12	AIRBAG MODULE	8M-2,8M-5	CONNECTING ROD	9-109,9-118,9-147,9-190,9-202,9-208,9-23,9-41,9-58,9-75,9-83,9-92
ADJUSTMENT, CENTER BEARING	3-13	AIRBAG SYSTEM	8M-1,8M-4	ASSEMBLY, TIMING PIN HOUSING	9-185
ADJUSTMENT, COMPASS VARIATION	8V-4	AIRBAG SYSTEM, 8W-43	8-1	ASSIST HANDLE, OVERHEAD	23-64
ADJUSTMENT, FRONT BAND	21-308	AIRBAG SYSTEMS	8M-1	AUDIO SYSTEM	8F-1,8F-3
ADJUSTMENT, GEARSHIFT LINKAGE	21-185,21-308	AIRBAG TRIM COVER AND HORN SWITCH, DRIVER SIDE	8M-7	AUDIO SYSTEM, 8W-47	8-1
ADJUSTMENT, HEADLAMP	8L-5	ALERT, TAMPER	8Q-2	AUTO SHUTDOWN (ASD) RELAY—PCM OUTPUT	14-40
ADJUSTMENT, IDLE SPEED	14-86	ALIGNMENT	2-6	AUTOMATIC BELT TENSIONER	7-51,7-7
ADJUSTMENT, REAR BAND	21-309	ALIGNMENT, FOG LAMP	8L-6	AUTOMATIC DAY/NIGHT MIRROR	8T-4,8T-5
ADJUSTMENT, SHIFT LINKAGE	21-355,21-386	ALIGNMENT, HEADLAMP	8L-4	AUTOMATIC DAY/NIGHT MIRROR SYSTEM	8T-4
ADJUSTMENT, TRANSMISSION THROTTLE VALVE CABLE	21-184,21-307	ALIGNMENT IFS SUSPENSION	2-3	AUTOMATIC SHUTDOWN (ASD) RELAY; FUEL SYSTEM	14-58
ADJUSTMENT, VALVE CLEARANCE	9-210	ALIGNMENT LINK/COIL SUSPENSION	2-4	AUTOMATIC SHUTDOWN (ASD) RELAY; IGNITION SYSTEM	8D-19
ADJUSTMENT, WASTEGATE	11-19	ALIGNMENT PREPARATION, HEADLAMP	8L-4	AUTOMATIC SHUTDOWN (ASD) RELAY SENSE—PCM INPUT	14-32
ADJUSTMENT—DIESEL ENGINE, THROTTLE LINKAGE	14-93	ALIGNMENT, SPECIAL TOOLS—HEADLAMP	8L-6	AUTOMATIC SHUTDOWN (ASD) RELAY TEST; FUEL SYSTEM	14-127
ADJUSTMENTS, BAND	21-185	ALIGNMENT, WHEEL	2-1	AUTOMATIC SHUTDOWN (ASD) RELAY TEST; IGNITION SYSTEM	8D-7
AFTERMARKET REPAIR PRODUCTS	23-5	ALL-WHEEL ANTI-LOCK BRAKES, 8W-35	8-1	AUTOMATIC SHUTDOWN (ASD) RELAY—3.9L/5.2L/5.9L ENGINES	8D-4
AIR BLEED PROCEDURE	14-86	ALUMINUM THREAD REPAIR	21-117,21-236	AUTOMATIC SHUTDOWN (ASD) RELAY—8.0L V-10 ENGINE	8D-4
AIR CLEANER HOUSING/AIR CLEANER ELEMENT	14-132	AMBIENT TEMPERATURE SENSOR	8V-8	AUTOMATIC SHUTDOWN (ASD) RELAY—PCM OUTPUT	14-124
AIR CLEANER HOUSING/AIR CLEANER ELEMENT (FILTER)—3.9L/5.2L/5.9L ENGINES	14-64	AMPERAGE TEST, FUEL PUMP	14-9	AUTOMATIC SHUTDOWN (ASD) SENSE—PCM INPUT	14-119
AIR CLEANER HOUSING/AIR CLEANER ELEMENT (FILTER)—8.0L V-10 ENGINE	14-65	ANALYSIS, GEAR CONTACT PATTERN	3-118,3-150,3-48,3-82	AUTOMATIC TRANSMISSION, 4WD FLOOR SHIFT BOOT—	23-62
AIR CONDITIONER CONTROL, HEATER	24-2	ANALYSIS, STALL TEST	21-100,21-219	AUTOMATIC TRANSMISSION DIAGNOSIS	21-214,21-95
AIR CONDITIONER, HEATER	24-2			AUTOMATIC TRANSMISSION OIL COOLERS—DIESEL ENGINE	7-7
				AUTOMATIC TRANSMISSION OIL COOLERS—GAS ENGINES	7-6
				AUTOMATIC TRANSMISSION—46/47RE	21-206
				AUTOMATIC TRANSMISSION—42RE	21-88
				AUXILIARY TRANSMISSION OIL COOLER	7-6
				AUXILIARY TRANSMISSION OIL COOLER—3.9L/5.2L/5.9L ENGINES	7-43

Description	Group-Page	Description	Group-Page	Description	Group-Page
AUXILIARY TRANSMISSION OIL COOLER—5.9L DIESEL ENGINE	7-45	BATTERY VOLTAGE—PCM INPUT	14-119,14-32	BLEEDING, BRAKE	5-15
AUXILIARY TRANSMISSION OIL COOLER—8.0L ENGINE	7-44	BEAM INDICATOR LAMP, HEADLAMP HIGH	8E-20,8E-9	BLEEDING, HYDRAULIC BOOSTER	5-15
AXLE, 248 AND 267 RBI	3-120,3-89	BEARING, 9 1/4 HD AXLE SEAL	3-66	BLEEDING, MASTER CYLINDER	5-14
AXLE, 286 RBI	3-124	BEARING, 9 1/4 LD AXLE SEAL	3-66	BLEEDING, RWAL BRAKE	5-48
AXLE, 9 1/4 INCH	3-84	BEARING ADJUSTMENT, CENTER	3-13	BLENDS, GASOLINE/OXYGENATE	14-1
AXLE, 9 1/4 REAR	3-57	BEARING AND AXLE SHAFT, HUB	3-28	BLOCK, 8W-12 JUNCTION	8-1
AXLE ASSEMBLY	3-24	BEARING AND CRANKSHAFT JOURNAL CLEARANCE, CONNECTING ROD	9-172	BLOCK CUP PLUG REPLACEMENT, CYLINDER	9-172
AXLE, BALL STUDS—216 FBI	3-30	BEARING, CAMSHAFT	9-145	BLOCK, CYLINDER	9-114,9-119,9-152,9-154, 9-208,9-49,9-51,9-83,9-85
AXLE, BALL STUDS—248 FBI	3-31	BEARING, CENTER	3-2,3-8	BLOCK HEATER—DIESEL ENGINE	7-47
AXLE BEARINGS, HUB	3-131,3-96	BEARING CLEARANCE, MAIN	9-175	BLOCK HEATER—GASOLINE ENGINES	7-47
AXLE COMPONENTS	3-112,3-144,3-42	BEARING, FRONT WHEEL	5-28	BLOCK HEATERS	7-9
AXLE, DIFFERENTIAL SIDE BEARINGS— 216 FBI	3-33	BEARING NOISE	3-126,3-17,3-60,3-91	BLOCK, JUNCTION	8E-36,8E-4
AXLE IDENTIFICATION	3-15,3-59	BEARING, OUTPUT SHAFT FRONT	21-126, 21-245	BLOCK REFACING, CYLINDER	9-169
AXLE PINION GEAR DEPTH, 9 1/4	3-79	BEARING, OUTPUT SHAFT REAR	21-125,21-244	BLOCKER, STEERING COLUMN OPENING COVER AND KNEE	8E-30
AXLE, PINION SHAFT SEAL—216 FBI	3-25	BEARING, PILOT	6-16	BLOWER MOTOR	24-17,24-38,24-5
AXLE, PINION SHAFT SEAL—248 FBI	3-26	BEARING PRELOAD AND GEAR BACKLASH, DIFFERENTIAL	3-115,3-147,3-45, 3-81	BLOWER MOTOR RELAY	24-19,24-39,24-5
AXLE, REAR	3-130,3-64,3-95	BEARING, RELEASE	6-15	BLOWER MOTOR RESISTOR	24-19,24-39,24-5
AXLE SEAL AND BEARING, 9 1/4 HD	3-66	BEARINGS, CAMSHAFT	9-107,9-40,9-73	BLOWER MOTOR SWITCH	24-20,24-5
AXLE SEAL AND BEARING, 9 1/4 LD	3-66	BEARINGS, CONNECTING ROD	9-28	B—PILLAR TRIM	23-55
AXLE SHAFT	3-131,3-65,3-96	BEARINGS, CRANKSHAFT MAIN	9-109,9-148, 9-29,9-40,9-63,9-73	BODY CODE PLATE	Intro.-1
AXLE SHAFT, HUB BEARING	3-28	BEARINGS, DIFFERENTIAL SIDE	3-100,3-135, 3-70	BODY COMPONENT SERVICE	23-20
AXLE SHAFT, INTERMEDIATE	3-35	BEARINGS, DISC BRAKE ROTOR – WITH TAPERED	5-24	BODY DIAGNOSTIC PROCEDURES	23-2
AXLE SHAFT OIL SEAL	3-35	BEARINGS, DISC BRAKE ROTOR WITH 5 STUDS AND HUB	5-25	BODY MINIMUM AIR FLOW CHECK PROCEDURE, THROTTLE	14-57
AXLE SHAFT—CARDAN U-JOINT	3-28	BEARINGS, FITTING CONNECTING ROD	9-131, 9-63,9-97	BODY SIDE MOLDINGS	23-47
AXLE SHIFT MOTOR	3-27,3-41	BEARINGS, FITTING CRANKSHAFT MAIN	9-131, 9-97	BODY, VALVE	21-122,21-126,21-179,21-186, 21-241,21-245,21-302,21-309
AXLE, STEERING KNUCKLE—216 FBI	3-29	BEARINGS, HUB AND AXLE	3-131,3-96	BODY VENT	23-46
AXLE, STEERING KNUCKLE—248 FBI	3-29	BEARINGS, WHEEL	2-11,2-12	BODY—3.9L/5.2L/5.9L ENGINES, THROTTLE	14-44,14-58
AXLE VACUUM SHIFT MOTOR DIAGNOSIS	3-21	BEARINGS—216 FBI AXLE, DIFFERENTIAL SIDE	3-33	BODY—8.0L ENGINE, THROTTLE	14-44,14-59
AXLE WITH LEAF SPRINGS, ADJUSTMENT AT	3-12	BEARINGS—248 AXLES, DIFFERENTIAL SIDE	3-34	BOOSTER BLEEDING, HYDRAULIC	5-15
AXLES, 216 AND 248 FBI	3-15,3-50,3-51	BELT BUCKLE, REAR SEAT	23-58	BOOSTER, FLUSHING HYDRAULIC	5-14
AXLES, 248 AND 267 RBI	3-120,3-89	BELT BUCKLE, SEAT	23-58	BOOSTER, HYDRAULIC	5-11,5-20
AXLES, 286 RBI	3-152	BELT CONTROL SYSTEM, STRUCTURAL SEAT	8M-13	BOOSTER, HYDRAULIC BRAKE	5-3
AXLES, 9 1/4	3-57,3-79,3-85	BELT CONTROL SYSTEM TEST MODE, SEAT	8M-14	BOOSTER, MASTER CYLINDER/POWER	5-10
AXLES, DIFFERENTIAL SIDE BEARINGS—248	3-34	BELT CONTROL SYSTEMS, SEAT	8M-13	BOOSTER, POWER BRAKE	5-2
AXLES, FRONT	3-19	BELT DIAGNOSIS, ACCESSORY DRIVE	7-22	BOOSTER, VACUUM BRAKE	5-20
BACK, BENCH SEAT	23-11	BELT REMINDER LAMP, SEAT	8E-10,8E-22	BOOT—AUTOMATIC TRANSMISSION, 4WD FLOOR SHIFT	23-62
BACK COVER, BENCH SEAT	23-12	BELT RETRACTOR LATCH SOLENOID, SEAT	8M-14,8M-16	BOOT—MANUAL TRANSMISSION, 4WD FLOOR SHIFT	23-61
BACK COVER—QUAD CAB, FRONT SEAT	23-17	BELT RETRACTOR—CLUB/QUAD CAB, FRONT SEAT	23-57	BOOT—MANUAL TRANSMISSION, FLOOR SHIFT	23-61
BACK COVER—STD CAB, SPLIT BENCH SEAT	23-13	BELT RETRACTOR—CONVENTIONAL CAB, SEAT	23-57	BORE REPAIR, CAM	9-171
BACKLASH, DIFFERENTIAL BEARING PRELOAD AND GEAR	3-115,3-147,3-45,3-81	BELT SWITCH, DRIVER SEAT	8U-2,8U-5	BORE REPAIR, CYLINDER	9-169
BACKLITE	23-8	BELT TENSIONER, AUTOMATIC	7-51,7-7	BORES, HONING CYLINDER	9-5
BACKLITE LATCH AND KEEPER, SLIDING	23-10	BELT TENSION—ALL ENGINES	7-5	BORES—DE-GLAZE, CYLINDER	9-168
BACKLITE, SLIDING	23-9	BELT WEATHERSTRIP, FRONT DOOR INNER	23-34	BOX, CARGO	23-53
BACK—QUAD CAB, FRONT SEAT	23-15	BELT WEATHERSTRIP, FRONT DOOR OUTER	23-34	BOX COMPONENTS, GLOVE	8E-33
BACK—STD CAB, SPLIT BENCH SEAT	23-13	BELTS, ACCESSORY DRIVE	7-48	BOX, GLOVE	8E-33
BACK-UP LAMP BULB—CAB CHASSIS, TAIL, STOP, TURN SIGNAL	8L-9	BELTS, ENGINE ACCESSORY DRIVE	7-5	BOX LAMP AND SWITCH, GLOVE	8E-34
BACK-UP LAMP BULB—PICKUP, TAIL, STOP, TURN SIGNAL	8L-8	BENCH SEAT	23-58	BOX LATCH STRIKER, GLOVE	8E-34
BACKUP LAMP SWITCH REPLACEMENT	21-47	BENCH SEAT BACK	23-11	BOX OPENING UPPER TRIM STRIP, GLOVE	8E-34
BACK-UP LAMPS—CHASSIS CAB, TAIL, STOP, TURN SIGNAL	8L-12	BENCH SEAT BACK COVER	23-12	B-PILLAR APPLIQUE	23-28
BACK-UP LAMPS—PICKUP, TAIL, STOP, TURN SIGNAL	8L-12	BENCH SEAT BACK COVER—STD CAB, SPLIT	23-13	B-PILLAR SECONDARY SEAL	23-36
BALANCE, TIRE AND WHEEL	22-10	BENCH SEAT CUSHION COVER	23-12	BRACKET, CAB CHASSIS ADAPTER	13-6
BALL JOINT, LOWER	2-11,2-8	BENCH SEAT CUSHION COVER—STD CAB, SPLIT	23-14	BRACKET, REARVIEW MIRROR SUPPORT	23-63
BALL JOINT, UPPER	2-11,2-8	BENCH SEAT TRACK	23-11	BRAKE, BASE	5-41
BALL STUDS—216 FBI AXLE	3-30	BENCH SEAT TRACK-STD CAB, SPLIT	23-12	BRAKE BLEEDING	5-15
BALL STUDS—248 FBI AXLE	3-31	BENCH SEAT—CLUB/QUAD CAB, SPLIT	23-59	BRAKE BLEEDING, RWAL	5-48
BAND ADJUSTMENT, FRONT	21-308	BENCH SEAT—CONVENTIONAL CAB, SPLIT	23-59	BRAKE BOOSTER, HYDRAULIC	5-3
BAND ADJUSTMENT, REAR	21-309	BETTS CONNECTORS, TERMINAL/ CONNECTOR REPAIR—THOMAS	8-11	BRAKE BOOSTER, POWER	5-2
BAND ADJUSTMENTS	21-185	BEZEL, CLUSTER	8E-26	BRAKE BOOSTER, VACUUM	5-20
BAND OPERATION, AIR TESTING TRANSMISSION CLUTCH	21-100,21-219	BIN, CUP HOLDER OR STORAGE	8E-32	BRAKE, BRAKE SHOES – 11 INCH	5-28
BAR, STABILIZER	2-10,2-17,2-24	BLADE, WIPER	8K-7	BRAKE, BRAKE SHOES – 13 INCH	5-30
BAR, TRACK	2-15,2-18	BLADE, WIPER ARM	8K-2	BRAKE CABLE, FRONT PARKING	5-32
BASE BRAKE	5-41	BLEED PROCEDURE, AIR	14-86	BRAKE CABLE, REAR PARK	5-33
BASE BRAKE SYSTEM	5-1,5-7	BLEEDING ABS BRAKE SYSTEM	5-53	BRAKE CABLE TENSIONER, PARKING	5-40
BASE BRAKES	5-42			BRAKE CALIPER, DISC	5-21,5-35
BASE COAT/CLEAR COAT FINISH	23-4			BRAKE DRUM	5-13
BATTERY	8A-15,8A-18,8A-2,8A-3			BRAKE DRUM MACHINING	5-16
BATTERY CHARGING	8A-13			BRAKE FLUID	5-41
BATTERY MOUNTING	8A-3			BRAKE FLUID CONTAMINATION	5-14
BATTERY REPLACEMENT, REMOTE KEYLESS ENTRY TRANSMITTER	8P-7			BRAKE FLUID LEVEL	5-14
BATTERY SIZE AND RATINGS	8A-2			BRAKE HOSES AND LINES	5-7
BATTERY TEMPERATURE SENSOR	8C-2,8C-5,8C-7			BRAKE LINE	5-16
BATTERY TEMPERATURE SENSOR—PCM INPUT	14-119,14-32			BRAKE LINE AND HOSES	5-14

Description	Group-Page	Description	Group-Page	Description	Group-Page
BRAKE ROTOR – WITH TAPERED BEARINGS, DISC	5-24	CAB, FRONT SEAT BELT RETRACTOR—CLUB/QUAD	23-57	CAP-TO-FILLER NECK SEAL—PRESSURE RELIEF CHECK, RADIATOR	7-24
BRAKE ROTOR WITH 5 STUDS AND HUB BEARINGS, DISC	5-25	CAB, FRONT SEAT CUSHION COVER—QUAD	23-18	CARDAN JOINT, DOUBLE	3-9
BRAKE ROTOR WITH 8 STUDS AND HUB/BEARING, DISC	5-25	CAB, FRONT SEAT CUSHION—QUAD	23-17	CARDAN U-JOINT	3-42
BRAKE SHOES, DISC	5-22	CAB, FRONT SEAT RISER—QUAD	23-14	CARDAN UNIVERSAL JOINT, SINGLE	3-8
BRAKE SHOES – 11 INCH BRAKE	5-28	CAB, FRONT SEAT TRACK ADJUSTER—QUAD	23-14	CARGO BOX	23-53
BRAKE SHOES – 13 INCH BRAKE	5-30	CAB, QUARTER TRIM PANEL—CLUB	23-56	CARGO DOOR	23-39,23-66
BRAKE SUPPORT PLATE	5-32	CAB, QUARTER VENT WINDOW—CLUB	23-46	CARGO DOOR AIR EXHAUSTER	23-38
BRAKE SWITCH—PCM INPUT	14-119,14-33	CAB, REAR SEAT—CLUB	23-60	CARGO DOOR DOOR CHECK	23-40
BRAKE SYSTEM	5-2	CAB, SEAT BELT RETRACTOR—CONVENTIONAL	23-57	CARGO DOOR EXHAUST VENT	23-39
BRAKE SYSTEM, ANTILOCK	5-51	CAB, SPLIT BENCH SEAT BACK COVER—STD	23-13	CARGO DOOR HINGE	23-39
BRAKE SYSTEM, BASE	5-1,5-7	CAB, SPLIT BENCH SEAT BACK—STD	23-13	CARGO DOOR INSIDE HANDLE ACTUATOR	23-43
BRAKE SYSTEM, BLEEDING ABS	5-53	CAB, SPLIT BENCH SEAT CUSHION COVER—STD	23-14	CARGO DOOR LOWER LATCH	23-42
BRAKE SYSTEM, FOUR WHEEL ANTILOCK	5-51	CAB, SPLIT BENCH SEAT TRACK-STD	23-12	CARGO DOOR LOWER STRIKER	23-42
BRAKE SYSTEM LAMP, ANTI-LOCK	8E-17,8E-7	CAB, SPLIT BENCH SEAT—CLUB/QUAD	23-59	CARGO DOOR PRIMARY SEAL	23-44
BRAKE WARNING LAMP	8E-17,8E-7	CAB, SPLIT BENCH SEAT—CONVENTIONAL	23-59	CARGO DOOR RELEASE CABLE	23-40
BRAKE WARNING LAMP, RED	5-10,5-2	CAB, TAIL, STOP, TURN SIGNAL AND BACK-UP LAMPS—CHASSIS	8L-12	CARGO DOOR SECONDARY SEAL	23-44
BRAKE WARNING LAMPS	5-47	CAB-CHASSIS CASTER CORRECTION MEASUREMENT	2-5	CARGO DOOR SHUTFACE HANDLE	23-40
BRAKES, 8W-34 REAR WHEEL ANTI-LOCK	8-1	CABLE ADJUSTMENT, TRANSMISSION THROTTLE VALVE	21-184,21-307	CARGO DOOR TRIM PANEL	23-37
BRAKES, 8W-35 ALL-WHEEL ANTI-LOCK	8-1	CABLE, CARGO DOOR RELEASE	23-40	CARGO DOOR UPPER LATCH	23-41
BRAKES, ANTILOCK	5-53	CABLE, FRONT PARKING BRAKE	5-32	CARGO DOOR UPPER STRIKER	23-42
BRAKES, BASE	5-42	CABLE, GEARSHIFT LINKAGE AND THROTTLE	21-215,21-96	CARGO DOOR VENT WINDOW	23-43
BRAKES, CONTROLLER ANTILOCK	5-45,5-52,5-54	CABLE, HOOD RELEASE	23-23	CARGO DOOR VENT WINDOW WEATHERSTRIP	23-43
BRAKES, DRUM	5-6	CABLE ORDER—8.0L V-10 ENGINE, SPARK PLUG	8D-28	CARGO DOOR WATERDAM	23-38
BRAKES, FRONT DISC	5-6	CABLE, REAR PARK BRAKE	5-33	CARGO LAMP	8L-12
BRAKES, PARKING	5-7	CABLE RESISTANCE, SPARK PLUG	8D-29	CARGO LAMP BULB	8L-8
BRAKES, REAR WHEEL ANTILOCK	5-43	CABLE, SERVO	8H-2,8H-8	CARPET OR MAT, FLOOR	23-62
BREAKER, CIRCUIT; POWER SEAT SYSTEMS	8R-2	CABLE, TAILGATE CHECK	23-50	CARPET OR MAT—CLUB CAB, FLOOR	23-62
BREAKER, CIRCUIT; POWER WINDOW SYSTEMS	8S-2	CABLE, TEMPERATURE CONTROL	24-40,24-48	CART, TORQUE	19-27
BREATHER/FILTER, CRANKCASE	25-18	CABLE TENSIONER, PARKING BRAKE	5-40	CASE CLEANING AND INSPECTION, TRANSFER	21-352,21-384
BUCKLE, REAR SEAT BELT	23-58	CABLE, THROTTLE	14-114,14-24	CASE IDENTIFICATION, TRANSFER	21-330,21-360
BUCKLE, SEAT BELT	23-58	CABLES, SPARK PLUG	8D-13,8D-15,8D-3	CASE, NV231HD AND NV241LD TRANSFER	21-330
BUFFING, AND POLISHING, WET SANDING	23-4	CALIBRATION, COMPASS	8V-5	CASE, NV241HD TRANSFER	21-358
BUILT-IN TEST INDICATOR	8A-5	CALIPER	5-38	CASE SKID PLATE, TRANSFER	13-6
BULB APPLICATION	8L-16	CALIPER, DISC BRAKE	5-21,5-35	CASE, TRANSFER	21-333,21-336,21-362,21-364
BULB, CARGO LAMP	8L-8	CAM BORE REPAIR	9-171	CASTER CORRECTION MEASUREMENT, CAB-CHASSIS	2-5
BULB, CENTER HIGH MOUNTED STOP LAMP (CHMSL)	8L-8	CAM/OVERDRIVE PISTON RETAINER, OVERRUNNING CLUTCH	21-151,21-274	CATALYTIC CONVERTER	11-1,11-19
BULB, CLUSTER	8E-28	CAMSHAFT	9-106,9-144,9-187,9-206,9-38,9-72	CATALYTIC CONVERTER—DIESEL	11-12
BULB, DOME LAMP	8L-9	CAMSHAFT AND CRANKSHAFT POSITION SENSORS	14-54	CATALYTIC CONVERTERS	11-5
BULB, LICENSE PLATE LAMP	8L-9	CAMSHAFT BEARING	9-145	CATCH, HOOD SAFETY	23-23
BULB, OVERHEAD CONSOLE READING LAMP	8L-9	CAMSHAFT BEARINGS	9-107,9-40,9-73	CAUSES, COMMON PROBLEM	21-46
BULB, READING AND COURTESY LAMP	8V-7	CAMSHAFT PLUGS, ENGINE CORE OIL	9-45,9-79	CAUSES OF BURNT FLUID	21-210,21-91
BULB, ROOF CLEARANCE LAMP	8L-8	CAMSHAFT POSITION SENSOR	14-63	CAUTIONS, AND WARNINGS, NOTES	8-7
BULB SERVICE, LAMP	8L-7	CAMSHAFT POSITION SENSOR TEST—8.0L V-10 ENGINE	8D-12	CAUTIONS, SERVICE WARNINGS & CCD BUS (+/-) CIRCUITS-PCM OUTPUTS	5-2,14-40
BULB, UNDERHOOD LAMP	8L-9	CAMSHAFT POSITION SENSOR—3.9L/5.2L/5.9L ENGINES	8D-11,8D-20,8D-6	CENTER BEARING	3-2,3-8
BULB—CAB CHASSIS, TAIL, STOP, TURN SIGNAL AND BACK-UP LAMP	8L-9	CAMSHAFT POSITION SENSOR—3.9L/5.2L/5.9L ENGINES—PCM INPUT	14-33	CENTER BEARING ADJUSTMENT	3-13
BULB—PICKUP, TAIL, STOP, TURN SIGNAL AND BACK-UP LAMP	8L-8	CAMSHAFT POSITION SENSOR—8.0L ENGINE—PCM INPUT	14-33	CENTER HIGH MOUNTED STOP LAMP (CHMSL)	8L-11
BULBS, REAR IDENTIFICATION (ID) LAMP	8L-9	CAMSHAFT POSITION SENSOR—8.0L V-10 ENGINE	8D-21,8D-6	CENTER HIGH MOUNTED STOP LAMP (CHMSL) BULB	8L-8
BULBS, SIDE IDENTIFICATION (ID) LAMP	8L-8	CANISTER, EVAPORATIVE (EVAP)	25-15,25-20	CENTER SEAT/CONSOLE	23-60
BUMPER AIR DAM, FRONT	13-2	CANISTER PURGE SOLENOID, DUTY CYCLE EVAP; EMISSION CONTROL SYSTEMS	25-15,25-20	CENTERING, CLOCKS/SPRING	8M-11
BUMPER, FRONT	13-1	CANISTER PURGE SOLENOID, DUTY CYCLE EVAP; FUEL SYSTEM	14-63	CENTRAL TIMER MODULE; CHIME/BUZZER WARNING SYSTEMS	8U-1,8U-3
BUMPER LOWER FASCIA, FRONT	13-2	CAP, FUEL TANK FILLER TUBE	14-23,14-6	CENTRAL TIMER MODULE; HORN SYSTEMS	8G-2
BUMPER, REAR	13-3	CAP, RADIATOR	7-54	CENTRAL TIMER MODULE; INSTRUMENT PANEL SYSTEMS	8E-31,8E-4
BUMPER, TAILGATE SLAM	23-52	CAP, RADIATOR PRESSURE	7-10,7-3	CENTRAL TIMER MODULE; POWER LOCK SYSTEMS	8P-2,8P-5
BUMPER UPPER FASCIA, FRONT	13-1	CAPABILITY, PTO	21-360	CENTRAL TIMER MODULE; VEHICLE THEFT/SECURITY SYSTEMS	8Q-2
BUMPERS	13-1	CAPACITIES, COOLANT	7-55	CENTRAL TIMER MODULE; WIPER AND WASHER SYSTEMS	8K-3
BURNT FLUID, CAUSES OF	21-210,21-91	CAPACITIES, FLUID	0-2	CENTRAL TIMER MODULE, 8W-45	8-1
BUS (+/-) CIRCUITS-PCM OUTPUTS, CCD	14-40	CAPACITY, LUBRICANT LEVEL	21-46	CERTIFICATION LABEL, VEHICLE SAFETY	Intro-1
BUSHING AND SEAL, EXTENSION HOUSING	21-364	CAPACITY TEST, FUEL PUMP	14-8	CHAIN AND TENSIONER, TIMING	9-37
BUSHING AND SEAL, REAR RETAINER	21-336	CAPACITY, TRANSMISSION LUBRICANT LEVEL	21-1	CHAIN COVER OIL SEAL (COVER NOT REMOVED), TIMING	9-143
BUSHING, DISTRIBUTOR DRIVE SHAFT	9-35,9-74	CAPACITY—DIESEL ENGINE, FUEL TANK	14-115	CHAIN COVER OIL SEAL (COVER REMOVED), TIMING	9-143
BUSHING, EXTENSION/ADAPTER HOUSING SEAL	21-53	CAP—3.9L/5.2L/5.9L ENGINES, DISTRIBUTOR	8D-10	CHAIN COVER, TIMING	9-104,9-140,9-36,9-70
BUSHING, OVERDRIVE HOUSING	21-125,21-244	CAPS, PRESSURE TESTING RADIATOR	7-25	CHAIN STRETCH, MEASURING TIMING	9-129,9-61,9-95
BUSHING, REAR HOUSING YOKE	21-7			CHAIN STRETCH, TIMING	9-27
BUSHINGS, SPRING EYE	2-26			CHAIN, TIMING	9-105,9-142,9-71
BYPASS HOSE, WATER PUMP	7-35			CHANGE, LUBRICANT	3-130,3-24,3-64,3-95
BYPASS VALVE, OIL FILTER	9-197			CHANNELS, FRONT DOOR GLASS RUN LOWER	23-35
CAB CHASSIS ADAPTER BRACKET	13-6			CHARACTERISTICS, RWAL PERFORMANCE	5-43
CAB, EZ ENTRY SEAT TRACK—CLUB	23-15				
CAB, FLOOR CARPET OR MAT—CLUB	23-62				
CAB, FRONT SEAT BACK COVER—QUAD	23-17				
CAB, FRONT SEAT BACK—QUAD	23-15				

Description	Group-Page	Description	Group-Page	Description	Group-Page
CHARGE AIR COOLER	11-19	CLEANING TIRES	22-6	COIL—3.9L/5.2L/5.9L ENGINES, TESTING	
CHARGE AIR COOLER—DIESEL	11-17	CLEANING/REVERSE FLUSHING,		FOR SPARK AT	8D-7
CHARGE, REFRIGERANT SYSTEM	24-24	COOLING SYSTEM	7-27	COIL—3.9L/5.2L/5.9L ENGINES—PCM	
CHARGING, BATTERY	8A-13	CLEANUP PROCEDURE	8M-5	OUTPUT, IGNITION	14-42
CHARGING SYSTEM	8C-2	CLEARANCE ADJUSTMENT, VALVE	9-210	COILS—8.0L ENGINE—PCM OUTPUTS,	
CHARGING SYSTEM, 8W-20	8-1	CLEARANCE, CONNECTING ROD		IGNITION	14-43
CHARGING SYSTEM, ON-BOARD		BEARING AND CRANKSHAFT JOURNAL	9-172	COLD CRANKING TEST	8B-3
DIAGNOSTIC TEST	8C-6	CLEARANCE LAMP BULB, ROOF	8L-8	COLUMN OPENING COVER AND KNEE	
CHARGING SYSTEM OPERATION	8C-1	CLEARANCE LAMP, ROOF	8L-11	BLOCKER, STEERING	8E-30
CHARGING SYSTEM RESISTANCE TESTS	8C-3	CLEARANCE, MAIN BEARING	9-175	COLUMN SHIFT INTERLOCK	8D-28
CHART, TORQUE; BRAKES	5-42,5-50,5-56	CLEARANCE, SIDE GEAR	3-84	COLUMN, STEERING	19-22,19-23
CHART, TORQUE; CHARGING SYSTEM	8C-8	CLOCKSPRING	8M-10,8M-3	COMBINATION FLASHER	8J-1,8J-5
CHART, TORQUE; EMISSION CONTROL		CLOCKSPRING CENTERING	8M-11	COMBINATION VALVE	5-12,5-18,5-4
SYSTEMS	25-22,25-26,25-34	CLOSURE PANEL TRIM, REAR	23-56	COMBUSTION PRESSURE LEAKAGE	
CHART, TORQUE; FUEL SYSTEM	14-26,14-68	CLUB, FRONT SEAT RECLINER—QUAD	23-16	TEST, CYLINDER	9-8
CHART, TORQUE; IGNITION SYSTEM	8D-29	CLUSTER, 8W-40 INSTRUMENT	8-1	COMMON PROBLEM CAUSES	21-46
CHART, TORQUE; SPEED CONTROL		CLUSTER BEZEL	8E-26	COMPASS	8V-1,8V-8
SYSTEM	8H-10	CLUSTER BULB	8E-28	COMPASS AND THERMOMETER	
CHART, TORQUE; STEERING	19-10,19-20,19-25,	CLUSTER COMPONENTS	8E-27	DISPLAY MODULE	8V-2,8V-7
	19-29	CLUSTER ILLUMINATION LAMP	8E-18,8E-8	COMPASS CALIBRATION	8V-5
CHART, TORQUE; SUSPENSION	2-12,2-22,2-26	CLUSTER, INSTRUMENT; CHIME/BUZZER		COMPASS DEMAGNETIZING	8V-5
CHART, TORQUE; TIRES AND WHEELS	22-11	WARNING SYSTEMS	8U-2,8U-5	COMPASS VARIATION ADJUSTMENT	8V-4
CHART—DIESEL ENGINE, TORQUE	14-135	CLUSTER, INSTRUMENT; INSTRUMENT		COMPONENTS—IN VEHICLE SERVICE,	
CHART—DIESEL ENGINES, TORQUE	14-116	PANEL SYSTEMS	8E-12,8E-2,8E-26	CYLINDER HEAD	9-32
CHARTS, DIAGNOSTIC	6-9	CLUTCH AND BAND OPERATION, AIR		COMPRESSION PRESSURE TEST,	
CHARTS—RE TRANSMISSION,		TESTING TRANSMISSION	21-100,21-219	CYLINDER	9-7
DIAGNOSIS TABLES	21-101,21-220	CLUTCH CAM/OVERDRIVE PISTON		COMPRESSOR	24-20,24-27,24-6
CHASSIS ADAPTER BRACKET, CAB	13-6	RETAINER, OVERRUNNING	21-151,21-274	COMPRESSOR CLUTCH	24-28,24-6
CHASSIS, TAIL, STOP, TURN SIGNAL		CLUTCH COIL, COMPRESSOR	24-20	COMPRESSOR CLUTCH COIL	24-20
AND BACK-UP LAMP BULB—CAB	8L-9	CLUTCH COMPONENTS	6-1	COMPRESSOR CLUTCH RELAY	24-21,24-32,24-6
CHECK CABLE, TAILGATE	23-50	CLUTCH, COMPRESSOR	24-28,24-6	CONDENSER	24-34,24-6
CHECK, CARGO DOOR DOOR	23-40	CLUTCH CONTAMINATION	6-4	CONDITIONER CONTROL, HEATER AND	
CHECK, FLUID LEVEL	21-115,21-234	CLUTCH COVER AND DISC	6-11	AIR	24-2
CHECK GAUGES LAMP	8E-17,8E-8	CLUTCH COVER APPLICATION	6-2	CONDITIONER, HEATER AND AIR	24-2
CHECK, OIL PUMP VOLUME	21-116,21-235	CLUTCH DISC APPLICATION	6-1	CONDITIONING (A/C) CLUTCH	
CHECK PROCEDURE, THROTTLE BODY		CLUTCH ENGAGEMENT, CONVERTER	21-214,	RELAY—PCM OUTPUT, AIR	14-40
MINIMUM AIR FLOW	14-57		21-95	CONDITIONING (A/C) CONTROLS—PCM	
CHECK, RADIATOR CAP-TO-FILLER NECK		CLUTCH, FRONT	21-157,21-182,21-279,21-305	INPUT, AIR	14-119,14-32
SEAL—PRESSURE RELIEF	7-24	CLUTCH HOUSING, NV4500	6-6	CONDITIONING CLUTCH RELAY—PCM	
CHECK VALVE, ONE-WAY	25-25,25-26	CLUTCH HOUSING—NV4500	6-13	OUTPUT, AIR	14-124
CHECK VALVE SERVICE, CONVERTER		CLUTCH HYDRAULIC FLUID	6-3	CONDITIONING/HEATER, 8W-42 AIR	8-1
DRAINBACK	21-116,21-235	CLUTCH HYDRAULIC LINKAGE	6-3	CONDITIONS, SPARK PLUG	8D-14
CHECK VALVE TEST	25-30	CLUTCH LINKAGE	6-13	CONNECTING ROD ASSEMBLY, PISTON	9-109,
CHECK VALVE, TESTING ONE-WAY	25-25	CLUTCH LUBRICATION	6-3	9-118,9-147,9-190,9-202,9-208,9-23,9-41,9-58,	
CHECK VALVE, VACUUM	24-10,24-35	CLUTCH PEDAL	6-16	9-75,9-83,9-92	
CHECK—ROUTINE, COOLANT LEVEL	7-26	CLUTCH PEDAL POSITION SWITCH	6-4	CONNECTING ROD BEARING AND	
CHECK—SERVICE, COOLANT LEVEL	7-26	CLUTCH PROBLEMS	21-47	CRANKSHAFT JOURNAL CLEARANCE	9-172
CHECKS, PRELIMINARY	7-14	CLUTCH, REAR	21-158,21-182,21-281,21-306	CONNECTING ROD BEARINGS	9-28
CHECKS—DIESEL ENGINE, WIDE-OPEN-		CLUTCH RELAY, COMPRESSOR	24-21,24-32,	CONNECTING ROD BEARINGS, FITTING	9-131,
THROTTLE	14-93		24-6		9-63,9-97
CHIME WARNING SYSTEM SWITCHES	8U-6	CLUTCH RELAY—PCM OUTPUT, AIR		CONNECTING ROD INSPECTION, PISTON	9-49
CHOKE, AND SPEAKER RELAY, FILTER	8F-2,	CONDITIONING	14-124	CONNECTIONS, INTERMITTENT AND	
	8F-5,8F-8	CLUTCH RELAY—PCM OUTPUT, AIR		POOR	8-8
CIGAR LIGHTER	8E-18,8E-8	CONDITIONING (A/C)	14-40	CONNECTOR AND TERMINAL	
CIGAR LIGHTER AND POWER OUTLET	8E-25	CLUTCH RELEASE OR ENGAGEMENT,		REPLACEMENT	8-12
CIRCUIT ACTUATION TEST MODE	25-3	IMPROPER	6-4	CONNECTOR INFORMATION	8-7
CIRCUIT BREAKER; POWER SEAT		CLUTCH RUNOUT	6-4	CONNECTOR LOCATIONS, 8W-90	8-1
SYSTEMS	8R-2	CLUTCH SWITCH, LOW PRESSURE		CONNECTOR PIN-OUTS, 8W-80	8-1
CIRCUIT BREAKER; POWER WINDOW		CYCLING	24-22,24-32,24-8	CONNECTOR REPLACEMENT	8-11
SYSTEMS	8S-2	CLUTCH (TCC) SOLENOID—PCM		CONNECTOR/GROUND LOCATIONS	8-1
CIRCUIT FUNCTIONS	8-4	OUTPUT, TORQUE CONVERTOR	14-125,14-44	CONNECTOR—PCM INPUT AND	
CIRCUIT INFORMATION	8-4	CLUTCH/LOW-REVERSE DRUM/		OUTPUT, DATA LINK	14-124,14-40
CIRCUIT SENSE—PCM INPUT, IGNITION	14-35	OVERDRIVE PISTON RETAINER,		CONNECTORS, TERMINAL/CONNECTOR	
CIRCUIT TEST, CONTROL	8B-6	OVERRUNNING	21-181,21-304	REPAIR-MOLEX	8-11
CIRCUIT TEST, FEED	8B-3	C—PILLAR TRIM	23-55	CONNECTORS, TERMINAL/CONNECTOR	
CIRCUITS, NON-MONITORED	25-12	COAT FINISH, BASE COAT/CLEAR	23-4	REPAIR—THOMAS AND BETTS	8-11
CIRCUITS, SPEED CONTROL SOLENOID	8H-1	COAT HOOK	23-64	CONSOLE, 8W-49 OVERHEAD	8-1
CIRCUITS-PCM OUTPUTS, CCD BUS (+/-)	14-40	COAT/CLEAR COAT FINISH, BASE	23-4	CONSOLE, FLOOR	23-61
CLAMPS, COOLING SYSTEM HOSES	7-11	CODE, PAINT	23-4	CONSOLE LID	23-60
CLAMPS, FUEL TUBES/LINES/HOSES	14-11	CODE PLATE, BODY	Intro-1	CONSOLE, OVERHEAD	8V-1,8V-6
CLASSIFICATION OF LUBRICANTS	0-2	CODES, DIAGNOSTIC TROUBLE	25-3	CONSOLE READING LAMP BULB,	
CLEANER ELEMENT, AIR CLEANER		COIL, COMPRESSOR CLUTCH	24-20	OVERHEAD	8L-9
HOUSING/AIR	14-132	COIL, EVAPORATOR	24-44,24-7	CONSOLE READING LAMP, OVERHEAD	8L-14
CLEANER ELEMENT (FILTER)—3.9L/5.2L/		COIL PACK TESTS—8.0L V-10 ENGINE,		CONTACT PATTERN ANALYSIS, GEAR	3-118,
5.9L ENGINES, AIR CLEANER		IGNITION	8D-8	3-150,3-48,3-82	
HOUSING/AIR	14-64	COIL PACKS—8.0L ENGINE, IGNITION	8D-3	CONTAMINATION, BRAKE FLUID	5-14
CLEANER ELEMENT (FILTER)—8.0L V-10		COIL PACKS—8.0L V-10 ENGINE,		CONTAMINATION, CLUTCH	6-4
ENGINE, AIR CLEANER HOUSING/AIR	14-65	IGNITION	8D-18	CONTAMINATION, FLUID	21-210,21-91
CLEANER HOUSING/AIR CLEANER		COIL RESISTANCE—3.9L/5.2L/5.9L		CONTROL, 8W-33 VEHICLE SPEED	8-1
ELEMENT, AIR	14-132	ENGINES, IGNITION	8D-29	CONTROL AND DISPLAY SYMBOLS,	
CLEANER HOUSING/AIR CLEANER		COIL RESISTANCE—8.0L V-10 ENGINE,		INTERNATIONAL VEHICLE	Intro-6
ELEMENT (FILTER)—3.9L/5.2L/5.9L		IGNITION	8D-29	CONTROL ASSEMBLY, ANTILOCK	5-54
ENGINES, AIR	14-64	COIL SPRING	2-16	CONTROL CABLE, TEMPERATURE	24-40,24-48
CLEANER HOUSING/AIR CLEANER		COIL SPRINGS	2-9	CONTROL CIRCUIT TEST	8B-6
ELEMENT (FILTER)—8.0L V-10		COIL TEST—3.9L/5.2L/5.9L ENGINES,		CONTROL, HEATED MIRROR	8N-1,8N-2
ENGINE, AIR	14-65	IGNITION	8D-7	CONTROL, HEATER AND AIR	
CLEANING AND INSPECTION, TRANSFER		COIL—3.9L/5.2L/5.9L ENGINES,		CONDITIONER	24-2
CASE	21-352,21-384	IGNITION	8D-17,8D-3	CONTROL, HEATER-A/C	24-15,24-36

Description	Group-Page	Description	Group-Page	Description	Group-Page
CONTROL (IAC) MOTOR—3.9L/5.2L/5.9L ENGINES, IDLE AIR	14-55,14-61	COOLANT TEMPERATURE SENSOR—3.9L/5.2L/5.9L ENGINES, ENGINE	14-54,14-66	COVER—QUAD CAB, FRONT SEAT CUSHION	23-18
CONTROL (IAC) MOTOR—3.9L/5.2L/5.9L ENGINES—PCM OUTPUT, IDLE AIR	14-42	COOLANT TEMPERATURE SENSOR—3.9L/5.2L/5.9L ENGINES—PCM INPUT, ENGINE	14-34	COVER—STD CAB, SPLIT BENCH SEAT BACK	23-13
CONTROL (IAC) MOTOR—8.0L ENGINE, IDLE AIR	14-55,14-61	COOLANT TEMPERATURE SENSOR—8.0L ENGINE, ENGINE	14-55,14-67	COVER—STD CAB, SPLIT BENCH SEAT CUSHION	23-14
CONTROL (IAC) MOTOR—8.0L ENGINE—PCM OUTPUT, IDLE AIR	14-42	COOLANT TEMPERATURE SENSOR—8.0L ENGINE—PCM INPUT, ENGINE	14-34	COWL COVER	23-24
CONTROL INFORMATION (VECI) LABEL, VEHICLE EMISSION	25-18	COOLANT TEMPERATURE SENSOR—DIESEL ENGINE, ENGINE	25-31,25-33	COWL TRIM COVER	23-54
CONTROL KNOB, HEATER-A/C	24-38	COOLANT—ROUTINE, ADDING ADDITIONAL	7-26	CRANKCASE BREATHER/FILTER	25-18
CONTROL MODULE, AIRBAG	8M-3,8M-9	COOLER, AUXILIARY TRANSMISSION OIL	7-6	CRANKCASE VENTILATION (PCV) SYSTEM, POSITIVE	25-16
CONTROL MODULE (PCM), POWERTRAIN: FUEL SYSTEM	14-31,14-63	COOLER, CHARGE AIR	11-19	CRANKCASE VENTILATION SYSTEM—8.0L V-10 ENGINE	25-18
CONTROL MODULE (PCM), POWERTRAIN: IGNITION SYSTEM	8D-25	COOLER ELEMENT AND GASKET, OIL	9-204	CRANKING TEST, COLD	8B-3
CONTROL MODULE (PCM)—DIESEL, POWERTRAIN	14-118	COOLER IN RADIATOR SIDE TANK, REPLACING WATER-TO-OIL	7-43	CRANKSHAFT	9-110,9-148,9-192,9-210,9-29,9-42,9-63,9-76
CONTROL MODULE, POWERTRAIN: IGNITION SYSTEM	8D-2	COOLER, INTERCOOLER—CHARGE AIR	11-3	CRANKSHAFT FRONT OIL SEAL	9-43
CONTROL MODULE, POWERTRAIN: SPEED CONTROL SYSTEM	8H-2	COOLER—3.9L/5.2L/5.9L ENGINES, AUXILIARY TRANSMISSION OIL	7-43	CRANKSHAFT FRONT SEAL	9-194
CONTROL MODULE, SEATBELT TIMER	8M-17	COOLER—5.9L DIESEL ENGINE, AUXILIARY TRANSMISSION OIL	7-45	CRANKSHAFT GEAR	9-196
CONTROL SERVO, SPEED	8H-1,8H-4,8H-5	COOLER—5.9L DIESEL ENGINE, WATER-TO-OIL	7-44	CRANKSHAFT INSPECTION OF JOURNALS	9-49
CONTROL SET, OVERSHOOT/UNDERSHOOT FOLLOWING SPEED	8H-5	COOLER—8.0L ENGINE, AUXILIARY TRANSMISSION OIL	7-44	CRANKSHAFT JOURNAL CLEARANCE, CONNECTING ROD BEARING	9-172
CONTROL SOLENOID CIRCUITS, SPEED	8H-1	COOLER—DIESEL, CHARGE AIR	11-17	CRANKSHAFT JOURNALS	9-83
CONTROL SOLENOIDS—PCM OUTPUT, SPEED	14-125,14-43	COOLERS AND TUBES, FLUSHING	21-117,21-236	CRANKSHAFT MAIN BEARINGS	9-109,9-148,9-29,9-40,9-63,9-73
CONTROL SWITCHES, SPEED	8H-1,8H-3,8H-7	COOLERS—DIESEL ENGINE, AUTOMATIC TRANSMISSION OIL	7-7	CRANKSHAFT MAIN BEARINGS, FITTING	9-131,9-97
CONTROL SWITCHES—PCM INPUT, SPEED	14-122,14-39	COOLERS—GAS ENGINES, AUTOMATIC TRANSMISSION OIL	7-6	CRANKSHAFT OIL SEAL, FRONT	9-111,9-77
CONTROL SYSTEM, EVAPORATION (EVAP)	25-14	COOLING	7-56	CRANKSHAFT POSITION SENSOR; FUEL SYSTEM	14-63
CONTROL SYSTEM, HYDRAULIC	21-213,21-94	COOLING SYSTEM	7-2	CRANKSHAFT POSITION SENSOR; IGNITION SYSTEM	8D-11
CONTROL SYSTEM, ON-BOARD DIAGNOSTIC TEST FOR SPEED	8H-3	COOLING SYSTEM CLEANING/REVERSE FLUSHING	7-27	CRANKSHAFT POSITION SENSOR—3.9L V-6 ENGINE	8D-4
CONTROL SYSTEM, STRUCTURAL SEAT BELT	8M-13	COOLING SYSTEM COMPONENTS AND FLOW—DIESEL	7-3	CRANKSHAFT POSITION SENSOR—3.9L/5.2L/5.9L ENGINES	8D-19
CONTROL SYSTEM TEST MODE, SEAT BELT	8M-14	COOLING SYSTEM COMPONENTS AND FLOW—GAS ENGINES	7-2	CRANKSHAFT POSITION SENSOR—3.9L/5.2L/5.9L ENGINES—PCM INPUT	14-33
CONTROL SYSTEMS, SEAT BELT	8M-13	COOLING SYSTEM, DRAINING	7-26	CRANKSHAFT POSITION SENSOR—5.2L/5.9L V-8 ENGINES	8D-5
CONTROL TIMER MODULE, SEATBELT	8M-15	COOLING SYSTEM FAN DRIVE—DIESEL ENGINE	7-53	CRANKSHAFT POSITION SENSOR—8.0L ENGINE—PCM INPUT	14-34
CONTROL UNIT, HYDRAULIC	5-52	COOLING SYSTEM FAN—GAS ENGINES	7-52	CRANKSHAFT POSITION SENSOR—8.0L V-10 ENGINE	8D-20,8D-5
CONTROLLER	5-49	COOLING SYSTEM FOR LEAKS, TESTING	7-19	CRANKSHAFT POSITION SENSORS, CAMSHAFT	14-54
CONTROLLER ANTILOCK BRAKES	5-45,5-52,5-54	COOLING SYSTEM HOSES AND CLAMPS	7-11	CRANKSHAFT REAR OIL SEALS	9-111,9-43,9-77
CONTROLS, 8W-31 TRANSMISSION	8-1	COOLING SYSTEM, REFILLING	7-26	CRANKSHAFT REAR SEAL	9-195
CONTROLS, EVAPORATIVE EMISSION	25-14	CORE, HEATER	24-45,24-7	CRANKSHAFT REAR SEAL HOUSING	9-195
CONTROLS, OVERDRIVE ELECTRICAL	21-215,21-96	CORE OIL AND CAMSHAFT PLUGS, ENGINE	9-45,9-79	CRANKSHAFT REAR SEAL/ RETAINER	9-149
CONTROLS—PCM INPUT, AIR CONDITIONING (A/C)	14-119,14-32	CORE OIL—CAMSHAFT PLUGS, ENGINE	9-150	CRANKSHAFT REWORK	9-173
CONVERTER, CATALYTIC	11-1,11-19	CORNER SEAL, FRONT DOOR UPPER	23-37	CRANKSHAFT SERVICE	9-131,9-98
CONVERTER CLUTCH ENGAGEMENT	21-214,21-95	COUPLER, REFRIGERANT LINE	24-24,24-9	CRUISE-ON INDICATOR LAMP	8E-19,8E-9
CONVERTER DRAINBACK CHECK VALVE SERVICE	21-116,21-235	COURTESY LAMP BULB, READING	8V-7	CUP HOLDER OR STORAGE BIN	8E-32
CONVERTER DRAINBACK VALVE	21-214,21-95	COURTESY LAMP, READING	8V-2	CUP PLUG REPLACEMENT, CYLINDER BLOCK	9-172
CONVERTER, ELECTRONIC LOCK-UP TORQUE	21-210,21-91	COVER AND DISC, CLUTCH	6-11	CURRENT OUTPUT TEST	8C-4
CONVERTER HOUSING FLUID LEAK DIAGNOSIS	21-101,21-220	COVER AND HORN SWITCH, DRIVER SIDE AIRBAG TRIM	8M-7	CURVES, GOVERNOR PRESSURE	21-212,21-93
CONVERTER STALL TEST	21-218,21-99	COVER AND KNEE BLOCKER, STEERING COLUMN OPENING	8E-30	CUSHION COVER, BENCH SEAT	23-12
CONVERTER, TORQUE	21-120,21-239	COVER APPLICATION, CLUTCH	6-2	CUSHION COVER—QUAD CAB, FRONT SEAT	23-18
CONVERTER—DIESEL, CATALYTIC	11-12	COVER, BENCH SEAT BACK	23-12	CUSHION COVER—STD CAB, SPLIT BENCH SEAT	23-14
CONVERTERS, CATALYTIC	11-5	COVER, BENCH SEAT CUSHION	23-12	CUSHION—QUAD CAB, FRONT SEAT	23-17
CONVERTOR CLUTCH (TCC)	14-125,14-44	COVER, COWL	23-24	CUT-OFF SWITCH, HIGH PRESSURE	24-22,24-25,24-7
SOLENOID—PCM OUTPUT, TORQUE	14-125,14-44	COVER, COWL TRIM	23-54	CYCLE EVAP CANISTER PURGE SOLENOID, DUTY: EMISSION CONTROL SYSTEMS	25-15,25-20
COOLANT	7-3	COVER, CYLINDER HEAD	9-101,9-134,9-32,9-49,9-67	CYCLE EVAP CANISTER PURGE SOLENOID, DUTY: FUEL SYSTEM	14-63
COOLANT CAPACITIES	7-55	COVER, DOOR SILL TRIM	23-53	CYCLE EVAP PURGE SOLENOID VALVE—PCM OUTPUT, DUTY	14-40
COOLANT FLOW TEST, RADIATOR	7-19	COVER, GEAR HOUSING	9-183	CYCLING CLUTCH SWITCH, LOW PRESSURE	24-22,24-32,24-8
COOLANT LEVEL CHECK—ROUTINE	7-26	COVER INSPECTION, SHIFT	21-80	CYLINDER BLEEDING, MASTER	5-14
COOLANT LEVEL CHECK—SERVICE	7-26	COVER, INSTRUMENT PANEL TOP	8E-37	CYLINDER BLOCK	9-114,9-119,9-152,9-154,9-208,9-49,9-51,9-83,9-85
COOLANT LEVEL—AERATION, LOW	7-25	COVER, MIRROR FLAG	23-29	CYLINDER BLOCK CUP PLUG REPLACEMENT	9-172
COOLANT PERFORMANCE	7-9	COVER OIL SEAL (COVER NOT REMOVED), TIMING CHAIN	9-143	CYLINDER BLOCK REFACING	9-169
COOLANT RESERVE/OVERFLOW SYSTEM	7-11,7-3	COVER OIL SEAL (COVER REMOVED), TIMING CHAIN	9-143	CYLINDER BORE REPAIR	9-169
COOLANT RESERVE/OVERFLOW TANK	7-28	COVER, SHIFT	21-51	CYLINDER BORES, HONING	9-5
COOLANT SELECTION-ADDITIVES	7-10	COVER, STANCHION	23-60	CYLINDER BORES—DE-GLAZE	9-168
COOLANT SERVICE—DIESEL ENGINE	7-26	COVER, TIMING CHAIN	9-104,9-140,9-36,9-70	CYLINDER COMBUSTION PRESSURE LEAKAGE TEST	9-8
COOLANT SERVICE—V-6, V-8, AND V-10 ENGINES	7-26	COVER VENT, SHIFT	21-47		
COOLANT TEMPERATURE GAUGE	8E-14,8E-5	COVER—AIR INTAKE HEATER (DIESEL), INTAKE MANIFOLD	11-14		
COOLANT TEMPERATURE SENSOR, ENGINE	8D-13,8D-23,8D-6	COVER—QUAD CAB, FRONT SEAT BACK	23-17		

Description	Group-Page	Description	Group-Page	Description	Group-Page
CYLINDER COMPRESSION PRESSURE TEST	9-7	DIAGNOSTIC PROCEDURES, BODY	23-2	DOOR GLASS RUN WEATHERSTRIP, FRONT	23-36
CYLINDER, FRONT DOOR LOCK	23-32	DIAGNOSTIC TEST FOR CHARGING SYSTEM, ON-BOARD	8C-6	DOOR, HEATER-A/C HOUSING	24-44
CYLINDER HEAD	9-181,9-204,9-49	DIAGNOSTIC TEST FOR SPEED CONTROL SYSTEM, ON-BOARD	8H-3	DOOR HINGE, CARGO	23-39
CYLINDER HEAD ASSEMBLY	9-117	DIAGNOSTIC TROUBLE CODES	25-3	DOOR HINGE, FRONT	23-32
CYLINDER HEAD COMPONENTS—IN VEHICLE SERVICE	9-32	DIAGNOSTICS (OBD), ON-BOARD	7-13	DOOR INNER BELT WEATHERSTRIP, FRONT	23-34
CYLINDER HEAD COVER	9-101,9-134,9-32,9-49,9-67	DIAGNOSTICS, ON-BOARD	25-2	DOOR IN/OUT, FRONT	23-66
CYLINDER HEAD GASKET FAILURE		DIESEL ENGINE, 5.9L	9-161	DOOR INSIDE HANDLE ACTUATOR, CARGO	23-43
DIAGNOSIS, ENGINE	9-7	DIESEL ENGINE, AUXILIARY TRANSMISSION OIL COOLER—5.9L	7-45	DOOR INSIDE HANDLE ACTUATOR, FRONT	23-34
CYLINDER HEADS	9-102,9-136,9-152,9-33,9-68,9-83	DIESEL ENGINE SPECIFICATIONS, 5.9L	9-211	DOOR JAMB SWITCH; PASSIVE RESTRAINT SYSTEMS	8M-14,8M-16
CYLINDER, IGNITION SWITCH AND KEY	8D-25	DIESEL ENGINE, TURBOCHARGER—5.9L	11-3	DOOR JAMB SWITCH; VEHICLE THEFT/SECURITY SYSTEMS	8Q-2,8Q-4
CYLINDER, IGNITION SWITCH AND KEY LOCK	8D-7	DIESEL ENGINE, WATER-TO-OIL COOLER—5.9L	7-44	DOOR JAMB SWITCH, DRIVER	8U-2,8U-3
CYLINDER, MASTER	5-19,5-4	DIESEL FUEL SYSTEM	14-116	DOOR LATCH, FRONT	23-33,23-65
CYLINDER RESERVOIR, MASTER	5-34	DIESEL, WATER PUMP—5.9L	7-11,7-35	DOOR LATCH STRIKER, FRONT	23-33
CYLINDER SWITCH, DOOR LOCK	8Q-3,8Q-4	DIFFERENTIAL	3-133,3-32,3-69,3-98	DOOR LOCK CYLINDER, FRONT	23-32
CYLINDER, WHEEL	5-31,5-37,5-39	DIFFERENTIAL, 9 1/4 TRAC-LOK	3-75	DOOR LOCK CYLINDER SWITCH	8Q-3,8Q-4
CYLINDER/POWER BOOSTER, MASTER	5-10	DIFFERENTIAL BEARING PRELOAD AND GEAR BACKLASH	3-115,3-147,3-45,3-81	DOOR LOCKS, 8W-61 POWER	8-1
DAM, FRONT BUMPER AIR	13-2	DIFFERENTIAL NOISE, TRAC-LOK	3-127,3-61	DOOR LOWER LATCH, CARGO	23-42
DAM, FRONT DOOR WATER	23-30	DIFFERENTIAL NOISE, TRAC-LOK/POWER-LOK	3-92	DOOR LOWER STRIKER, CARGO	23-42
DAMAGED OR WORN THREADS, REPAIR	9-5	DIFFERENTIAL SIDE BEARINGS	3-100,3-135,3-70	DOOR OPENING SEAL	23-36
DAMPER, VIBRATION	9-104,9-140,9-36,9-69	DIFFERENTIAL SIDE BEARINGS—216 FBI AXLE	3-33	DOOR OUTER BELT WEATHERSTRIP, FRONT	23-34
DATA LINK CONNECTOR—PCM INPUT AND OUTPUT	14-124,14-40	DIFFERENTIAL SIDE BEARINGS—248 AXLES	3-34	DOOR OUTSIDE HANDLE, FRONT	23-32
DATA PLATE, ENGINE	14-115	DIFFERENTIAL, STANDARD	3-105,3-125,3-141,3-16,3-41,3-59,3-74,3-90	DOOR PRIMARY SEAL, CARGO	23-44
DAY/NIGHT MIRROR, AUTOMATIC	8T-4,8T-5	DIFFERENTIAL, TRAC-LOK	3-107,3-142	DOOR RELEASE CABLE, CARGO	23-40
DAY/NIGHT MIRROR SYSTEM, AUTOMATIC	8T-4	DIMENSIONS, VEHICLE; FRAME AND BUMPERS	13-7	DOOR SECONDARY SEAL, CARGO	23-44
DAYTIME RUNNING LAMP MODULE (DRLM)	8L-15	DIMENSIONS, VEHICLE; INTRODUCTION	Intro-4	DOOR SECONDARY SEAL, FRONT	23-37
DAYTIME RUNNING LAMPS	8L-1	DIODE REPLACEMENT	8-14	DOOR SHUTFACE HANDLE, CARGO	23-40
DEAERATION	7-25	DISARM SWITCH, PASSENGER AIRBAG	8M-3,8M-8	DOOR SILL TRIM COVER	23-53
DECALS, TAILGATE	23-52	DISARMING	8Q-2	DOOR TRIM PANEL, CARGO	23-37
DEFINITION, TRIP	25-11	DISC APPLICATION, CLUTCH	6-1	DOOR TRIM PANEL, FRONT	23-29
DELIVERY SYSTEM—DIESEL ENGINE, FUEL	14-70	DISC BRAKE CALIPER	5-21,5-35	DOOR UP/DOWN, FRONT	23-66
DELIVERY SYSTEM—GASOLINE ENGINE, FUEL	14-3	DISC BRAKE ROTOR	5-13	DOOR UPPER CORNER SEAL, FRONT	23-37
DELIVERY SYSTEM—DIESEL POWERED ENGINE, FUEL	14-70	DISC BRAKE ROTOR – WITH TAPERED BEARINGS	5-24	DOOR UPPER LATCH, CARGO	23-41
DELIVERY SYSTEM—GASOLINE POWERED ENGINES, FUEL	14-3	DISC BRAKE ROTOR WITH 5 STUDS AND HUB BEARINGS	5-25	DOOR UPPER STRIKER, CARGO	23-42
DEMAGNETIZING, COMPASS	8V-5	DISC BRAKE ROTOR WITH 8 STUDS AND HUB/BEARING	5-25	DOOR VACUUM ACTUATOR, MODE	24-42
DEPTH, 9 1/4 AXLE PINION GEAR	3-79	DISC BRAKE SHOES	5-22	DOOR VENT WINDOW, CARGO	23-43
DEPTH, PINION GEAR	3-112,3-145,3-42	DISC BRAKES, FRONT	5-6	DOOR VENT WINDOW WEATHERSTRIP, CARGO	23-43
DESCRIPTION, ENGINE	9-162	DISC, CLUTCH COVER	6-11	DOOR WATER DAM, FRONT	23-30
DESCRIPTION, SYSTEM	25-2	DISC ROTOR MACHINING	5-16	DOOR WATERDAM, CARGO	23-38
DESCRIPTION/IDENTIFICATION, ENGINE	9-126,9-24,9-58,9-92	DISCHARGE (ESD) SENSITIVE DEVICES, ELECTROSTATIC	8-8	DOOR WINDOW REGULATOR, FRONT	23-35
DETECTION PUMP (LDP), LEAK	25-16,25-20,25-22	DISCHARGE LINE, SUCTION	24-26	DOUBLE CARDAN JOINT	3-9
DEVICES, ELECTROSTATIC DISCHARGE (ESD) SENSITIVE	8-8	DISPLAY MODULE, COMPASS AND THERMOMETER	8V-2,8V-7	DRAIN MANIFOLD, FUEL	14-76,14-95
DIAGNOSIS, ACCESSORY DRIVE BELT	7-22	DISPLAY SYMBOLS, INTERNATIONAL VEHICLE CONTROL	Intro-6	DRAINBACK CHECK VALVE SERVICE, CONVERTER	21-116,21-235
DIAGNOSIS, ADAPTER SERVICE	21-392	DISPLAY TEST MODE, STATE	25-3	DRAINBACK VALVE, CONVERTER	21-214,21-95
DIAGNOSIS, AUTOMATIC TRANSMISSION	21-214,21-95	DISTANCE—PCM INPUT, VEHICLE SPEED	14-123,14-39	DRAINING COOLING SYSTEM	7-26
DIAGNOSIS, AXLE VACUUM SHIFT MOTOR	3-21	DISTRIBUTION, 8W-10 POWER	8-1	DRAIN/REFILL, FLUID	21-333,21-362
DIAGNOSIS, CONVERTER HOUSING FLUID LEAK	21-101,21-220	DISTRIBUTION, 8W-15 GROUND	8-1	DRAW FUSE, IGNITION-OFF	8F-1
DIAGNOSIS, ENGINE	9-7	DISTRIBUTION, WEIGHT	2-23	DRAW TEST, IGNITION-OFF	8A-10
DIAGNOSIS, ENGINE CYLINDER HEAD GASKET FAILURE	9-7	DISTRIBUTOR	8D-3	DRB SCAN TOOL	7-13
DIAGNOSIS, HEADLAMP	8L-2	DISTRIBUTOR CAP—3.9L/5.2L/5.9L ENGINES	8D-10	DRIVE BELT DIAGNOSIS, ACCESSORY	7-22
DIAGNOSIS, INTAKE MANIFOLD	11-3	DISTRIBUTOR DRIVE SHAFT BUSHING	9-35,9-74	DRIVE BELTS, ACCESSORY	7-48
DIAGNOSIS, INTAKE MANIFOLD LEAKAGE	9-7	DISTRIBUTOR ROTOR—3.9L/5.2L/5.9L ENGINES	8D-10	DRIVE BELTS, ENGINE ACCESSORY	7-5
DIAGNOSIS, LAMP	8L-1	DISTRIBUTORS	8D-23	DRIVE INDICATOR LAMP, FOUR-WHEEL	8E-19,8E-9
DIAGNOSIS, LOW-PRESSURE FUEL SYSTEM	14-76	DOME LAMP	8L-13	DRIVE SHAFT BUSHING, DISTRIBUTOR	9-35,9-74
DIAGNOSIS, POWER STEERING GEAR LEAKAGE	19-12	DOME LAMP BULB	8L-9	DRIVE, VISCOUS FAN	7-12,7-21
DIAGNOSIS, PRELIMINARY	21-214,21-95	DOOR AIR EXHAUSTER, CARGO	23-38	DRIVELINE ANGLE MEASUREMENT PREPARATION	3-4
DIAGNOSIS, PUMP LEAKAGE	19-5	DOOR, CARGO	23-39,23-66	DRIVELINE SNAP	3-127,3-18,3-61,3-92
DIAGNOSIS, SERVICE	21-331,21-360	DOOR CHECK, CARGO DOOR	23-40	DRIVE—DIESEL ENGINE, COOLING SYSTEM FAN	7-53
DIAGNOSIS, SHOCK	2-15,2-8	DOOR DOOR CHECK, CARGO	23-40	DRIVER DOOR JAMB SWITCH	8U-2,8U-3
DIAGNOSIS, SPRING AND SHOCK	2-23	DOOR EXHAUST VENT, CARGO	23-39	DRIVER (–)—PCM OUTPUT, GENERATOR FIELD	14-124,14-42
DIAGNOSIS TABLES AND CHARTS—RE TRANSMISSION	21-101,21-220	DOOR FORE/AFT, FRONT	23-66	DRIVER SEAT BELT SWITCH	8U-2,8U-5
DIAGNOSIS—DIESEL ENGINES, SERVICE	9-15	DOOR, FRONT	23-31	DRIVER SIDE AIRBAG TRIM COVER AND HORN SWITCH	8M-7
DIAGNOSIS—GASOLINE ENGINES, SERVICE	9-11	DOOR, FUEL FILL	23-48	DROP TEST, VOLTAGE	8A-11
DIAGNOSTIC CHARTS	6-9	DOOR GLASS, FRONT	23-34	DRUM, BRAKE	5-13
DIAGNOSTIC PROCEDURES	8L-1	DOOR GLASS RUN LOWER CHANNELS, FRONT	23-35	DRUM BRAKE, REAR	5-38,5-39

Description	Group-Page	Description	Group-Page	Description	Group-Page
DUTY CYCLE EVAP CANISTER PURGE SOLENOID; FUEL SYSTEM	14-63	ENGINE COOLANT TEMPERATURE SENSOR—8.0L ENGINE	14-55,14-67	ENGINE, QUICK-CONNECT FITTINGS—DIESEL	14-74
DUTY CYCLE EVAP PURGE SOLENOID VALVE-PCM OUTPUT	14-40	ENGINE COOLANT TEMPERATURE SENSOR—8.0L ENGINE—PCM INPUT	14-34	ENGINE REAR MOUNT	9-177
DUTY SCHEDULE—A, HEAVY	0-14	ENGINE COOLANT TEMPERATURE SENSOR—DIESEL ENGINE	25-31,25-33	ENGINE, SPARK PLUG CABLE ORDER—8.0L V-10	8D-28
DUTY SCHEDULE—A, LIGHT	0-4	ENGINE, COOLING SYSTEM FAN DRIVE—DIESEL	7-53	ENGINE SPECIFICATIONS, 3.9L	9-52
DUTY SCHEDULE—A, MEDIUM	0-9	ENGINE CORE OIL AND CAMSHAFT PLUGS	9-45,9-79	ENGINE SPECIFICATIONS, 5.2L	9-86
DUTY SCHEDULE—B, HEAVY	0-16	ENGINE CORE OIL—CAMSHAFT PLUGS	9-150	ENGINE SPECIFICATIONS, 5.9L	9-120
DUTY SCHEDULE—B, LIGHT	0-6	ENGINE CORE PLUGS	9-113	ENGINE SPECIFICATIONS, 5.9L DIESEL	9-211
DUTY SCHEDULE—B, MEDIUM	0-11	ENGINE, CRANKCASE VENTILATION SYSTEM—8.0L V-10	25-18	ENGINE SPECIFICATIONS, 8.0L	9-154
DUTY VEHICLES, MAINTENANCE SCHEDULES—HEAVY	0-14	ENGINE, CRANKSHAFT POSITION SENSOR—3.9L V-6	8D-4	ENGINE SPEED SENSOR	14-130
DUTY VEHICLES, MAINTENANCE SCHEDULES—LIGHT	0-4	ENGINE, CRANKSHAFT POSITION SENSOR—8.0L V-10	8D-20,8D-5	ENGINE SPEED SENSOR TEST	14-127
DUTY VEHICLES, MAINTENANCE SCHEDULES—MEDIUM	0-9	ENGINE CYLINDER HEAD GASKET FAILURE DIAGNOSIS	9-7	ENGINE SPEED SENSOR—PCM INPUT	14-119
EFFECTS OF INCORRECT FLUID LEVEL	21-210, 21-91	ENGINE DATA PLATE	14-115	ENGINE, THERMOSTAT—DIESEL	7-41
EGR SYSTEM OPERATION	25-27	ENGINE DESCRIPTION	9-162	ENGINE, THROTTLE BODY—8.0L	14-44,14-59
EGR SYSTEM TEST	25-29	ENGINE DESCRIPTION/IDENTIFICATION	9-126, 9-24,9-58,9-92	ENGINE, THROTTLE LINKAGE ADJUSTMENT—DIESEL	14-93
EGR TUBE	25-32	ENGINE DIAGNOSIS	9-7	ENGINE, THROTTLE POSITION SENSOR (TPS)—8.0L	14-57,14-60
EGR VALVE	25-32	ENGINE, ENGINE COOLANT TEMPERATURE SENSOR—8.0L	14-55,14-67	ENGINE, THROTTLE POSITION SENSOR—DIESEL	14-131
EGR VALVE TEST	25-30	ENGINE, ENGINE COOLANT TEMPERATURE SENSOR—DIESEL	25-31,25-33	ENGINE, TORQUE CHART—DIESEL	14-135
EGR VALVE VACUUM REGULATOR SOLENOID	25-33	ENGINE, ENGINE FIRING ORDER—3.9L V-6	8D-28	ENGINE, TURBOCHARGER—5.9L DIESEL	11-3
EGR VALVE VACUUM REGULATOR SOLENOID TEST	25-30	ENGINE, EXHAUST GAS RECIRCULATION (EGR) SYSTEM—DIESEL	25-27	ENGINE, VACUUM PUMP OUTPUT—DIESEL	9-22
ELECTRICAL CONTROLS, OVERDRIVE	21-215, 21-96	ENGINE, EXHAUST MANIFOLD—V-10	11-3	ENGINE VEHICLES, MAINTENANCE SCHEDULES—DIESEL	0-19
ELECTRONIC GOVERNOR	21-211,21-92	ENGINE EXHAUST MANIFOLD—V-6 AND V-8 ENGINES	11-10,11-3	ENGINE, VISUAL INSPECTION—8.0L	14-48
ELECTRONIC LOCK-UP TORQUE CONVERTER	21-210,21-91	ENGINE FIRING ORDER—3.9L V-6 ENGINE	8D-28	ENGINE, WATER PUMP—8.0L V-10	7-31
ELECTRONIC VOLTAGE REGULATOR	8C-2	ENGINE FIRING ORDER—5.2L/5.9L V-8 ENGINES	8D-28	ENGINE, WATER-TO-OIL COOLER—5.9L DIESEL	7-44
ELECTROSTATIC DISCHARGE (ESD) SENSITIVE DEVICES	8-8	ENGINE FRONT MOUNTS	9-176	ENGINE, WIDE-OPEN-THROTTLE CHECKS—DIESEL	14-93
ELEMENT, AIR CLEANER HOUSING/AIR CLEANER	14-132	ENGINE, FUEL DELIVERY SYSTEM—DIESEL	14-70	ENGINE—PCM INPUT, CRANKSHAFT POSITION SENSOR—8.0L	14-34
ELEMENT AND GASKET, OIL COOLER	9-204	ENGINE, FUEL DELIVERY SYSTEM—GASOLINE	14-3	ENGINE—PCM INPUT, ENGINE COOLANT TEMPERATURE SENSOR—8.0L	14-34
ELEMENT (FILTER)—3.9L/5.2L/5.9L ENGINES, AIR CLEANER HOUSING/AIR CLEANER	14-64	ENGINE, FUEL DELIVERY SYSTEM—DIESEL POWERED	14-70	ENGINE—PCM INPUT, INTAKE MANIFOLD AIR TEMPERATURE SENSOR—8.0L	14-35
ELEMENT (FILTER)—8.0L V-10 ENGINE, AIR CLEANER HOUSING/AIR CLEANER	14-65	ENGINE, FUEL INJECTION SYSTEM—DIESEL	14-117	ENGINE—PCM INPUT, MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR—8.0L	14-36
ELEMENTS, INTAKE MANIFOLD AIR HEATER	14-134	ENGINE, FUEL INJECTOR RAIL—8.0L V-10	14-20	ENGINE—PCM INPUT, THROTTLE POSITION SENSOR (TPS)—8.0L	14-39
EMISSION CONTROL INFORMATION (VECI) LABEL, VEHICLE	25-18	ENGINE, FUEL RAIL—8.0L	14-6	ENGINE—PCM OUTPUT, FUEL INJECTORS—8.0L	14-41
EMISSION CONTROLS, EVAPORATIVE	25-14	ENGINE, FUEL REQUIREMENTS—DIESEL	14-2	ENGINE—PCM OUTPUT, IDLE AIR CONTROL (IAC) MOTOR—8.0L	14-42
ENABLING	80-1	ENGINE, FUEL TANK CAPACITY—DIESEL	14-115	ENGINE—PCM OUTPUTS, IGNITION COILS—8.0L	14-43
END PLUG, HOUSING	19-12	ENGINE, IDLE AIR CONTROL (IAC) MOTOR—8.0L	14-55,14-61	ENGINES, AIR CLEANER HOUSING/AIR CLEANER ELEMENT (FILTER)—3.9L/5.2L/5.9L	14-64
ENGAGEMENT, CONVERTER CLUTCH	21-214, 21-95	ENGINE, IGNITION COIL PACK TESTS—8.0L V-10	8D-8	ENGINES, AIR INJECTION SYSTEM—HDC GAS	25-23
ENGAGEMENT, IMPROPER CLUTCH RELEASE OR	6-4	ENGINE, IGNITION COIL PACKS—8.0L	8D-3	ENGINES, AUTOMATIC SHUTDOWN (ASD) RELAY—3.9L/5.2L/5.9L	8D-4
ENGINE, 3.9L	9-23,9-56	ENGINE, IGNITION COIL PACKS—8.0L V-10	8D-18	ENGINES, AUTOMATIC TRANSMISSION OIL COOLERS—GAS	7-6
ENGINE, 5.2L	9-58,9-90	ENGINE, IGNITION COIL RESISTANCE—8.0L V-10	8D-29	ENGINES, AUXILIARY TRANSMISSION OIL COOLER—3.9L/5.2L/5.9L	7-43
ENGINE, 5.9L	9-123,9-92	ENGINE, INTAKE MANIFOLD AIR TEMPERATURE SENSOR—8.0L	14-56,14-67	ENGINES, BELT TENSION—ALL	7-5
ENGINE, 5.9L DIESEL	9-161	ENGINE, INTAKE MANIFOLD—V-10	11-3	ENGINES, BLOCK HEATER—GASOLINE	7-47
ENGINE, 8.0L	9-126,9-158	ENGINE LUBRICATION SYSTEM	9-24	ENGINES, CAMSHAFT POSITION SENSOR—3.9L/5.2L/5.9L	8D-11,8D-20,8D-6
ENGINE ACCESSORY DRIVE BELTS	7-5	ENGINE, MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR TEST—8.0L	14-52	ENGINES, COOLANT SERVICE—V-6, V-8, AND V-10	7-26
ENGINE, AIR CLEANER HOUSING/AIR CLEANER ELEMENT (FILTER)—8.0L V-10	14-65	ENGINE, MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR—8.0L	14-62	ENGINES, COOLING SYSTEM COMPONENTS AND FLOW—GAS	7-2
ENGINE, AIR INJECTION PUMP AIR FILTER—8.0L V-10	25-26	ENGINE MOUNT—REAR	9-30	ENGINES, COOLING SYSTEM FAN—GAS	7-52
ENGINE ASSEMBLY	9-133,9-177,9-31,9-65,9-99	ENGINE MOUNT—REAR	9-132,9-64,9-99	ENGINES, CRANKSHAFT POSITION SENSOR—3.9L/5.2L/5.9L	8D-19
ENGINE, AUTOMATIC SHUTDOWN (ASD) RELAY—8.0L V-10	8D-4	ENGINE MOUNTS—FRONT	9-132,9-29,9-64,9-98	ENGINES, CRANKSHAFT POSITION SENSOR—5.2L/5.9L V-8	8D-5
ENGINE, AUTOMATIC TRANSMISSION OIL COOLERS—DIESEL	7-7	ENGINE OIL PRESSURE	9-10	ENGINES, DISTRIBUTOR CAP—3.9L/5.2L/5.9L	8D-10
ENGINE, AUXILIARY TRANSMISSION OIL COOLER—5.9L DIESEL	7-45	ENGINE OIL SERVICE	9-165,9-3	ENGINES, DISTRIBUTOR ROTOR—3.9L/5.2L/5.9L	8D-10
ENGINE, AUXILIARY TRANSMISSION OIL COOLER—8.0L	7-44	ENGINE, OXYGEN (O2S) SENSORS—5.9L HDC	14-53	ENGINES, ENGINE COOLANT TEMPERATURE SENSOR—3.9L/5.2L/5.9L	14-54,14-66
ENGINE, BLOCK HEATER—DIESEL	7-47	ENGINE, PCV VALVE TEST—3.9/5.2/5.9L	25-19	ENGINES, ENGINE EXHAUST MANIFOLD—V-6 AND V-8	11-10,11-3
ENGINE, CAMSHAFT POSITION SENSOR TEST—8.0L V-10	8D-12	ENGINE PERFORMANCE—GASOLINE ENGINES	9-2	ENGINES, ENGINE FIRING ORDER—5.2L/5.9L V-8	8D-28
ENGINE, CAMSHAFT POSITION SENSOR—8.0L V-10	8D-21,8D-6	ENGINE, POWER STEERING PUMP - GASOLINE	19-7	ENGINES, ENGINE PERFORMANCE—GASOLINE	9-2
ENGINE COMPONENTS	9-129,9-26,9-61,9-95	ENGINE, POWER STEERING PUMP—DIESEL	19-7		
ENGINE, COOLANT SERVICE—DIESEL	7-26				
ENGINE COOLANT TEMPERATURE SENSOR	8D-13,8D-23,8D-6				
ENGINE COOLANT TEMPERATURE SENSOR—3.9L/5.2L/5.9L ENGINES	14-54,14-66				
ENGINE COOLANT TEMPERATURE SENSOR—3.9L/5.2L/5.9L ENGINES—PCM INPUT	14-34				

Description	Group-Page	Description	Group-Page	Description	Group-Page
ENGINES, FAILURE TO START TEST—3.9L/5.2L/5.9L	8D-8	ENGINES—PCM OUTPUT, IDLE AIR CONTROL (IAC) MOTOR—3.9L/5.2L/5.9L	14-42	FBI AXLE, STEERING KNUCKLE—216	3-29
ENGINES, FORM-IN-PLACE GASKETS—GASOLINE	9-1	ENGINES—PCM OUTPUT, IGNITION COIL—3.9L/5.2L/5.9L	14-42	FBI AXLE, STEERING KNUCKLE—248	3-29
ENGINES, FUEL DELIVERY SYSTEM—GASOLINE POWERED	14-3	ENGIN—PCM INPUT, CAMSHAFT POSITION SENSOR—8.0L	14-33	FBI AXLES, 216 AND 248	3-15,3-50,3-51
ENGINES, FUEL INJECTION SYSTEM—GASOLINE	14-27	ENTRY RECEIVER, REMOTE KEYLESS	8P-3	FEED CIRCUIT TEST	8B-3
ENGINES, FUEL INJECTOR RAIL—3.9L/5.2L/5.9L	14-18	ENTRY SEAT TRACK—CLUB CAB, EZ	23-15	FENDER (DUAL REAR WHEELS), REAR	23-50
ENGINES, FUEL INJECTOR(S)—ALL GAS	14-21	ENTRY SYSTEM, POWER LOCK SYSTEM AND REMOTE KEYLESS	8P-4	FENDER, LEFT FRONT	23-25
ENGINES, FUEL RAIL—3.9/5.2/5.9L	14-6	ENTRY SYSTEM, REMOTE KEYLESS	8P-1	FENDER, RIGHT FRONT	23-26
ENGINES, FUEL SYSTEM PRESSURE—GAS	14-26	ENTRY TRANSMITTER BATTERY REPLACEMENT, REMOTE KEYLESS	8P-7	FIELD DRIVER (-)—PCM OUTPUT, GENERATOR	14-124,14-42
ENGINES, FUEL SYSTEM PRESSURES—DIESEL	14-115	ENTRY TRANSMITTER PROGRAMMING, REMOTE KEYLESS	8P-7	FIELD SOURCE (+)—PCM OUTPUT, GENERATOR	14-124,14-42
ENGINES, FUEL TANK CAPACITY—GAS	14-26	ENTRY TRANSMITTER, REMOTE KEYLESS	8P-3,8P-6	FIFTH-REVERSE SHIFT FORK PADS	21-47
ENGINES, FUEL TANK—ALL	14-21	EQUIPMENT IDENTIFICATION PLATE	Intro-4	FILL DOOR, FUEL	23-48
ENGINES, IDLE AIR CONTROL (IAC) MOTOR—3.9L/5.2L/5.9L	14-55,14-61	EQUIPMENT, PTO ACCESSORY	21-391	FILL LEVEL, RECOMMENDED LUBRICANT	21-331,21-360,21-391
ENGINES, IGNITION COIL RESISTANCE—3.9L/5.2L/5.9L	8D-29	EQUIPMENT, REFRIGERANT SYSTEM SERVICE	24-9	FILL PROCEDURE, TRANSMISSION	21-116, 21-235
ENGINES, IGNITION COIL TEST—3.9L/5.2L/5.9L	8D-7	ESCUTCHEON, TAILGATE HANDLE	23-51	FILL VALVE, QUICK	21-214,21-95
ENGINES, IGNITION COIL—3.9L/5.2L/5.9L	8D-17,8D-3	EVACUATE, REFRIGERANT SYSTEM	24-23	FILLER TUBE CAP, FUEL TANK	14-23,14-6
ENGINES, IGNITION SYSTEM—V-6/V-8	8D-2	EVAP CANISTER PURGE SOLENOID, DUTY CYCLE; EMISSION CONTROL SYSTEMS	25-15,25-20	FILTER BYPASS VALVE, OIL	9-197
ENGINES, INTAKE MANIFOLD AIR TEMPERATURE SENSOR—3.9L/5.2L/5.9L	14-55,14-67	EVAP CANISTER PURGE SOLENOID, DUTY CYCLE; FUEL SYSTEM	14-63	FILTER, CHOKE, AND SPEAKER RELAY	8F-2, 8F-5,8F-8
ENGINES, INTAKE MANIFOLD—V-6 AND V-8	11-3,11-6	EVAP PURGE SOLENOID VALVE-PCM OUTPUT, DUTY CYCLE	14-40	FILTER, FUEL PUMP INLET	14-17
ENGINES, MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR TEST—3.9L/5.2L/5.9L	14-51	EVAPORATION (EVAP) CONTROL SYSTEM	25-14	FILTER, OIL	9-161
ENGINES, MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR—3.9L/5.2L/5.9L	14-62	EVAPORATIVE EMISSION CONTROLS	25-14	FILTER REPLACEMENT, FLUID	21-115,21-234
ENGINES, OXYGEN (O2S) SENSORS—3.9L/5.2L/5.9L LCD	14-53	EVAPORATIVE (EVAP) CANISTER	25-15,25-20	FILTER/FUEL PRESSURE REGULATOR, FUEL	14-15,14-5
ENGINES, OXYGEN (O2S) SENSORS—8.0L HDC/MDC	14-54	EVAPORATOR COIL	24-44,24-7	(FILTER)—3.9L/5.2L/5.9L ENGINES, AIR CLEANER HOUSING/AIR CLEANER ELEMENT	14-64
ENGINES, OXYGEN SENSORS—3.9L/5.2L/5.9L LDC/HDC	14-63	EXCITER RING	5-50,5-56	(FILTER)—8.0L V-10 ENGINE, AIR CLEANER HOUSING/AIR CLEANER ELEMENT	14-65
ENGINES, OXYGEN SENSORS—8.0L	14-64	EXCITER RING, REAR WHEEL SPEED SENSOR	5-46	FILTER—8.0L V-10 ENGINE, AIR INJECTION PUMP AIR	25-26
ENGINES, SERVICE DIAGNOSIS—DIESEL	9-15	EXCITER RING, RING GEAR	3-100,3-135,3-70	FILTER/WATER SEPARATOR, FUEL	14-74,14-96
ENGINES, SERVICE DIAGNOSIS—GASOLINE	9-11	EXHAUST GAS RECIRCULATION (EGR) SYSTEM	25-27	FINAL ASSEMBLY	3-104,3-40,3-74
ENGINES, TESTING FOR SPARK AT COIL—3.9L/5.2L/5.9L	8D-7	EXHAUST GAS RECIRCULATION (EGR) SYSTEM—DIESEL ENGINE	25-27	FINISH, BASE COAT/CLEAR COAT	23-4
ENGINES, THERMOSTAT—GAS	7-24	EXHAUST HEAT SHIELDS	11-2,11-6	FIRING ORDER—3.9L V-6 ENGINE, ENGINE	8D-28
ENGINES, THROTTLE BODY—3.9L/5.2L/5.9L	14-44,14-58	EXHAUST MANIFOLD	11-18	FIRING ORDER—5.2L/5.9L V-8 ENGINES, ENGINE	8D-28
ENGINES, THROTTLE POSITION SENSOR (TPS)—3.9L/5.2L/5.9L	14-56,14-60	EXHAUST MANIFOLD V-10	11-11	FITTING CONNECTING ROD BEARINGS	9-131, 9-63,9-97
ENGINES, TORQUE CHART—DIESEL	14-116	EXHAUST MANIFOLD—DIESEL	11-13	FITTING CRANKSHAFT MAIN BEARINGS	9-131, 9-97
ENGINES, VISUAL INSPECTION—3.9L/5.2L/5.9L	14-45	EXHAUST MANIFOLD—V-10 ENGINE	11-3	FITTING PISTON RINGS	9-62,9-96
ENGINES, WATER PUMP—V-6 AND V-8	7-28	EXHAUST MANIFOLD—V-6 AND V-8	11-10,11-3	FITTING PISTONS	9-129,9-27,9-62,9-96
ENGINES, WATER PUMPS—V-6, V-8, AND V-10	7-11	EXHAUST MANIFOLD—V-6 AND V-8 ENGINES, ENGINE	11-10,11-3	FITTING RINGS	9-130,9-27
ENGINES WITH PRESSURE TEST PORT, FUEL PUMP PRESSURE TEST—ALL	14-7	EXHAUST PIPE	11-18,11-4	FITTINGS, QUICK-CONNECT	14-12,14-7
ENGINES—PCM INPUT, CAMSHAFT POSITION SENSOR—3.9L/5.2L/5.9L	14-33	EXHAUST PIPE—DIESEL	11-11	FITTINGS—DIESEL ENGINE, QUICK-CONNECT	14-74
ENGINES—PCM INPUT, CRANKSHAFT POSITION SENSOR—3.9L/5.2L/5.9L	14-33	EXHAUST SYSTEM	11-1	FIVE VOLT SENSOR SUPPLY—PRIMARY	14-35
ENGINES—PCM INPUT, ENGINE COOLANT TEMPERATURE SENSOR—3.9L/5.2L/5.9L	14-34	EXHAUST TAILPIPE	11-6	FIVE VOLT SENSOR SUPPLY—SECONDARY	14-35
ENGINES—PCM INPUT, INTAKE MANIFOLD AIR TEMPERATURE SENSOR—3.9L/5.2L/5.9L	14-35	EXHAUST TAILPIPE—DIESEL	11-12	FIXED ORIFICE TUBE	24-22,24-32,24-7
ENGINES—PCM INPUT, MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR—3.9L/5.2L/5.9L	14-36	EXHAUST VENT, CARGO DOOR	23-39	FLAG COVER, MIRROR	23-29
ENGINES—PCM INPUT, OXYGEN SENSOR (O2S)—3.9L/5.2L/5.9L LDC	14-36	EXHAUSTER, CARGO DOOR AIR	23-38	FLASHER, COMBINATION	8J-1,8J-5
ENGINES—PCM INPUT, OXYGEN SENSOR (O2S)—8.0L MDC	14-38	EXPANSION PLUG REPLACEMENT	21-48	FLOOR CARPET OR MAT	23-62
ENGINES—PCM INPUT, OXYGEN SENSOR (O2S)—HDC	14-37	EXTENSION HOUSING BUSHING AND SEAL	21-364	FLOOR CARPET OR MAT—CLUB CAB	23-62
ENGINES—PCM INPUT, THROTTLE POSITION SENSOR (TPS)—3.9L/5.2L/5.9L	14-39	EXTENSION/ADAPTER HOUSING	21-52	FLOOR CONSOLE	23-61
ENGINES—PCM OUTPUT, FUEL INJECTORS—3.9L/5.2L/5.9L	14-41	EXTENSION/ADAPTER HOUSING SEAL AND BUSHING	21-53	FLOOR SHIFT BOOT—AUTOMATIC TRANSMISSION, 4WD	23-62
		EXTERIOR LAMPS	8L-16	FLOOR SHIFT BOOT—MANUAL TRANSMISSION, 4WD	23-61
		EXTERIOR MIRRORS	8T-1	FLOOR SHIFT BOOT—MANUAL TRANSMISSION	23-61
		EXTERIOR NAMEPLATES	23-27	FLOOR STOWAGE TRAY, REAR	23-62
		EYE BUSHINGS, SPRING	2-26	FLOW CHECK PROCEDURE, THROTTLE BODY MINIMUM AIR	14-57
		EZ ENTRY SEAT TRACK—CLUB CAB	23-15	FLOW RATE AND PRESSURE, PUMP	19-4
		FAILURE DIAGNOSIS, ENGINE CYLINDER HEAD GASKET	9-7	FLOW TEST, RADIATOR COOLANT	7-19
		FAILURE TO START TEST—3.9L/5.2L/5.9L ENGINES	8D-8	FLOW—DIESEL, COOLING SYSTEM COMPONENTS	7-3
		FAN	7-55	FLOW—GAS ENGINES, COOLING SYSTEM COMPONENTS	7-2
		FAN DRIVE, VISCOUS	7-12,7-21	FLUID AND FILTER REPLACEMENT	21-115, 21-234
		FAN DRIVE—DIESEL ENGINE, COOLING SYSTEM	7-53	FLUID, BRAKE	5-41
		FAN—GAS ENGINES, COOLING SYSTEM	7-52	FLUID CAPACITIES	0-2
		FASCIA, FRONT BUMPER LOWER	13-2	FLUID, CAUSES OF BURNT	21-210,21-91
		FASCIA, FRONT BUMPER UPPER	13-1	FLUID, CLUTCH HYDRAULIC	6-3
		FASTENER IDENTIFICATION	Intro-7	FLUID CONTAMINATION	21-210,21-91
		FASTENER USAGE	Intro-10	FLUID CONTAMINATION, BRAKE	5-14
		FBI AXLE, BALL STUDS—216	3-30	FLUID DRAIN/REFILL	21-333,21-362
		FBI AXLE, BALL STUDS—248	3-31	FLUID LEAK DIAGNOSIS, CONVERTER HOUSING	21-101,21-220
		FBI AXLE, DIFFERENTIAL SIDE BEARINGS—216	3-33	FLUID LEVEL, BRAKE	5-14
		FBI AXLE, PINION SHAFT SEAL—216	3-25		
		FBI AXLE, PINION SHAFT SEAL—248	3-26		

Description	Group-Page	Description	Group-Page	Description	Group-Page
FLUID LEVEL CHECK	21-115,21-234	FRONT SEAT TRACK ADJUSTER—QUAD		FUEL TANK FILLER TUBE CAP	14-23,14-6
FLUID LEVEL, EFFECTS OF INCORRECT	21-210,	CAB	23-14	FUEL TANK MODULE	14-72,14-98
	21-91	FRONT SERVO	21-181,21-304	FUEL TANK—ALL ENGINES	14-21
FLUID LEVEL SENSOR, WASHER	8K-4	FRONT SERVO PISTON	21-153,21-276	FUEL TRANSFER PUMP	14-110,14-73
FLUID, RECOMMENDED	21-210,21-91	FRONT SUSPENSION, IFS	2-13	FUEL TRANSFER PUMP PRESSURE/	
FLUID WARNING LAMP, LOW WASHER	8E-20,	FRONT SUSPENSION (IFS)	2-7	CAPACITY TEST	14-78
	8E-9	FRONT SUSPENSION (IFS),		FUEL TUBES/LINES/HOSES AND CLAMPS	14-11
FLUSHING COOLERS AND TUBES	21-117,21-236	INDEPENDENT	2-7	FUEL WARNING LAMP, LOW	8E-20,8E-9
FLUSHING, COOLING SYSTEM		FRONT SUSPENSION LINK/COIL	2-14	FUEL/IGNITION SYSTEMS, 8W-30	8-1
CLEANING/REVERSE	7-27	FRONT WHEEL BEARING	5-28	FUNCTIONS, CIRCUIT	8-4
FLUSHING HYDRAULIC BOOSTER	5-14	FRONT WHEEL SPEED SENSOR – 2WD	5-55	FUSE, IGNITION-OFF DRAW	8F-1
FLUSHING POWER STEERING SYSTEM	19-6	FRONT WHEEL SPEED SENSOR – 4WD	5-55	GAS ENGINES, AIR INJECTION	
FLYWHEEL RING GEAR	9-196	FRONT WHEELHOUSE LINER	23-24	SYSTEM-HDC	25-23
FOG LAMP	8L-10,8L-3,8L-7	FUEL DELIVERY SYSTEM-DIESEL		GAS ENGINES, FUEL INJECTOR(S)—ALL	14-21
FOG LAMP ALIGNMENT	8L-6	ENGINE	14-70	GAS RECIRCULATION (EGR) SYSTEM,	
FOG LAMP SWITCH	8E-29	FUEL DELIVERY SYSTEM-GASOLINE		EXHAUST	25-27
FOLLOWING SPEED CONTROL SET,		ENGINE	14-3	GAS RECIRCULATION (EGR) SYSTEM-	
OVERSHOOT/UNDERSHOOT	8H-5	FUEL DELIVERY SYSTEM—DIESEL		DIESEL ENGINE, EXHAUST	25-27
FORE/AFT, FRONT DOOR	23-66	POWERED ENGINE	14-70	GASKET FAILURE DIAGNOSIS, ENGINE	
FORK PADS, FIFTH-REVERSE SHIFT	21-47	FUEL DELIVERY SYSTEM—GASOLINE		CYLINDER HEAD	9-7
FORM-IN-PLACE GASKETS—GASOLINE		POWERED ENGINES	14-3	GASKET, OIL COOLER ELEMENT	9-204
ENGINES	9-1	FUEL DRAIN MANIFOLD	14-76,14-95	GASKETS—GASOLINE ENGINES,	
FOUR WHEEL ANTILOCK BRAKE		FUEL FILL DOOR	23-48	FORM-IN-PLACE	9-1
SYSTEM	5-51	FUEL FILTER/FUEL PRESSURE		GASOLINE ENGINE, POWER STEERING	
FOUR-WHEEL DRIVE INDICATOR LAMP	8E-19,	REGULATOR	14-15,14-5	PUMP -	19-7
	8E-9	FUEL FILTER/WATER SEPARATOR	14-74,14-96	GASOLINE/OXYGENATE BLENDS	14-1
FOUR-WHEEL-DRIVE VEHICLE TOWING	0-26	FUEL GAUGE	8E-15,8E-5	GAUGE	8E-3
FRAME	13-4	FUEL GAUGE SENDING UNIT	14-10,14-18,14-5,	GAUGE, COOLANT TEMPERATURE	8E-14,8E-5
FRAME, GRILLE	23-21		14-72	GAUGE, FUEL	8E-15,8E-5
FRAME SERVICE	13-5	FUEL HEATER	14-72,14-98	GAUGE, OIL PRESSURE	8E-15,8E-6
FREQUENCY INTERFERENCE, RADIO	8F-7	FUEL HEATER RELAY	14-73,14-99	GAUGE SENDING UNIT, FUEL	14-10,14-18,14-5,
FRONT AXLES	3-19	FUEL HEATER TEST	14-81		14-72
FRONT BAND ADJUSTMENT	21-308	FUEL INJECTION PUMP	14-100,14-74	GAUGES LAMP, CHECK	8E-17,8E-8
FRONT BEARING, OUTPUT SHAFT	21-126,	FUEL INJECTION PUMP TEST	14-84	GAUGES, PRESSURE	22-3
	21-245	FUEL INJECTION PUMP TIMING	14-88	GEAR AND EXCITER RING, RING	3-100,3-135,
FRONT BUMPER	13-1	FUEL INJECTION SYSTEM-DIESEL			3-70
FRONT BUMPER AIR DAM	13-2	ENGINE	14-117	GEAR BACKLASH, DIFFERENTIAL	
FRONT BUMPER LOWER FASCIA	13-2	FUEL INJECTION SYSTEM-GASOLINE		BEARING PRELOAD	3-115,3-147,3-45,3-81
FRONT BUMPER UPPER FASCIA	13-1	ENGINES	14-27	GEAR CLEARANCE, SIDE	3-84
FRONT CLUTCH	21-157,21-182,21-279,21-305	FUEL INJECTOR RAIL—3.9L/5.2L/5.9L		GEAR CONTACT PATTERN ANALYSIS	3-118,
FRONT CRANKSHAFT OIL SEAL	9-111,9-77	ENGINES	14-18		3-150,3-48,3-82
FRONT DISC BRAKES	5-6	FUEL INJECTOR RAIL—8.0L V-10		GEAR, CRANKSHAFT	9-196
FRONT DOOR	23-31	ENGINE	14-20	GEAR DEPTH, 9 1/4 AXLE PINION	3-79
FRONT DOOR FORE/AFT	23-66	FUEL INJECTOR TEST	14-11,14-83	GEAR DEPTH, PINION	3-112,3-145,3-42
FRONT DOOR GLASS	23-34	FUEL INJECTORS	14-106,14-6,14-75	GEAR, FLYWHEEL RING	9-196
FRONT DOOR GLASS RUN LOWER		FUEL INJECTORS—3.9L/5.2L/5.9L		GEAR HOUSING	9-184
CHANNELS	23-35	ENGINES—PCM OUTPUT	14-41	GEAR HOUSING COVER	9-183
FRONT DOOR GLASS RUN		FUEL INJECTORS—8.0L ENGINE—PCM		GEAR LEAKAGE DIAGNOSIS, POWER	
WEATHERSTRIP	23-36	OUTPUT	14-41	STEERING	19-12
FRONT DOOR HINGE	23-32	FUEL INJECTOR(S)—ALL GAS ENGINES	14-21	GEAR NOISE	3-126,3-17,3-60,3-91
FRONT DOOR INNER BELT		FUEL LEVEL SENSOR—PCM INPUT	14-35	GEAR, PINION	3-101,3-136,3-36,3-71
WEATHERSTRIP	23-34	FUEL LINE LEAK TEST, HIGH-PRESSURE	14-85	GEAR, POWER STEERING	19-11,19-12,19-20,
FRONT DOOR IN/OUT	23-66	FUEL LINES, HIGH-PRESSURE	14-113,14-74		19-21
FRONT DOOR INSIDE HANDLE		FUEL PRESSURE LEAK DOWN TEST	14-8	GEAR RATIOS	21-46
ACTUATOR	23-34	FUEL PUMP	14-4	GEAR RATIOS, TRANSMISSION	21-211,21-3,
FRONT DOOR LATCH	23-33,23-65	FUEL PUMP AMPERAGE TEST	14-9		21-92
FRONT DOOR LATCH STRIKER	23-33	FUEL PUMP CAPACITY TEST	14-8	GEAR, RING	3-36
FRONT DOOR LOCK CYLINDER	23-32	FUEL PUMP INLET FILTER	14-17	GEAR SELECTOR INDICATOR	8E-27,8E-9
FRONT DOOR OUTER BELT		FUEL PUMP MODULE	14-16,14-4	GEAR SHIFT LEVER	19-25
WEATHERSTRIP	23-34	FUEL PUMP PRESSURE TEST—ALL		GEAR, SLIPS OUT OF	21-47
FRONT DOOR OUTSIDE HANDLE	23-32	ENGINES WITH PRESSURE TEST PORT	14-7	GEAR, STEERING	19-18
FRONT DOOR SECONDARY SEAL	23-37	FUEL PUMP RELAY	14-58	GEARSHIFT LINKAGE ADJUSTMENT	21-185,
FRONT DOOR TRIM PANEL	23-29	FUEL PUMP RELAY—PCM OUTPUT	14-42		21-308
FRONT DOOR UP/DOWN	23-66	FUEL PUMP RELAYS, ASD	14-51	GEARSHIFT LINKAGE AND THROTTLE	
FRONT DOOR UPPER CORNER SEAL	23-37	FUEL RAIL—3.9/5.2/5.9L ENGINES	14-6	CABLE	21-215,21-96
FRONT DOOR WATER DAM	23-30	FUEL RAIL—8.0L ENGINE	14-6	GEARSHIFT MECHANISM	21-211,21-92
FRONT DOOR WINDOW REGULATOR	23-35	FUEL REQUIREMENTS	14-1	GEARTRAIN, PLANETARY	21-183
FRONT FENDER, LEFT	23-25	FUEL REQUIREMENTS—DIESEL ENGINE	14-2	GEARTRAIN/OUTPUT SHAFT,	
FRONT FENDER, RIGHT	23-26	FUEL SHUTDOWN SOLENOID	14-108,14-75	PLANETARY	21-161,21-283,21-306
FRONT LIGHTING, 8W-50	8-1	FUEL SHUTDOWN SOLENOID RELAY	14-110,	GENERAL INFORMATION; CLUTCH	6-4
FRONT MOUNTS, ENGINE	9-176		14-76	GENERAL INFORMATION; DIFFERENTIAL	
FRONT OIL SEAL, CRANKSHAFT	9-43	FUEL SHUTDOWN SOLENOID TEST	14-84	AND DRIVELINE	3-126,3-17,3-60,3-91
FRONT OUTPUT SHAFT SEAL	21-362	FUEL SUPPLY RESTRICTIONS	14-78	GENERAL INFORMATION; EMISSION	
FRONT OUTPUT SHAFT SEAL—NV231HD	21-333	FUEL SYSTEM	14-68	CONTROL SYSTEMS	25-1,25-23
FRONT OUTPUT SHAFT SEAL—NV241LD	21-334	FUEL SYSTEM, AIR IN	14-77	GENERAL INFORMATION; ENGINE	9-7
FRONT PARKING BRAKE CABLE	5-32	FUEL SYSTEM DIAGNOSIS, LOW-		GENERAL INFORMATION; FRAME AND	
FRONT PROPELLER SHAFT	3-6	PRESSURE	14-76	BUMPERS	13-4
FRONT SEAL, CRANKSHAFT	9-194	FUEL SYSTEM, DIESEL	14-116	GENERAL INFORMATION; FUEL SYSTEM	14-1
FRONT SEAT BACK COVER—QUAD CAB	23-17	FUEL SYSTEM PRESSURE RELEASE		GENERAL INFORMATION; LAMPS	8L-1,8L-16
FRONT SEAT BACK—QUAD CAB	23-15	PROCEDURE	14-11	GENERAL INFORMATION; LUBRICATION	
FRONT SEAT BELT RETRACTOR—CLUB/		FUEL SYSTEM PRESSURE WARNING	14-74	AND MAINTENANCE	0-1
QUAD CAB	23-57	FUEL SYSTEM PRESSURE—GAS		GENERAL INFORMATION;	
FRONT SEAT CUSHION COVER—QUAD		ENGINES	14-26	TRANSMISSION AND TRANSFER CASE	21-389
CAB	23-18	FUEL SYSTEM PRESSURES—DIESEL		GENERAL INFORMATION, 8W-01	8-1
FRONT SEAT CUSHION—QUAD CAB	23-17	ENGINES	14-115	GENERAL SERVICE INFORMATION	23-1
FRONT SEAT RECLINER—QUAD CLUB	23-16	FUEL TANK	14-5,14-74,14-98	GENERATOR	8C-2,8C-6
FRONT SEAT RISER—QUAD CAB	23-14	FUEL TANK CAPACITY—DIESEL ENGINE	14-115	GENERATOR FIELD DRIVER (-)—PCM	
		FUEL TANK CAPACITY—GAS ENGINES	14-26	OUTPUT	14-124,14-42

Description	Group-Page	Description	Group-Page	Description	Group-Page
GENERATOR FIELD SOURCE (+)—PCM OUTPUT	14-124,14-42	HEATED MIRROR CONTROL	8N-1,8N-2	HOUSING DOOR, HEATER-A/C	24-44
GENERATOR LAMP—PCM OUTPUT	14-124,14-42	HEATED MIRROR SYSTEM	8N-1,8N-2,8N-3	HOUSING END PLUG	19-12
GENERATOR RATINGS	8C-8	HEATER AND AIR CONDITIONER	24-2	HOUSING, EXTENSION/ADAPTER	21-52
GLASS, FRONT DOOR	23-34	HEATER AND AIR CONDITIONER CONTROL	24-2	HOUSING FLUID LEAK DIAGNOSIS, CONVERTER	21-101,21-220
GLASS RUN LOWER CHANNELS, FRONT DOOR	23-35	HEATER CORE	24-45,24-7	HOUSING, GEAR	9-184
GLASS RUN WEATHERSTRIP, FRONT DOOR	23-36	HEATER (DIESEL), INTAKE MANIFOLD COVER—AIR INTAKE	11-14	HOUSING, HEATER-A/C	24-40
GLASS, SLIDING VENT	23-9	HEATER ELEMENTS, INTAKE MANIFOLD AIR	14-134	HOUSING, NV4500 CLUTCH	6-6
GLASS, STATIONARY	23-6	HEATER, FUEL	14-72,14-98	HOUSING SEAL AND BUSHING, EXTENSION/ADAPTER	21-53
GLOVE BOX	8E-33	HEATER, INTAKE MANIFOLD AIR	14-120	HOUSING YOKE BUSHING, REAR	21-7
GLOVE BOX COMPONENTS	8E-33	HEATER PERFORMANCE	24-14	HOUSING/AIR CLEANER ELEMENT, AIR CLEANER	14-132
GLOVE BOX LAMP AND SWITCH	8E-34	HEATER RELAY, FUEL	14-73,14-99	HOUSING/AIR CLEANER ELEMENT (FILTER)—3.9L/5.2L/5.9L ENGINES, AIR CLEANER	14-64
GLOVE BOX LATCH STRIKER	8E-34	HEATER RELAY TEST, INTAKE MANIFOLD AIR	14-129	HOUSING/AIR CLEANER ELEMENT (FILTER)—8.0L V-10 ENGINE, AIR CLEANER	14-65
GLOVE BOX OPENING UPPER TRIM STRIP	8E-34	HEATER RELAYS, INTAKE MANIFOLD AIR	14-134	HOUSING—NV4500, CLUTCH	6-13
GOVERNOR, ELECTRONIC	21-211,21-92	HEATER RELAYS—PCM OUTPUT, INTAKE MANIFOLD AIR	14-121	HUB AND AXLE BEARINGS	3-131,3-96
GOVERNOR PRESSURE CURVES	21-212,21-93	HEATER TEST, FUEL	14-81	HUB BEARING AND AXLE SHAFT	3-28
GOVERNOR PRESSURE SENSOR—PCM INPUT, TRANSMISSION	14-123,14-39	HEATER TEST, INTAKE MANIFOLD AIR	14-128	HUB BEARINGS, DISC BRAKE ROTOR WITH 5 STUDS	5-25
GOVERNOR PRESSURE SOLENOID—PCM OUTPUT	14-44	HEATER-A/C CONTROL	24-15,24-36	HUB/BEARING, DISC BRAKE ROTOR WITH 8 STUDS	5-25
GOVERNOR SOLENOID AND PRESSURE SENSOR	21-121,21-240	HEATER-A/C CONTROL KNOB	24-38	HUB/BEARING WITH 5 STUDS	2-18
GRAB HANDLE, A-PILLAR	23-54	HEATER-A/C HOUSING	24-40	HUB/BEARING WITH 8 STUDS	2-19
GRADING, PISTON	9-161	HEATER-A/C HOUSING DOOR	24-44	HYDRAULIC BOOSTER	5-11,5-20
GRADING PROCEDURE, PISTON	9-172	HEATER/FUEL SHUTDOWN SOLENOID, RELAY TEST—FUEL	14-82	HYDRAULIC BOOSTER BLEEDING	5-15
GRID, OUTSIDE MIRROR HEATING	8N-1,8N-3	HEATER—DIESEL ENGINE, BLOCK	7-47	HYDRAULIC BOOSTER, FLUSHING	5-14
GRILLE	23-21	HEATER—GASOLINE ENGINES, BLOCK	7-47	HYDRAULIC BRAKE BOOSTER	5-3
GRILLE FRAME	23-21	HEATERS, BLOCK	7-9	HYDRAULIC CONTROL SYSTEM	21-213,21-94
GROUND DISTRIBUTION, 8W-15	8-1	HEATING GRID, OUTSIDE MIRROR	8N-1,8N-3	HYDRAULIC CONTROL UNIT	5-52
GROUND, POWER	14-38	HEAVY DUTY SCHEDULE—A	0-14	HYDRAULIC FLUID, CLUTCH	6-3
GROUND—PCM INPUT, SIGNAL	14-39	HEAVY DUTY SCHEDULE—B	0-16	HYDRAULIC LINKAGE, CLUTCH	6-3
GUIDES AND SPRINGS, VALVES	9-46	HEIGHT SENSING PROPORTIONING VALVE	5-12,5-19,5-5	HYDRAULIC PRESSURE TEST	21-216,21-97
HANDLE ACTUATOR, CARGO DOOR INSIDE	23-43	HIGH AND LOW LIMITS	25-12	HYDRAULIC SCHEMATICS	21-187,21-310
HANDLE ACTUATOR, FRONT DOOR INSIDE	23-34	HIGH BEAM INDICATOR LAMP, HEADLAMP	8E-20,8E-9	HYDRAULIC TAPPETS	9-103,9-114,9-139,9-34,9-46,9-69,9-80,9-9
HANDLE, A-PILLAR GRAB	23-54	HIGH MOUNTED STOP LAMP (CHMSL) BULB, CENTER	8L-8	HYDROMETER TEST	8A-6
HANDLE, CARGO DOOR SHUTFACE	23-40	HIGH MOUNTED STOP LAMP (CHMSL), CENTER	8L-11	HYDROSTATIC LOCK	9-6
HANDLE ESCUTCHEON, TAILGATE	23-51	HIGH PRESSURE CUT-OFF SWITCH	24-22,24-25,24-7	IDENTIFICATION, ADAPTER	21-391
HANDLE, FRONT DOOR OUTSIDE	23-32	HIGH PRESSURE RELIEF VALVE	24-8	IDENTIFICATION, AXLE	3-15,3-59
HANDLE, OVERHEAD ASSIST	23-64	HIGH SPEED OPERATION, TIRE PRESSURE	22-3	IDENTIFICATION, FASTENER	Intro-7
HANDLE, PARK BRAKE RELEASE	8E-30	HIGH-PRESSURE FUEL LINE LEAK TEST	14-85	IDENTIFICATION (ID) LAMP BULBS, REAR	8L-9
HANDLE, TAILGATE LATCH	23-51	HIGH-PRESSURE FUEL LINES	14-113,14-74	IDENTIFICATION (ID) LAMP BULBS, SIDE	8L-8
HARD SHIFTING	21-4,21-46	HINGE, CARGO DOOR	23-39	IDENTIFICATION (ID) LAMPS, REAR	8L-12
HAZARD WARNING SWITCH, TURN SIGNAL SWITCH	8J-2	HINGE, FRONT DOOR	23-32	IDENTIFICATION (ID) LAMPS, SIDE	8L-12
HAZARD WARNING SYSTEM	8J-1	HINGE, HOOD	23-22	IDENTIFICATION NUMBER, VEHICLE	Intro-1
HAZARD WARNING SYSTEMS, TURN SIGNAL	8J-3	HITCH, TRAILER	13-7	IDENTIFICATION PLATE, EQUIPMENT	Intro-4
HD AXLE SEAL AND BEARING, 9 1/4	3-66	HOISTING, JUMP STARTING, TOWING	0-24	IDENTIFICATION, SECTION	8-5
HDC ENGINE, OXYGEN (O2S) SENSORS—5.9L	14-53	HOISTING RECOMMENDATIONS	0-26	IDENTIFICATION, TRANSFER CASE	21-330,21-360
HDC/MDC ENGINES, OXYGEN (O2S) SENSORS—8.0L	14-54	HOLDER OR STORAGE BIN, CUP	8E-32	IDENTIFICATION, TRANSMISSION	21-210,21-46,21-91
HEAD ASSEMBLY, CYLINDER	9-117	HOLE REPAIR, THREADED	Intro-10	IDLE AIR CONTROL (IAC) MOTOR—3.9L/5.2L/5.9L ENGINES	14-55,14-61
HEAD COMPONENTS—IN VEHICLE SERVICE, CYLINDER	9-32	HONING CYLINDER BORES	9-5	IDLE AIR CONTROL (IAC) MOTOR—3.9L/5.2L/5.9L ENGINES—PCM OUTPUT	14-42
HEAD COVER, CYLINDER	9-101,9-134,9-32,9-49,9-67	HOOD	23-21,23-65	IDLE AIR CONTROL (IAC) MOTOR—8.0L ENGINE	14-55,14-61
HEAD, CYLINDER	9-181,9-204,9-49	HOOD HINGE	23-22	IDLE AIR CONTROL (IAC) MOTOR—8.0L ENGINE—PCM OUTPUT	14-42
HEAD GASKET FAILURE DIAGNOSIS, ENGINE CYLINDER	9-7	HOOD LATCH	23-23,23-65	IDLE SPEED ADJUSTMENT	14-86
HEAD REMOVED, VALVES AND VALVE SPRINGS—CYLINDER	9-34	HOOD LATCH STRIKER	23-23,23-65	IFS FRONT SUSPENSION	2-13
HEADLAMP	8L-10,8L-7	HOOD RELEASE CABLE	23-23	IFS SUSPENSION, ALIGNMENT	2-3
HEADLAMP ADJUSTMENT	8L-5	HOOD SAFETY CATCH	23-23	IFS-STEERING LINKAGE	19-26
HEADLAMP ALIGNMENT	8L-4	HOOD SILENCER	23-22	IGNITION CIRCUIT SENSE—PCM INPUT	14-35
HEADLAMP ALIGNMENT PREPARATION	8L-4	HOOK, COAT	23-64	IGNITION COIL PACK TESTS—8.0L V-10 ENGINE	8D-8
HEADLAMP DIAGNOSIS	8L-2	HORN	8G-1,8G-3,8G-4	IGNITION COIL PACKS—8.0L ENGINE	8D-3
HEADLAMP HIGH BEAM INDICATOR LAMP	8E-20,8E-9	HORN RELAY; HORN SYSTEMS	8G-1,8G-2,8G-3	IGNITION COIL RESISTANCE—3.9L/5.2L/5.9L ENGINES	8D-29
HEADLAMP RELAY; POWER LOCK SYSTEMS	8P-3,8P-8	HORN RELAY; POWER LOCK SYSTEMS	8P-4,8P-8	IGNITION COIL RESISTANCE—8.0L V-10 ENGINE	8D-29
HEADLAMP RELAY; VEHICLE THEFT/SECURITY SYSTEMS	8Q-3,8Q-5	HORN RELAY; VEHICLE THEFT/SECURITY SYSTEMS	8Q-3,8Q-5	IGNITION COIL TEST—3.9L/5.2L/5.9L ENGINES	8D-7
HEADLAMP SWITCH; CHIME/BUZZER WARNING SYSTEMS	8U-2,8U-4	HORN SWITCH, DRIVER SIDE AIRBAG TRIM COVER	8M-7	IGNITION COIL—3.9L/5.2L/5.9L ENGINES—PCM OUTPUT	14-42
HEADLAMP SWITCH; INSTRUMENT PANEL SYSTEMS	8E-28	HORN SWITCH, DRIVER SIDE AIRBAG TRIM COVER	8M-7	IGNITION COILS—8.0L ENGINE—PCM OUTPUTS	14-43
HEADLINER	23-64	HORN SYSTEM	8G-1	IGNITION SWITCH	19-22
HEADS, CYLINDER	9-102,9-136,9-152,9-33,9-68,9-83	HORN/CIGAR LIGHTER/POWER OUTLET, 8W-41	8-1		
HEAT SHIELDS, EXHAUST	11-2,11-6	HOSE, WATER PUMP BYPASS	7-35		
HEAT SHIELDS—DIESEL	11-13	HOSES AND CLAMPS, COOLING SYSTEM	7-11		
		HOSES AND LINES, BRAKE	5-7		
		HOSES, BRAKE LINE	5-14		
		HOUSING ASSEMBLY, TIMING PIN	9-185		
		HOUSING BUSHING AND SEAL, EXTENSION	21-364		
		HOUSING BUSHING, OVERDRIVE	21-125,21-244		
		HOUSING COVER, GEAR	9-183		
		HOUSING, CRANKSHAFT REAR SEAL	9-195		

Description	Group-Page	Description	Group-Page	Description	Group-Page
IGNITION SWITCH AND KEY CYLINDER . . .	8D-25	INPUT, BATTERY VOLTAGE—PCM . . .	14-119,14-32	INSPECTION, VISUAL	14-125
IGNITION SWITCH AND KEY LOCK		INPUT, BRAKE SWITCH—PCM	14-119,14-33	INSPECTION, WATER PUMP	7-54
CYLINDER	8D-7	INPUT, CAMSHAFT POSITION SENSOR—		INSPECTION, WHEEL	22-8
IGNITION SWITCH, KEY-IN	8U-2,8U-4	3.9L/5.2L/5.9L ENGINES—PCM	14-33	INSPECTION—3.9L/5.2L/5.9L ENGINES,	
IGNITION SYSTEM—8.0L V-10 ENGINE . . .	8D-2	INPUT, CAMSHAFT POSITION SENSOR—		VISUAL	14-45
IGNITION SYSTEM—V-6/V-8 ENGINES . . .	8D-2	8.0L ENGINE—PCM	14-33	INSPECTION—8.0L ENGINE, VISUAL	14-48
IGNITION TIMING	8D-11,8D-28	INPUT, CRANKSHAFT POSITION		INSTALLATION, WHEEL	22-9
IGNITION-OFF DRAW FUSE	8F-1	SENSOR—3.9L/5.2L/5.9L ENGINES—		INSTRUMENT CLUSTER; CHIME/BUZZER	
IGNITION-OFF DRAW TEST	8A-10	PCM	14-33	WARNING SYSTEMS	8U-2,8U-5
ILLUMINATION LAMP, CLUSTER	8E-18,8E-8	INPUT, CRANKSHAFT POSITION		INSTRUMENT CLUSTER; INSTRUMENT	
IMPROPER CLUTCH RELEASE OR		SENSOR—8.0L ENGINE—PCM	14-34	PANEL SYSTEMS	8E-12,8E-2,8E-26
ENGAGEMENT	6-4	INPUT, ENGINE COOLANT		INSTRUMENT CLUSTER, 8W-40	8-1
INCH AXLE, 9 1/4	3-84	TEMPERATURE SENSOR—3.9L/5.2L/		INSTRUMENT PANEL	8E-2
INCH BRAKE, BRAKE SHOES – 11	5-28	5.9L ENGINES—PCM	14-34	INSTRUMENT PANEL ASSEMBLY	8E-35
INCH BRAKE, BRAKE SHOES – 13	5-30	INPUT, ENGINE COOLANT		INSTRUMENT PANEL TOP COVER	8E-37
INCORRECT FLUID LEVEL, EFFECTS OF . . .	21-210,	TEMPERATURE SENSOR—8.0L		INTAKE HEATER (DIESEL), INTAKE	
	21-91	ENGINE—PCM	14-34	MANIFOLD COVER—AIR	11-14
INDEPENDENT FRONT SUSPENSION		INPUT, ENGINE SPEED SENSOR—PCM . . .	14-119	INTAKE MANIFOLD	11-18
(IFS)	2-7	INPUT, FUEL LEVEL SENSOR—PCM	14-35	INTAKE MANIFOLD AIR HEATER	14-120
INDEX, 8W-02 COMPONENT	8-1	INPUT, IGNITION CIRCUIT SENSE—PCM . .	14-35	INTAKE MANIFOLD AIR HEATER	
INDICATOR, BUILT-IN TEST	8A-5	INPUT, INTAKE MANIFOLD AIR		ELEMENTS	14-134
INDICATOR, GEAR SELECTOR	8E-27,8E-9	TEMPERATURE SENSOR—3.9L/5.2L/		INTAKE MANIFOLD AIR HEATER RELAY	
INDICATOR LAMP	8E-3	5.9L ENGINES—PCM	14-35	TEST	14-129
INDICATOR LAMP, AIRBAG	8E-16,8E-7	INPUT, INTAKE MANIFOLD AIR		INTAKE MANIFOLD AIR HEATER RELAYS . .	14-134
INDICATOR LAMP, CRUISE-ON	8E-19,8E-9	TEMPERATURE SENSOR—8.0L		INTAKE MANIFOLD AIR HEATER	
INDICATOR LAMP, FOUR-WHEEL DRIVE . . .	8E-19,	ENGINE—PCM	14-35	RELAYS—PCM OUTPUT	14-121
	8E-9	INPUT, INTAKE MANIFOLD AIR		INTAKE MANIFOLD AIR HEATER TEST . . .	14-128
INDICATOR LAMP, HEADLAMP HIGH		TEMPERATURE SENSOR—PCM	14-119	INTAKE MANIFOLD AIR TEMPERATURE	
BEAM	8E-20,8E-9	INPUT, MANIFOLD ABSOLUTE		SENSOR; FUEL SYSTEM	14-133
INDICATOR LAMP, MALFUNCTION	8E-10,8E-21	PRESSURE (MAP) SENSOR—3.9L/		INTAKE MANIFOLD AIR TEMPERATURE	
INDICATOR LAMP (MIL), MALFUNCTION . . .	25-2	5.2L/5.9L ENGINES—PCM	14-36	SENSOR; IGNITION SYSTEM	8D-13,8D-23,8D-6
INDICATOR LAMP, OVERDRIVE-OFF	8E-10,8E-21	INPUT, MANIFOLD ABSOLUTE		INTAKE MANIFOLD AIR TEMPERATURE	
INDICATOR LAMP, SERVICE REMINDER . . .	8E-11,	PRESSURE (MAP) SENSOR—8.0L		SENSOR TEST	14-127
	8E-23	ENGINE—PCM	14-36	INTAKE MANIFOLD AIR TEMPERATURE	
INDICATOR LAMP, TURN SIGNAL;		INPUT, OIL PRESSURE SENSOR—PCM . . .	14-36	SENSOR—3.9L/5.2L/5.9L ENGINES . .	14-55,14-67
INSTRUMENT PANEL SYSTEMS	8E-12,8E-23	INPUT, OUTPUT SHAFT SPEED		INTAKE MANIFOLD AIR TEMPERATURE	
INDICATOR LAMP, TURN SIGNAL; TURN		SENSOR—PCM	14-36	SENSOR—3.9L/5.2L/5.9L ENGINES—	
SIGNAL AND HAZARD WARNING		INPUT, OVERDRIVE/OVERRIDE		PCM INPUT	14-35
SYSTEMS	8J-3	SWITCH—PCM	14-36	INTAKE MANIFOLD AIR TEMPERATURE	
INDICATOR LAMP, UPSHIFT	8E-12,8E-24	INPUT, OVERDRIVE/OVERRIDE		SENSOR—8.0L ENGINE	14-56,14-67
INDICATOR LAMP—PCM OUTPUT,		SWITCH—PCM	14-124	INTAKE MANIFOLD AIR TEMPERATURE	
MALFUNCTION	14-124,14-43	INPUT, OXYGEN SENSOR (O2S)—3.9L/		SENSOR—8.0L ENGINE—PCM INPUT . .	14-35
INDICATOR (SRI) LAMP, SERVICE		5.2L/5.9L LDC ENGINES—PCM	14-36	INTAKE MANIFOLD AIR TEMPERATURE	
REMINDER	25-1	INPUT, OXYGEN SENSOR (O2S)—8.0L		SENSOR—PCM INPUT	14-119
INDICATOR (SRI) LAMP—PCM OUTPUT,		MDC ENGINES—PCM	14-38	INTAKE MANIFOLD COVER—AIR INTAKE	
SERVICE REMINDER	14-44	INPUT, OXYGEN SENSOR (O2S)—HDC		HEATER (DIESEL)	11-14
INDICATORS, TREAD WEAR	22-3	ENGINES—PCM	14-37	INTAKE MANIFOLD DIAGNOSIS	11-3
INFLATION PRESSURES, TIRE	22-2	INPUT, PARK/NEUTRAL POSITION		INTAKE MANIFOLD LEAKAGE DIAGNOSIS . .	9-7
INITIAL OPERATION, POWER STEERING		SWITCH—PCM	14-122	INTAKE MANIFOLD V-10	11-8
PUMP	19-5	INPUT, PTO SWITCH SENSE—PCM	14-39	INTAKE MANIFOLD—V-10 ENGINE	11-3
INJECTION PUMP, AIR	25-24,25-25	INPUT, SENSOR RETURN—PCM	14-39	INTAKE MANIFOLD—V-6 AND V-8	
INJECTION PUMP AIR FILTER—8.0L		INPUT, SIGNAL GROUND—PCM	14-39	ENGINES	11-3,11-6
V-10 ENGINE, AIR	25-26	INPUT, SPEED CONTROL SWITCHES—		INTERCOOLER—CHARGE AIR COOLER . . .	11-3
INJECTION PUMP, FUEL	14-100,14-74	PCM	14-122,14-39	INTERFERENCE, RADIO FREQUENCY . . .	8F-7
INJECTION PUMP TEST, FUEL	14-84	INPUT, THROTTLE POSITION SENSOR		INTERIOR LAMPS	8L-16
INJECTION PUMP TIMING, FUEL	14-88	(TPS)—3.9L/5.2L/5.9L ENGINES—PCM . .	14-39	INTERIOR LIGHTING, 8W-44	8-1
INJECTION SYSTEM OPERATION, AIR	25-23	INPUT, THROTTLE POSITION SENSOR		INTERIOR MIRRORS	8T-4
INJECTION SYSTEM-DIESEL ENGINE,		(TPS)—8.0L ENGINE—PCM	14-39	INTERIOR TRIM PANELS	23-21
FUEL	14-117	INPUT, THROTTLE POSITION SENSOR—		INTERLOCK, COLUMN SHIFT	8D-28
INJECTION SYSTEM-GASOLINE		PCM	14-122	INTERMEDIATE AXLE SHAFT	3-35
ENGINES, FUEL	14-27	INPUT, TRANSMISSION GOVERNOR		INTERMITTENT AND POOR	
INJECTION SYSTEM-HDC GAS ENGINES,		PRESSURE SENSOR—PCM	14-123,14-39	CONNECTIONS	8-8
AIR	25-23	INPUT, TRANSMISSION PARK/NEUTRAL		INTERMITTENT WIPE RELAY	8K-3,8K-6,8K-9
INJECTOR RAIL—3.9L/5.2L/5.9L		SWITCH—PCM	14-39	INTERNATIONAL SYMBOLS	0-1
ENGINES, FUEL	14-18	INPUT, TRANSMISSION TEMPERATURE		INTERNATIONAL VEHICLE CONTROL	
INJECTOR RAIL—8.0L V-10 ENGINE,		SENSOR—PCM	14-122,14-39	AND DISPLAY SYMBOLS	Intro-6
FUEL	14-20	INPUT, VEHICLE SPEED	8H-2	INTRODUCTION: AUDIO SYSTEMS	8F-1
INJECTOR TEST, FUEL	14-11,14-83	INPUT, VEHICLE SPEED AND		INTRODUCTION: BATTERY	8A-1
INJECTORS, FUEL	14-106,14-6,14-75	DISTANCE—PCM	14-123,14-39	INTRODUCTION: CHIME/BUZZER	
INJECTORS—3.9L/5.2L/5.9L ENGINES—		INPUT, WATER-IN-FUEL SENSOR—PCM . .	14-123	WARNING SYSTEMS	8U-1
PCM OUTPUT, FUEL	14-41	INPUT, WATER-IN-FUEL WARNING		INTRODUCTION: ELECTRICALLY HEATED	
INJECTORS—8.0L ENGINE—PCM		LAMP—PCM	14-123	SYSTEMS	8N-1
OUTPUT, FUEL	14-41	INSIDE HANDLE ACTUATOR, CARGO		INTRODUCTION: EMISSION CONTROL	
INJECTOR(S)—ALL GAS ENGINES, FUEL . .	14-21	DOOR	23-43	SYSTEMS	25-1
INLET FILTER, FUEL PUMP	14-17	INSIDE HANDLE ACTUATOR, FRONT		INTRODUCTION: FUEL SYSTEM	14-1,14-117,
INNER BELT WEATHERSTRIP, FRONT		DOOR	23-34	14-29	
IN/OUT, FRONT DOOR	23-66	INSPECTION (ENGINE OIL LEAKS IN		INTRODUCTION: HORN SYSTEMS	8G-1
INPUT, AIR CONDITIONING (A/C)		GENERAL)	9-8	INTRODUCTION: IGNITION SYSTEM	8D-2
CONTROLS—PCM	14-119,14-32	INSPECTION FOR REAR SEAL AREA		INTRODUCTION: INSTRUMENT PANEL	
INPUT AND OUTPUT, DATA LINK		LEAKS	9-9	SYSTEMS	8E-2
CONNECTOR—PCM	14-124,14-40	INSPECTION OF JOURNALS,		INTRODUCTION: LUBRICATION AND	
INPUT, AUTOMATIC SHUTDOWN (ASD)		CRANKSHAFT	9-49	MAINTENANCE	0-1,0-14,0-19,0-4,0-9
RELAY SENSE—PCM	14-32	INSPECTION, PISTON AND CONNECTING		INTRODUCTION: OVERHEAD CONSOLE	
INPUT, AUTOMATIC SHUTDOWN (ASD)		ROD	9-49	SYSTEMS	8V-1
SENSE—PCM	14-119	INSPECTION, SHIFT COVER	21-80	INTRODUCTION: PASSIVE RESTRAINT	
INPUT, BATTERY TEMPERATURE		INSPECTION, TRANSFER CASE		SYSTEMS	8M-1,8M-13
SENSOR—PCM	14-119,14-32	CLEANING	21-352,21-384	INTRODUCTION: POWER LOCK	
		INSPECTION, UNSCHEDULED	0-14,0-19,0-4,0-9	SYSTEMS	8P-1

Description	Group-Page	Description	Group-Page	Description	Group-Page
INTRODUCTION; POWER MIRROR SYSTEMS	8T-1,8T-4	LAMP, CARGO	8L-12	LATCH, CARGO DOOR UPPER	23-41
INTRODUCTION; POWER SEAT SYSTEMS	8R-1	LAMP, CHECK GAUGES	8E-17,8E-8	LATCH, FRONT DOOR	23-33,23-65
INTRODUCTION; POWER WINDOW SYSTEMS	8S-1	LAMP (CHMSL) BULB, CENTER HIGH MOUNTED STOP	8L-8	LATCH HANDLE, TAILGATE	23-51
INTRODUCTION; SPEED CONTROL SYSTEM	8H-1	LAMP (CHMSL), CENTER HIGH MOUNTED STOP	8L-11	LATCH, HOOD	23-23,23-65
INTRODUCTION; STARTING SYSTEMS	8B-1	LAMP, CLUSTER ILLUMINATION	8E-18,8E-8	LATCH SOLENOID, SEAT BELT RETRACTOR	8M-14,8M-16
INTRODUCTION; TURN SIGNAL AND HAZARD WARNING SYSTEMS	8J-1,8J-3	LAMP, CRUISE-ON INDICATOR	8E-19,8E-9	LATCH STRIKER, FRONT DOOR	23-33
INTRODUCTION; VEHICLE THEFT/SECURITY SYSTEMS	8Q-1	LAMP DIAGNOSIS	8L-1	LATCH STRIKER, GLOVE BOX	8E-34
INTRODUCTION; WIPER AND WASHER SYSTEMS	8K-1	LAMP, DOME	8L-13	LATCH STRIKER, HOOD	23-23,23-65
INTRODUCTION; WIRING DIAGRAMS	8-1	LAMP, FOG	8L-10,8L-3,8L-7	LATCH STRIKER, TAILGATE	23-52
INTRODUCTION, NV231HD AND NV241LD	21-330	LAMP, FOUR-WHEEL DRIVE INDICATOR	8E-19, 8E-9	LATCH, TAILGATE	23-52
INTRODUCTION, NV241HD	21-358	LAMP, HEADLAMP HIGH BEAM INDICATOR	8E-20,8E-9	LCD ENGINES, OXYGEN (O2S) SENSORS—3.9L/5.2L/5.9L	14-53
INTRODUCTION, NV4500	21-44	LAMP, INDICATOR	8E-3	LD AXLE SEAL AND BEARING, 9 1/4	3-66
JAMB SWITCH, DOOR; PASSIVE RESTRAINT SYSTEMS	8M-14,8M-16	LAMP, LICENSE PLATE	8L-13	LDC ENGINES—PCM INPUT, OXYGEN SENSOR (O2S)—3.9L/5.2L/5.9L	14-36
JAMB SWITCH, DOOR; VEHICLE THEFT/SECURITY SYSTEMS	8Q-2,8Q-4	LAMP, LOW FUEL WARNING	8E-20,8E-9	LDC/HDC ENGINES, OXYGEN SENSORS—3.9L/5.2L/5.9L	14-63
JAMB SWITCH, DRIVER DOOR	8U-2,8U-3	LAMP, LOW WASHER FLUID WARNING	8E-20, 8E-9	LEAF SPRING	2-25
JOINT ANGLE, PROPELLER SHAFT	3-2	LAMP, MALFUNCTION INDICATOR	8E-10,8E-21	LEAF SPRINGS, ADJUSTMENT AT AXLE WITH	3-12
JOINT, DOUBLE CARDAN	3-9	LAMP (MIL), MALFUNCTION INDICATOR	25-2	LEAK DETECTION PUMP (LDP)	25-16,25-20, 25-22
JOINT, LOWER BALL	2-11,2-8	LAMP MODULE (DRLM), DAYTIME RUNNING	8L-15	LEAK DIAGNOSIS, CONVERTER HOUSING FLUID	21-101,21-220
JOINT MOLDING, ROOF	23-45	LAMP, OVERDRIVE-OFF INDICATOR	8E-10,8E-21	LEAK DOWN TEST, FUEL PRESSURE	14-8
JOINT, SINGLE CARDAN UNIVERSAL	3-8	LAMP, OVERHEAD CONSOLE READING	8L-14	LEAK TEST, HIGH-PRESSURE FUEL LINE	14-85
JOINT, UPPER BALL	2-11,2-8	LAMP, PARK AND TURN SIGNAL	8L-8	LEAKAGE DIAGNOSIS, INTAKE MANIFOLD	9-7
JOURNAL CLEARANCE, CONNECTING ROD BEARING AND CRANKSHAFT	9-172	LAMP, PARK, TURN SIGNAL AND SIDE MARKER	8L-11	LEAKAGE DIAGNOSIS, POWER STEERING GEAR	19-12
JOURNALS, CRANKSHAFT	9-83	LAMP, READING AND COURTESY	8V-2	LEAKAGE DIAGNOSIS, PUMP	19-5
JOURNALS, CRANKSHAFT INSPECTION OF	9-49	LAMP, RED BRAKE WARNING	5-10,5-2	LEAKAGE TEST, CYLINDER COMBUSTION PRESSURE	9-8
JUMP STARTING PROCEDURE	0-24	LAMP, ROOF CLEARANCE	8L-11	LEAKS, INSPECTION FOR REAR SEAL AREA	9-9
JUMP STARTING, TOWING AND HOISTING	0-24	LAMP, SEAT BELT REMINDER	8E-10,8E-22	LEAKS, REFRIGERANT SYSTEM	24-22
JUNCTION BLOCK	8E-36,8E-4	LAMP, SECURITY; INSTRUMENT PANEL SYSTEMS	8E-11,8E-22	LEAKS, REPAIRING	22-6
JUNCTION BLOCK, 8W-12	8-1	LAMP, SECURITY; VEHICLE THEFT/SECURITY SYSTEMS	8Q-3	LEAKS, TESTING COOLING SYSTEM	7-19
KEEPER, SLIDING BACKLITE LATCH	23-10	LAMP SERVICE	8L-10	LEAKS, WATER	23-2
KEY CYLINDER, IGNITION SWITCH	8D-25	LAMP, SERVICE REMINDER INDICATOR	8E-11, 8E-23	LEFT FRONT FENDER	23-25
KEY LOCK CYLINDER, IGNITION SWITCH	8D-7	LAMP, SERVICE REMINDER INDICATOR (SRI)	25-1	LEVEL AND CAPACITY, LUBRICANT	21-46
KEY-IN IGNITION SWITCH	8U-2,8U-4	LAMP SWITCH, FOG	8E-29	LEVEL AND CAPACITY, TRANSMISSION LUBRICANT	21-1
KEYLESS ENTRY RECEIVER, REMOTE	8P-3	LAMP SWITCH REPLACEMENT, BACKUP	21-47	LEVEL, BRAKE FLUID	5-14
KEYLESS ENTRY SYSTEM, POWER LOCK SYSTEM AND REMOTE	8P-4	LAMP SWITCH, STOP; BRAKES	5-10,5-17,5-2, 5-39,5-48	LEVEL CHECK, FLUID	21-115,21-234
KEYLESS ENTRY SYSTEM, REMOTE	8P-1	LAMP SWITCH, STOP; SPEED CONTROL SYSTEM	8H-2,8H-3,8H-7	LEVEL CHECK—ROUTINE, COOLANT	7-26
KEYLESS ENTRY TRANSMITTER	8P-7	LAMP SYSTEMS	8L-15	LEVEL CHECK—SERVICE, COOLANT	7-26
KEYLESS ENTRY TRANSMITTER BATTERY REPLACEMENT, REMOTE	8P-7	LAMP, TRANSMISSION OIL TEMPERATURE WARNING	8E-11,8E-23	LEVEL, EFFECTS OF INCORRECT FLUID	21-210, 21-91
KEYLESS ENTRY TRANSMITTER PROGRAMMING, REMOTE	8P-7	LAMP, TURN SIGNAL	8J-3	LEVEL, LOW LUBRICANT	21-3,21-47
KEYLESS ENTRY TRANSMITTER, REMOTE	8P-3,8P-6	LAMP, TURN SIGNAL INDICATOR; INSTRUMENT PANEL SYSTEMS	8E-12,8E-23	LEVEL, RECOMMENDED LUBRICANT AND FILL	21-331,21-360,21-391
KNEE BLOCKER, STEERING COLUMN OPENING COVER	8E-30	LAMP, TURN SIGNAL INDICATOR; SIGNAL AND HAZARD WARNING SYSTEMS	8J-3	LEVEL, REFRIGERANT OIL	24-24
KNOB, HEATER-A/C CONTROL	24-38	LAMP, UPSHIFT INDICATOR	8E-12,8E-24	LEVEL SENSOR, WASHER FLUID	8K-4
KNOCK, LOW SPEED	3-127,3-17,3-61,3-92	LAMP, WAIT-TO-START	8E-12,8E-24	LEVEL SENSOR—PCM INPUT, FUEL	14-35
KNUCKLE, STEERING	2-16,2-9	LAMP WARNING LAMP—PCM OUTPUT, WAIT-TO-START	14-125	LEVEL—AERATION, LOW COOLANT	7-25
KNUCKLE—216 FBI AXLE, STEERING	3-29	LAMP, WATER-IN-FUEL	8E-12,8E-24	LEVER AND LINKAGE, SHIFT	21-389
KNUCKLE—248 FBI AXLE, STEERING	3-29	LAMP—PCM INPUT, WATER-IN-FUEL WARNING	14-123	LEVER, GEAR SHIFT	19-25
LABEL, VECI; FUEL SYSTEM	14-26,14-68	LAMP—PCM OUTPUT, GENERATOR	14-124, 14-42	LEVER, SHIFT	21-333,21-362
LABEL, VECI; IGNITION SYSTEM	8D-28	LAMP—PCM OUTPUT, MALFUNCTION INDICATOR	14-124,14-43	LEVERS AND PUSH RODS, ROCKER	9-180
LABEL, VEHICLE EMISSION CONTROL INFORMATION (VECI)	25-18	LAMP—PCM OUTPUT, OVERDRIVE	14-124, 14-43	LEVERS, ROCKER	9-201
LABEL, VEHICLE SAFETY CERTIFICATION	Intro-1	LAMP—PCM OUTPUT, SERVICE REMINDER INDICATOR (SRI)	14-44	LICENSE PLATE LAMP	8L-13
LAMP, ABS WARNING	5-53	LAMP—PCM OUTPUT, TRANSMISSION TEMPERATURE WARNING	14-125	LICENSE PLATE LAMP BULB	8L-9
LAMP, AIRBAG INDICATOR	8E-16,8E-7	LAMP—PCM OUTPUT, WAIT-TO-START LAMP WARNING	14-125	LID, CONSOLE	23-60
LAMP ALIGNMENT, FOG	8L-6	LAMPS, BRAKE WARNING	5-47	LIGHT DUTY SCHEDULE—A	0-4
LAMP AND SWITCH, GLOVE BOX	8E-34	LAMPS, DAYTIME RUNNING	8L-1	LIGHT DUTY SCHEDULE—B	0-6
LAMP, ANTI-LOCK BRAKE SYSTEM	8E-17,8E-7	LAMPS, EXTERIOR	8L-16	LIGHTER AND POWER OUTLET, CIGAR	8E-25
LAMP, BRAKE WARNING	8E-17,8E-7	LAMPS, INTERIOR	8L-16	LIGHTER, CIGAR	8E-18,8E-8
LAMP BULB, CARGO	8L-8	LAMPS, REAR IDENTIFICATION (ID)	8L-12	LIGHTER/POWER OUTLET, 8W-41 HORN/CIGAR	8-1
LAMP BULB, DOME	8L-9	LAMPS, SIDE IDENTIFICATION (ID)	8L-12	LIGHTING, 8W-44 INTERIOR	8-1
LAMP BULB, LICENSE PLATE	8L-9	LAMPS—CHASSIS CAB, TAIL, STOP, TURN SIGNAL AND BACK-UP	8L-12	LIGHTING, 8W-50 FRONT	8-1
LAMP BULB, OVERHEAD CONSOLE READING	8L-9	LAMPS—PICKUP, TAIL, STOP, TURN SIGNAL AND BACK-UP	8L-12	LIGHTING, 8W-51 REAR	8-1
LAMP BULB, READING AND COURTESY	8V-7	LATCH AND KEEPER, SLIDING BACKLITE	23-10	LIMITS, HIGH AND LOW	25-12
LAMP BULB, ROOF CLEARANCE	8L-8	LATCH, CARGO DOOR LOWER	23-42	LINE AND HOSES, BRAKE	5-14
LAMP BULB SERVICE	8L-7			LINE, BRAKE	5-16
LAMP BULB, UNDERHOOD	8L-9			LINE COUPLER, REFRIGERANT	24-24,24-9
LAMP BULB—CAB CHASSIS, TAIL, STOP, TURN SIGNAL AND BACK-UP	8L-9			LINE LEAK TEST, HIGH-PRESSURE FUEL	14-85
LAMP BULB—PICKUP, TAIL, STOP, TURN SIGNAL AND BACK-UP	8L-8			LINE, LIQUID	24-32
LAMP BULBS, REAR IDENTIFICATION (ID)	8L-9			LINE, REFRIGERANT	24-8
LAMP BULBS, SIDE IDENTIFICATION (ID)	8L-8			LINE, SUCTION AND DISCHARGE	24-26

Description	Group-Page	Description	Group-Page	Description	Group-Page
LINKAGE ADJUSTMENT, GEARSHIFT	21-185, 21-308	MAINTENANCE SCHEDULES—DIESEL ENGINE VEHICLES	0-19	MDC ENGINES—PCM INPUT, OXYGEN SENSOR (O2S)—8.0L	14-38
LINKAGE ADJUSTMENT, SHIFT	21-355,21-386	MAINTENANCE SCHEDULES—HEAVY DUTY VEHICLES	0-14	MEASUREMENT, CAB-CHASSIS CASTER CORRECTION	2-5
LINKAGE ADJUSTMENT—DIESEL ENGINE, THROTTLE	14-93	MAINTENANCE SCHEDULES—LIGHT DUTY VEHICLES	0-4	MEASUREMENT PREPARATION, DRIVELINE ANGLE	3-4
LINKAGE AND PIVOT, WIPER	8K-2,8K-8	MAINTENANCE SCHEDULES—MEDIUM DUTY VEHICLES	0-9	MEASUREMENT, PROPELLER SHAFT ANGLE	3-5
LINKAGE AND THROTTLE CABLE, GEARSHIFT	21-215,21-96	MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR	8E-10,8E-21	MEASURING TIMING CHAIN STRETCH	9-129, 9-61,9-95
LINKAGE, CLUTCH	6-13	MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR TEST—3.9L/5.2L/5.9L ENGINES	14-51	MEASURING WITH PLASTIGAGE	9-2
LINKAGE, CLUTCH HYDRAULIC	6-3	MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR TEST—8.0L ENGINE	14-52	MECHANISM, GEARSHIFT	21-211,21-92
LINKAGE, IFS-STEERING	19-26	MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR—3.9L/5.2L/5.9L ENGINES	14-62	MEDIUM DUTY SCHEDULE—A	0-9
LINKAGE, LINK/COIL-STEERING	19-28	MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR—3.9L/5.2L/5.9L ENGINES—PCM INPUT	14-36	MEDIUM DUTY SCHEDULE—B	0-11
LINKAGE, SHIFT	21-409	MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR—8.0L ENGINE	14-62	METRIC SYSTEM	Intro-10
LINKAGE, SHIFT LEVER	21-389	MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR—8.0L ENGINE—PCM INPUT	14-36	MILE, TIRE REVOLUTIONS PER MINIMUM AIR FLOW CHECK	22-6
LINKAGE, STEERING	19-26,19-27,19-29,19-30	MANIFOLD AIR HEATER ELEMENTS, INTAKE	14-134	PROCEDURE, THROTTLE BODY	14-57
LINKAGE—IFS SUSPENSION, STEERING	19-26	MANIFOLD AIR HEATER, INTAKE	14-120	MIRROR, AUTOMATIC DAY/NIGHT	8T-4,8T-5
LINKAGE—LINK/COIL SUSPENSION, STEERING	19-28	MANIFOLD AIR HEATER RELAY TEST, INTAKE	14-129	MIRROR CONTROL, HEATED	8N-1,8N-2
LINK/COIL, FRONT SUSPENSION	2-14	MANIFOLD AIR HEATER RELAYS, INTAKE	14-134	MIRROR FLAG COVER	23-29
LINK/COIL SUSPENSION	2-22	MANIFOLD AIR HEATER RELAYS—PCM OUTPUT, INTAKE	14-121	MIRROR HEATING GRID, OUTSIDE	8N-1,8N-3
LINK/COIL SUSPENSION, ALIGNMENT	2-4	MANIFOLD AIR HEATER TEST, INTAKE	14-128	MIRROR, LOW MOUNTED SIDE VIEW	23-29
LINK/COIL-STEERING LINKAGE	19-28	MANIFOLD AIR TEMPERATURE SENSOR, INTAKE: FUEL SYSTEM	14-133	MIRROR, POWER	8T-1,8T-3
LIQUID LINE	24-32	MANIFOLD AIR TEMPERATURE SENSOR, INTAKE: IGNITION SYSTEM	8D-13,8D-23,8D-6	MIRROR, REARVIEW	23-63
LOAD TEST	8A-8	MANIFOLD AIR TEMPERATURE SENSOR TEST, INTAKE	14-127	MIRROR, SIDEVIEW	23-28
LOAD VALVE	25-13	MANIFOLD AIR TEMPERATURE SENSOR—3.9L/5.2L/5.9L ENGINES, INTAKE	14-55,14-67	MIRROR SUPPORT BRACKET, REARVIEW	23-63
LOCATION, RWAL COMPONENT	5-45	MANIFOLD AIR TEMPERATURE SENSOR—8.0L ENGINE—PCM INPUT, INTAKE	14-35	MIRROR SWITCH, POWER	8T-1,8T-2
LOCATIONS, 8W-90 CONNECTOR	8-1	MANIFOLD AIR TEMPERATURE SENSOR—PCM INPUT, INTAKE	14-119	MIRROR SYSTEM, AUTOMATIC DAY/NIGHT	8T-4
LOCATIONS, 8W-95 SPLICE	8-1	MANIFOLD COVER—AIR INTAKE HEATER (DIESEL), INTAKE	11-14	MIRROR SYSTEM, HEATED	8N-1,8N-2,8N-3
LOCATIONS, CONNECTOR/GROUND	8-1	MANIFOLD DIAGNOSIS, INTAKE	11-13	MIRROR SYSTEM, POWER	8T-1,8T-2
LOCATIONS, SPLICE	8-1,8-7	MANIFOLD, EXHAUST	11-18	MIRRORS, 8W-62 POWER	8-1
LOCK CYLINDER, FRONT DOOR	23-32	MANIFOLD, FUEL DRAIN	14-76,14-95	MIRRORS, EXTERIOR	8T-1
LOCK CYLINDER, IGNITION SWITCH AND KEY	8D-7	MANIFOLD, INTAKE	11-18	MIRRORS, INTERIOR	8T-4
LOCK CYLINDER SWITCH, DOOR	8Q-3,8Q-4	MANIFOLD LEAKAGE DIAGNOSIS, INTAKE	9-7	MISALIGNMENT	6-8
LOCK, HYDROSTATIC	9-6	MANIFOLD V-10, EXHAUST	11-11	MODE, CIRCUIT ACTUATION TEST	25-3
LOCK MOTOR, POWER	8P-3,8P-6,8P-8	MANIFOLD V-10, INTAKE	11-8	MODE DOOR VACUUM ACTUATOR	24-42
LOCK SWITCH, POWER	8P-3,8P-4,8P-7	MANIFOLD—DIESEL, EXHAUST	11-13	MODE, POWER-UP	8Q-2
LOCK SYSTEM AND REMOTE KEYLESS ENTRY SYSTEM, POWER	8P-4	MANIFOLD—V-10 ENGINE, EXHAUST	11-3	MODE, SEAT BELT CONTROL SYSTEM TEST	8M-14
LOCK SYSTEM, POWER	8P-1,8P-4	MANIFOLD—V-6 AND V-8 ENGINES, ENGINE EXHAUST	11-10,11-3	MODE, STATE DISPLAY TEST	25-3
LOCKS, 8W-61 POWER DOOR	8-1	MANIFOLD—V-6 AND V-8 ENGINES, INTAKE	11-3,11-6	MODES OF OPERATION	14-29
LOCK-UP TORQUE CONVERTER, ELECTRONIC	21-210,21-91	MANIFOLD V-10, EXHAUST	11-11	MODULE, 8W-45 CENTRAL TIMER	8-1
LOW COOLANT LEVEL—AERATION	7-25	MANIFOLD V-10, INTAKE	11-8	MODULE, AIRBAG	8M-2,8M-5
LOW FUEL WARNING LAMP	8E-20,8E-9	MANIFOLD—DIESEL, EXHAUST	11-13	MODULE, AIRBAG CONTROL	8M-3,8M-9
LOW LIMITS, HIGH	25-12	MANIFOLD—V-10 ENGINE, EXHAUST	11-3	MODULE, CENTRAL TIMER: CHIME/BUZZER WARNING SYSTEMS	8U-1,8U-3
LOW LUBRICANT LEVEL	21-3,21-47	MANIFOLD—V-6 AND V-8 ENGINES, INTAKE	11-3,11-6	MODULE, CENTRAL TIMER: HORN SYSTEMS	8G-2
LOW MOUNTED SIDE VIEW MIRROR	23-29	MANIFOLD—V-6 AND V-8 ENGINES, INTAKE	11-3,11-6	MODULE, CENTRAL TIMER: LOCK SYSTEMS	8P-2,8P-5
LOW PRESSURE CYCLING CLUTCH SWITCH	24-22,24-32,24-8	MANIFOLD V-10, EXHAUST	11-11	MODULE, CENTRAL TIMER: VEHICLE THEFT/SECURITY SYSTEMS	8Q-2
LOW SPEED KNOCK	3-127,3-17,3-61,3-92	MANIFOLD V-10, INTAKE	11-8	MODULE, CENTRAL TIMER: WIPER AND WASHER SYSTEMS	8K-3
LOW WASHER FLUID WARNING LAMP	8E-20, 8E-9	MANIFOLD—DIESEL, EXHAUST	11-13	MODULE, COMPASS AND THERMOMETER DISPLAY	8V-2,8V-7
LOWER BALL JOINT	2-11,2-8	MANIFOLD—V-6 AND V-8 ENGINES, INTAKE	11-3,11-6	MODULE (DRLM), DAYTIME RUNNING LAMP	8L-15
LOWER CHANNELS, FRONT DOOR GLASS RUN	23-35	MANIFOLD V-10, EXHAUST	11-11	MODULE, FUEL PUMP	14-16,14-4
LOWER FASCIA, FRONT BUMPER	13-2	MANIFOLD V-10, INTAKE	11-8	MODULE, FUEL TANK	14-72,14-98
LOWER LATCH, CARGO DOOR	23-42	MANIFOLD—DIESEL, EXHAUST	11-13	MODULE (PCM), POWERTRAIN CONTROL: FUEL SYSTEM	14-31,14-63
LOWER STRIKER, CARGO DOOR	23-42	MANIFOLD—V-10 ENGINE, EXHAUST	11-3	MODULE (PCM), POWERTRAIN CONTROL: IGNITION SYSTEM	8D-25
LOWER SUSPENSION ARM	2-10,2-16	MANIFOLD—V-6 AND V-8 ENGINES, INTAKE	11-3,11-6	MODULE (PCM)—DIESEL, POWERTRAIN CONTROL	14-118
LOW-PRESSURE FUEL SYSTEM DIAGNOSIS	14-76	MANIFOLD V-10, EXHAUST	11-11	MODULE, POWERTRAIN CONTROL: IGNITION SYSTEM	8D-2
LUBRICANT AND FILL LEVEL, RECOMMENDED	21-331,21-360,21-391	MANIFOLD V-10, INTAKE	11-8	MODULE, POWERTRAIN CONTROL: SPEED CONTROL SYSTEM	8H-2
LUBRICANT CHANGE	3-130,3-24,3-64,3-95	MANIFOLD—DIESEL, EXHAUST	11-13	MODULE, SEATBELT CONTROL TIMER	8M-13, 8M-15
LUBRICANT LEVEL AND CAPACITY	21-46	MANIFOLD—V-10 ENGINE, EXHAUST	11-3	MODULE, SEATBELT TIMER CONTROL	8M-17
LUBRICANT LEVEL AND CAPACITY, TRANSMISSION	21-1	MANIFOLD—V-6 AND V-8 ENGINES, INTAKE	11-3,11-6	MOLDING, ROOF JOINT	23-45
LUBRICANT LEVEL, LOW	21-3,21-47	MANIFOLD V-10, EXHAUST	11-11	MOLDINGS, BODY SIDE	23-47
LUBRICANT RECOMMENDATIONS, PARTS	0-1	MANIFOLD V-10, INTAKE	11-8	MONITORED SYSTEMS	25-9
LUBRICANT SPECIFICATIONS	3-124,3-16,3-90	MANIFOLD—DIESEL, EXHAUST	11-13	MONITORS, COMPONENT	25-12
LUBRICANT, TRANSMISSION	21-1	MANIFOLD—V-10 ENGINE, EXHAUST	11-3	MOTOR, AXLE SHIFT	3-27,3-41
LUBRICANTS	3-59	MANIFOLD—V-6 AND V-8 ENGINES, INTAKE	11-3,11-6	MOTOR, BLOWER	24-17,24-38,24-5
LUBRICANTS, CLASSIFICATION OF	0-2	MANIFOLD V-10, EXHAUST	11-11	MOTOR DIAGNOSIS, AXLE VACUUM SHIFT	3-21
LUBRICATION	3-2	MANIFOLD V-10, INTAKE	11-8	MOTOR, POWER LOCK	8P-3,8P-6,8P-8
LUBRICATION, CLUTCH	6-3	MANIFOLD—DIESEL, EXHAUST	11-13	MOTOR, POWER LUMBAR ADJUSTER	8R-2, 8R-3,8R-5
LUBRICATION SYSTEM	9-127,9-162,9-59,9-93	MANIFOLD—V-10 ENGINE, EXHAUST	11-3		
LUBRICATION SYSTEM, ENGINE	9-24	MANIFOLD—V-6 AND V-8 ENGINES, INTAKE	11-3,11-6		
LUMBAR ADJUSTER AND MOTOR, POWER	8R-2,8R-3,8R-5	MANIFOLD V-10, EXHAUST	11-11		
MACHINING, BRAKE DRUM	5-16	MANIFOLD V-10, INTAKE	11-8		
MACHINING, DISC ROTOR	5-16	MANIFOLD—DIESEL, EXHAUST	11-13		
MAIN BEARING CLEARANCE	9-175	MANIFOLD—V-10 ENGINE, EXHAUST	11-3		
MAIN BEARINGS, CRANKSHAFT	9-109,9-148, 9-29,9-40,9-63,9-73	MANIFOLD—V-6 AND V-8 ENGINES, INTAKE	11-3,11-6		
MAIN BEARINGS, FITTING CRANKSHAFT	9-131, 9-97	MANIFOLD V-10, EXHAUST	11-11		

Description	Group-Page	Description	Group-Page	Description	Group-Page
MOTOR, POWER WINDOW	8S-1,8S-3,8S-4	OIL AND CAMSHAFT PLUGS, ENGINE		OUTLET, 8W-41 HORN/CIGAR	
MOTOR RELAY, BLOWER	24-19,24-39,24-5	CORE	9-45,9-79	LIGHTER/POWER	8-1
MOTOR RESISTOR, BLOWER	24-19,24-39,24-5	OIL COOLER, AUXILIARY		OUTLET, CIGAR LIGHTER AND POWER	8E-25
MOTOR SWITCH, BLOWER	24-20,24-5	TRANSMISSION	7-6	OUTLET, POWER	8E-10,8E-21
MOTOR, WIPER	8K-2,8K-8	OIL COOLER ELEMENT AND GASKET	9-204	OUTLETS, DUCTS	24-45
MOTOR—3.9L/5.2L/5.9L ENGINES, IDLE		OIL COOLER—3.9L/5.2L/5.9L ENGINES,		OUTPUT, AIR CONDITIONING (A/C)	
AIR CONTROL (IAC)	14-55,14-61	AUXILIARY TRANSMISSION	7-43	CLUTCH RELAY—PCM	14-40
MOTOR—3.9L/5.2L/5.9L ENGINES—PCM		OIL COOLER—5.9L DIESEL ENGINE,		OUTPUT, AIR CONDITIONING CLUTCH	
OUTPUT, IDLE AIR CONTROL (IAC)	14-42	AUXILIARY TRANSMISSION	7-45	RELAY—PCM	14-124
MOTOR—8.0L ENGINE, IDLE AIR		OIL COOLER—8.0L ENGINE, AUXILIARY		OUTPUT, AUTO SHUTDOWN (ASD)	
CONTROL (IAC)	14-55,14-61	TRANSMISSION	7-44	RELAY—PCM	14-40
MOTOR—8.0L ENGINE—PCM OUTPUT,		OIL COOLERS—DIESEL ENGINE,		OUTPUT, AUTOMATIC SHUTDOWN (ASD)	
IDLE AIR CONTROL (IAC)	14-42	AUTOMATIC TRANSMISSION	7-7	RELAY—PCM	14-124
MOTORS, POWER SEAT ADJUSTER	8R-1,8R-2,	OIL COOLERS—GAS ENGINES,		OUTPUT, DATA LINK CONNECTOR—PCM	
	8R-4	AUTOMATIC TRANSMISSION	7-6	INPUT	14-124,14-40
MOUNT, ENGINE REAR	9-177	OIL FILTER	9-161	OUTPUT, DUTY CYCLE EVAP PURGE	
MOUNTED SIDE VIEW MIRROR, LOW	23-29	OIL FILTER BYPASS VALVE	9-197	SOLENOID VALVE—PCM	14-40
MOUNTED STOP LAMP (CHMSL) BULB,		OIL LEVEL, REFRIGERANT	24-24	OUTPUT, FUEL INJECTORS—3.9L/5.2L/	
CENTER HIGH	8L-8	OIL PAN	9-108,9-118,9-146,9-153,9-41,9-51,	5.9L ENGINES—PCM	14-41
MOUNTED STOP LAMP (CHMSL),			9-75,9-84	OUTPUT, FUEL INJECTORS—8.0L	
CENTER HIGH	8L-11	OIL PAN AND SUCTION TUBE	9-190	ENGINE—PCM	14-41
MOUNTING, BATTERY	8A-3	OIL PRESSURE, ENGINE	9-10	OUTPUT, FUEL PUMP RELAY—PCM	14-42
MOUNTING, MATCH	22-5	OIL PRESSURE GAUGE	8E-15,8E-6	OUTPUT, GENERATOR FIELD DRIVER	
MOUNTING STUDS, WHEEL	2-21	OIL PRESSURE REGULATOR VALVE	9-164	(-)—PCM	14-124,14-42
MOUNT—REAR, ENGINE	9-30	OIL PRESSURE REGULATOR VALVE AND		OUTPUT, GENERATOR FIELD SOURCE	
MOUNT—REAR, ENGINE	9-132,9-64,9-99	SPRING	9-198	(+)—PCM	14-124,14-42
MOUNTS, ENGINE FRONT	9-176	OIL PRESSURE SENSOR—PCM INPUT	14-36	OUTPUT, GENERATOR LAMP—PCM	14-124,
MOUNTS—FRONT, ENGINE	9-132,9-29,9-64,	OIL PUMP	9-111,9-117,9-118,9-149,9-153,		14-42
	9-98		9-197,9-207,9-41,9-48,9-50,9-77,9-82,9-84	OUTPUT, GOVERNOR PRESSURE	
(-)—PCM OUTPUT, GENERATOR FIELD		OIL PUMP AND REACTION SHAFT		SOLENOID—PCM	14-44
DRIVER	14-124,14-42	SUPPORT	21-154,21-182,21-277,21-305	OUTPUT, IDLE AIR CONTROL (IAC)	
(+)—PCM OUTPUT, GENERATOR FIELD		OIL PUMP PRESSURE	9-23,9-58,9-92	MOTOR—3.9L/5.2L/5.9L ENGINES—	
SOURCE	14-124,14-42	OIL PUMP VOLUME CHECK	21-116,21-235	PCM	14-42
MUFFLER—DIESEL	11-12	OIL, REFRIGERANT	24-9	OUTPUT, IDLE AIR CONTROL (IAC)	
MUFFLERS	11-5	OIL SEAL, AXLE SHAFT	3-35	MOTOR—8.0L ENGINE—PCM	14-42
MULTI-FUNCTION SWITCH; TURN		OIL SEAL (COVER NOT REMOVED),		OUTPUT, IGNITION COIL—3.9L/5.2L/5.9L	
SIGNAL AND HAZARD WARNING		TIMING CHAIN COVER	9-143	ENGINES—PCM	14-42
SYSTEMS	8J-4,8J-5	OIL SEAL (COVER REMOVED), TIMING		OUTPUT, INTAKE MANIFOLD AIR HEATER	
MULTI-FUNCTION SWITCH; WIPER AND		CHAIN COVER	9-143	RELAYS—PCM	14-121
WASHER SYSTEMS	8K-9	OIL SEAL, CRANKSHAFT FRONT	9-43	OUTPUT, MALFUNCTION INDICATOR	
- 11 INCH BRAKE, BRAKE SHOES	5-28	OIL SEAL, FRONT CRANKSHAFT	9-111,9-77	LAMP—PCM	14-124,14-43
- 13 INCH BRAKE, BRAKE SHOES	5-30	OIL SEALS, CRANKSHAFT REAR	9-111,9-43,	OUTPUT, OVERDRIVE LAMP—PCM	14-124,
- 2WD, FRONT WHEEL SPEED SENSOR	5-55		9-77		14-43
- 4WD, FRONT WHEEL SPEED SENSOR	5-55	OIL SERVICE, ENGINE	9-165,9-3	OUTPUT, SERVICE REMINDER	
- WITH TAPERED BEARINGS, DISC		OIL TEMPERATURE WARNING LAMP,		INDICATOR (SRI) LAMP—PCM	14-44
BRAKE ROTOR	5-24	TRANSMISSION	8E-11,8E-23	OUTPUT SHAFT FRONT BEARING	21-126,21-245
NAMEPATES, EXTERIOR	23-27	OIL—CAMSHAFT PLUGS, ENGINE CORE	9-150	OUTPUT SHAFT REAR BEARING	21-125,21-244
NECK SEAL—PRESSURE RELIEF CHECK,		ON-BOARD DIAGNOSTIC TEST FOR		OUTPUT SHAFT SEAL, FRONT	21-362
RADIATOR CAP-TO-FILLER	7-24	CHARGING SYSTEM	8C-6	OUTPUT SHAFT SEAL—NV231HD,	
NOISE, BEARING	3-126,3-17,3-60,3-91	ON-BOARD DIAGNOSTIC TEST FOR		FRONT	21-333
NOISE, GEAR	3-126,3-17,3-60,3-91	SPEED CONTROL SYSTEM	8H-3	OUTPUT SHAFT SEAL—NV241LD,	
NOISE OR VIBRATION, TIRE	22-4	ON-BOARD DIAGNOSTICS	25-2	FRONT	21-334
NOISE SUPPRESSION, RADIO	8F-2	ON-BOARD DIAGNOSTICS (OBD)	7-13	OUTPUT SHAFT SPEED SENSOR—PCM	
NOISE, TRAC-LOK DIFFERENTIAL	3-127,3-61	ONE-WAY CHECK VALVE	25-25,25-26	INPUT	14-36
NOISE, TRAC-LOK/POWER-LOK		ONE-WAY CHECK VALVE, TESTING	25-25	OUTPUT, SPEED CONTROL	
DIFFERENTIAL	3-92	OPEN-CIRCUIT VOLTAGE TEST	8A-8	SOLENOIDS—PCM	14-125,14-43
NOISE, TRANSMISSION	21-4	OPENING COVER AND KNEE BLOCKER,		OUTPUT, TACHOMETER—PCM	14-125,14-44
NOISE, WIND	23-3	STEERING COLUMN	8E-30	OUTPUT TEST, CURRENT	8C-4
NOISY OPERATION	21-47	OPENING SEAL, DOOR	23-36	OUTPUT, THREE-FOUR SHIFT	
NON-MONITORED CIRCUITS	25-12	OPENING UPPER TRIM STRIP, GLOVE		SOLENOID—PCM	14-44
NOTES, CAUTIONS, AND WARNINGS	8-7	BOX	8E-34	OUTPUT, TORQUE CONVERTOR CLUTCH	
NOZZLE AND PLUMBING, WASHER	8K-4	OPERATING RANGES AND SHIFTING,		(TCC) SOLENOID—PCM	14-125,14-44
NUMBER, VEHICLE IDENTIFICATION	Intro-1	PTO ADAPTER	21-391	OUTPUT, TRANSMISSION RELAY—PCM	14-44
NV 021 ADAPTER	21-409,21-410	OPERATION, AIR INJECTION SYSTEM	25-23	OUTPUT, TRANSMISSION TEMPERATURE	
NV021 PTO ADAPTER	21-389	OPERATION, AIR TESTING		WARNING LAMP—PCM	14-125
NV231HD AND NV241LD	21-356	TRANSMISSION CLUTCH AND BAND	21-100,	OUTPUT, WAIT-TO-START LAMP	
NV231HD AND NV241LD INTRODUCTION	21-330		21-219	WARNING LAMP—PCM	14-125
NV231HD AND NV241LD TRANSFER		OPERATION, CHARGING SYSTEM	8C-1	OUTPUT—DIESEL ENGINE, VACUUM	
CASE	21-330	OPERATION, EGR SYSTEM	25-27	PUMP	9-22
NV241HD	21-387	OPERATION, MODES OF	14-29	OUTPUTS, CCD BUS (+/-) CIRCUITS—PCM	14-40
NV241HD INTRODUCTION	21-358	OPERATION, NOISY	21-47	OUTPUTS, IGNITION COILS—8.0L	
NV241HD TRANSFER CASE	21-358	OPERATION, POWER STEERING PUMP -		ENGINE—PCM	14-43
NV241LD INTRODUCTION, NV231HD	21-330	INITIAL	19-5	OUTS, TAKE	8-8
NV241LD, NV231HD	21-356	OPERATION, SHIFT VALVE	21-213,21-94	OUTSIDE HANDLE, FRONT DOOR	23-32
NV241LD TRANSFER CASE, NV231HD	21-330	OPERATION, TIRE PRESSURE FOR HIGH		OUTSIDE MIRROR HEATING GRID	8N-1,8N-3
NV3500 MANUAL TRANSMISSION	21-1,21-41	SPEED	22-3	OVERDRIVE ELECTRICAL CONTROLS	21-215,
NV4500 CLUTCH HOUSING	6-6	OPERATION, TRAC-LOK	3-125,3-59		21-96
NV4500 INTRODUCTION	21-44	OPERATION, TRAC-LOK/POWER-LOK	3-90	OVERDRIVE HOUSING BUSHING	21-125,21-244
NV4500 MANUAL TRANSMISSION	21-44,21-83	ORDER—3.9L V-6 ENGINE, ENGINE		OVERDRIVE LAMP—PCM OUTPUT	14-124,14-43
(O2S)—3.9L/5.2L/5.9L LDC ENGINES—		FIRING	8D-28	OVERDRIVE OFF SWITCH	21-213,21-94
PCM INPUT, OXYGEN SENSOR	14-36	ORDER—5.2L/5.9L V-8 ENGINES,		OVERDRIVE UNIT	21-124,21-165,21-183,21-243,
(O2S)—8.0L MDC ENGINES—PCM		ENGINE FIRING	8D-28		21-288,21-306
INPUT, OXYGEN SENSOR	14-38	ORDER—8.0L V-10 ENGINE, SPARK		OVERDRIVE-OFF INDICATOR LAMP	8E-10,8E-21
(O2S)—HDC ENGINES—PCM INPUT,		PLUG CABLE	8D-28	OVERDRIVE/OVERRIDE SWITCH—PCM	
OXYGEN SENSOR	14-37	ORIFICE TUBE, FIXED	24-22,24-32,24-7	INPUT	14-36
ODOMETER AND TRIP ODOMETER	8E-15,8E-5	OUT OF GEAR, SLIPS	21-47	OVERDRIVE/OVERRIDE SWITCH—PCM	
ODOMETER, ODOMETER AND TRIP	8E-15,8E-5	OUTER BELT WEATHERSTRIP, FRONT		INPUT	14-124
OFF SWITCH, OVERDRIVE	21-213,21-94	DOOR	23-34	OVERFLOW VALVE	14-112,14-74

Description	Group-Page	Description	Group-Page	Description	Group-Page
OVERFLOW VALVE TEST	14-81	PERFORMANCE CHARACTERISTICS,		POSITION SENSOR (TPS)—8.0L	
OVERHAUL, ADAPTER	21-395	RWAL	5-43	ENGINE—PCM INPUT, THROTTLE	14-39
OVERHEAD ASSIST HANDLE	23-64	PERFORMANCE, COOLANT	7-9	POSITION SENSOR—3.9L V-6 ENGINE,	
OVERHEAD CONSOLE	8V-1,8V-6	PERFORMANCE, HEATER	24-14	CRANKSHAFT	8D-4
OVERHEAD CONSOLE, 8W-49	8-1	PERFORMANCE—GASOLINE ENGINES,		POSITION SENSOR—3.9L/5.2L/5.9L	
OVERHEAD CONSOLE READING LAMP	8L-14	ENGINE	9-2	ENGINES, CAMSHAFT	8D-11,8D-20,8D-6
OVERHEAD CONSOLE READING LAMP		PILOT BEARING	6-16	POSITION SENSOR—3.9L/5.2L/5.9L	
BULB	8L-9	PIN HOUSING ASSEMBLY, TIMING	9-185	ENGINES, CRANKSHAFT	8D-19
OVERRUNNING CLUTCH CAM/		PIN, TIMING	9-164,9-184	POSITION SENSOR—3.9L/5.2L/5.9L	
OVERDRIVE PISTON RETAINER	21-151,21-274	PINION GEAR	3-101,3-136,3-36,3-71	ENGINES—PCM INPUT, CAMSHAFT	14-33
OVERRUNNING CLUTCH/LOW-REVERSE		PINION GEAR DEPTH	3-112,3-145,3-42	POSITION SENSOR—3.9L/5.2L/5.9L	
DRUM/OVERDRIVE PISTON RETAINER	21-181,	PINION GEAR DEPTH, 9 1/4 AXLE	3-79	ENGINES—PCM INPUT, CRANKSHAFT	14-33
	21-304	PINION SEAL	3-132,3-67,3-97	POSITION SENSOR—5.2L/5.9L V-8	
OVERSHOOT/UNDERSHOOT FOLLOWING		PINION SHAFT SEAL—216 FBI AXLE	3-25	ENGINES, CRANKSHAFT	8D-5
SPEED CONTROL SET	8H-5	PINION SHAFT SEAL—248 FBI AXLE	3-26	POSITION SENSOR—8.0L ENGINE—PCM	
OVERVIEW: BATTERY	8A-1	PIN-OUTS, 8W-80 CONNECTOR	8-1	INPUT, CRANKSHAFT	14-34
OVERVIEW: CHARGING SYSTEM	8C-1	PIPE, EXHAUST	11-18,11-4	POSITION SENSOR—8.0L ENGINE—	
OVERVIEW: STARTING SYSTEMS	8B-1	PIPE—DIESEL, EXHAUST	11-11	PCM INPUT, CAMSHAFT	14-33
OXYGEN (O2S) SENSORS—3.9L/5.2L/		PISTON AND CONNECTING ROD		POSITION SENSOR—8.0L V-10 ENGINE,	
5.9L LCD ENGINES	14-53	ASSEMBLY	9-109,9-118,9-147,9-190,9-202,	CAMSHAFT	8D-21,8D-6
OXYGEN (O2S) SENSORS—5.9L HDC			9-208,9-23,9-41,9-58,9-75,9-83,9-92	POSITION SENSOR—8.0L V-10 ENGINE,	
ENGINE	14-53	PISTON AND CONNECTING ROD		CRANKSHAFT	8D-20,8D-5
OXYGEN (O2S) SENSORS—8.0L		INSPECTION	9-49	POSITION SENSOR—DIESEL ENGINE,	
HDC/MDC ENGINES	14-54	PISTON AND WORM SHAFT, RACK	19-16	THROTTLE	14-131
OXYGEN SENSOR (O2S)—3.9L/5.2L/5.9L		PISTON, FRONT SERVO	21-153,21-276	POSITION SENSOR—PCM INPUT,	
LDC ENGINES—PCM INPUT	14-36	PISTON GRADING	9-161	THROTTLE	14-122
OXYGEN SENSOR (O2S)—8.0L MDC		PISTON GRADING PROCEDURE	9-172	POSITION SENSORS, CAMSHAFT AND	
ENGINES—PCM INPUT	14-38	PISTON, REAR SERVO	21-153,21-277	CRANKSHAFT	14-54
OXYGEN SENSOR (O2S)—HDC		PISTON RETAINER, OVERRUNNING		POSITION SWITCH, CLUTCH PEDAL	6-4
ENGINES—PCM INPUT	14-37	CLUTCH CAM/OVERDRIVE	21-151,21-274	POSITION SWITCH, PARK/NEUTRAL	21-120,
OXYGEN SENSORS—3.9L/5.2L/5.9L		PISTON RETAINER, OVERRUNNING			21-215,21-239,21-96
LDC/HDC ENGINES	14-63	CLUTCH/LOW-REVERSE DRUM/		POSITION SWITCH—PCM INPUT,	
OXYGEN SENSORS—8.0L ENGINES	14-64	OVERDRIVE	21-181,21-304	PARK/NEUTRAL	14-122
PACK TESTS—8.0L V-10 ENGINE,		PISTON RINGS, FITTING	9-62,9-96	POSITIVE CRANKCASE VENTILATION	
IGNITION COIL	8D-8	PISTONS, FITTING	9-129,9-27,9-62,9-96	(PCV) SYSTEM	25-16
PACKS—8.0L ENGINE, IGNITION COIL	8D-3	PITMAN SHAFT/SEALS/BEARING	19-13	POWER BRAKE BOOSTER	5-2
PACKS—8.0L V-10 ENGINE, IGNITION		PIVOT, WIPER LINKAGE	8K-2,8K-8	POWER DISTRIBUTION, 8W-10	8-1
COIL	8D-18	PLANETARY GEARTRAIN	21-183	POWER DOOR LOCKS, 8W-61	8-1
PADS, FIFTH-REVERSE SHIFT FORK	21-47	PLANETARY GEARTRAIN/OUTPUT		POWER GROUND	14-38
PAINT	23-4	SHAFT	21-161,21-283,21-306	POWER LOCK MOTOR	8P-3,8P-6,8P-8
PAINT CODE	23-4	PLASTIGAGE, MEASURING WITH	9-2	POWER LOCK SWITCH	8P-3,8P-4,8P-7
PAINTED SURFACE TOUCH-UP	23-4	PLATE, BODY CODE	Intro-1	POWER LOCK SYSTEM	8P-1,8P-4
PAN AND SUCTION TUBE, OIL	9-190	PLATE, BRAKE SUPPORT	5-32	POWER LOCK SYSTEM AND REMOTE	
PAN, OIL	9-108,9-118,9-146,9-153,9-41,9-51,	PLATE, ENGINE DATA	14-115	KEYLESS ENTRY SYSTEM	8P-4
	9-75,9-84	PLATE, EQUIPMENT IDENTIFICATION	Intro-4	POWER LUMBAR ADJUSTER AND	
PANEL ASSEMBLY, INSTRUMENT	8E-35	PLATE LAMP BULB, LICENSE	8L-9	MOTOR	8R-2,8R-3,8R-5
PANEL, CARGO DOOR TRIM	23-37	PLATE LAMP, LICENSE	8L-13	POWER MIRROR	8T-1,8T-3
PANEL, FRONT DOOR TRIM	23-29	PLATE, TRANSFER CASE SKID	13-6	POWER MIRROR SWITCH	8T-1,8T-2
PANEL, INSTRUMENT	8E-2	PLUG CABLE ORDER—8.0L V-10		POWER MIRROR SYSTEM	8T-1,8T-2
PANEL, REAR VALENCE	13-3	ENGINE, SPARK	8D-28	POWER MIRRORS, 8W-62	8-1
PANEL TOP COVER, INSTRUMENT	8E-37	PLUG CABLE RESISTANCE, SPARK	8D-29	POWER OUTLET	8E-10,8E-21
PANEL TRIM, REAR CLOSURE	23-56	PLUG CABLES, SPARK	8D-13,8D-15,8D-3	POWER OUTLET, CIGAR LIGHTER	8E-25
PANEL—CLUB CAB, QUARTER TRIM	23-56	PLUG CONDITIONS, SPARK	8D-14	POWER SEAT, 8W-63	8-1
PANELS, INTERIOR TRIM	23-21	PLUG, HOUSING END	19-12	POWER SEAT ADJUSTER AND MOTORS	8R-1,
PARK AND TURN SIGNAL LAMP	8L-8	PLUG REPLACEMENT, CYLINDER BLOCK			8R-2,8R-4
PARK BRAKE CABLE, REAR	5-33	CUP	9-172	POWER SEAT SWITCH	8R-1,8R-3,8R-4
PARK BRAKE RELEASE HANDLE	8E-30	PLUG REPLACEMENT, EXPANSION	21-48	POWER SEAT SYSTEM	8R-1,8R-2
PARK, TURN SIGNAL AND SIDE		PLUGS, ENGINE CORE	9-113	POWER STEERING	19-1
MARKER LAMP	8L-11	PLUGS, ENGINE CORE OIL AND		POWER STEERING GEAR	19-11,19-12,19-20,
PARKING BRAKE CABLE, FRONT	5-32	CAMSHAFT	9-45,9-79		19-21
PARKING BRAKE CABLE TENSIONER	5-40	PLUGS, ENGINE CORE OIL—CAMSHAFT	9-150	POWER STEERING GEAR LEAKAGE	
PARKING BRAKE PEDAL	5-34	PLUGS, SPARK	8D-17,8D-29,8D-3	DIAGNOSIS	19-12
PARKING BRAKES	5-7	PLUMBING, WASHER NOZZLE	8K-4	POWER STEERING PUMP	19-10,19-4
PARK/NEUTRAL POSITION SWITCH	21-120,	POLISHING, WET SANDING, BUFFING	23-4	POWER STEERING PUMP - GASOLINE	
	21-215,21-239,21-96	POOR CONNECTIONS, INTERMITTENT	8-8	ENGINE	19-7
PARK/NEUTRAL POSITION SWITCH—		PORT, FUEL PUMP PRESSURE		POWER STEERING PUMP - INITIAL	
PCM INPUT	14-122	TEST—ALL ENGINES WITH PRESSURE		OPERATION	19-5
PARK/NEUTRAL SWITCH—PCM INPUT,		TEST	14-7	POWER STEERING PUMP—DIESEL	
TRANSMISSION	14-39	PORT, REFRIGERANT SYSTEM SERVICE	24-10	ENGINE	19-7
PARTS AND LUBRICANT		POSITION SENSOR, CAMSHAFT	14-63	POWER STEERING SYSTEM	19-2
RECOMMENDATIONS	0-1	POSITION SENSOR, CRANKSHAFT; FUEL		POWER STEERING SYSTEM, FLUSHING	19-6
PASSENGER AIRBAG DISARM SWITCH	8M-3,	SYSTEM	14-63	POWER WINDOW MOTOR	8S-1,8S-3,8S-4
	8M-8	POSITION SENSOR, CRANKSHAFT;		POWER WINDOW SWITCH	8S-1,8S-3,8S-4
PATTERN ANALYSIS, GEAR CONTACT	3-118,	IGNITION SYSTEM	8D-11	POWER WINDOW SYSTEM	8S-1,8S-2
	3-150,3-48,3-82	POSITION SENSOR TEST, THROTTLE	14-129	POWER WINDOWS, 8W-60	8-1
PATTERN, SHIFT	21-46	POSITION SENSOR TEST—8.0L V-10		POWERED ENGINE, FUEL DELIVERY	
PATTERNS, TIRE WEAR	22-3	ENGINE, CAMSHAFT	8D-12	SYSTEM—DIESEL	14-70
(PCM)—DIESEL, POWERTRAIN		POSITION SENSOR, THROTTLE;		POWERED ENGINES, FUEL DELIVERY	
CONTROL MODULE	14-118	IGNITION SYSTEM	8D-23,8D-6	SYSTEM—GASOLINE	14-3
PCV VALVE TEST—3.9/5.2/5.9L ENGINE	25-19	POSITION SENSOR, THROTTLE;		POWER-LOK—267 RBI	3-110
PEDAL, ACCELERATOR	14-24,14-95	IGNITION SYSTEM		POWERTRAIN CONTROL MODULE;	
PEDAL, BRAKE	5-18,5-2	POSITION SENSOR (TPS)—3.9L/5.2L/		IGNITION SYSTEM	8D-2
PEDAL, CLUTCH	6-16	5.9L ENGINES, THROTTLE	14-56,14-60	POWERTRAIN CONTROL MODULE;	
PEDAL, PARKING BRAKE	5-34	POSITION SENSOR (TPS)—3.9L/5.2L/		SPEED CONTROL SYSTEM	8H-2
PEDAL POSITION SWITCH, CLUTCH	6-4	5.9L ENGINES—PCM INPUT,		POWERTRAIN CONTROL MODULE	
PER MILE, TIRE REVOLUTIONS	22-6	THROTTLE	14-39	(PCM); FUEL SYSTEM	14-31,14-63
PERFORMANCE, A/C	24-11	POSITION SENSOR (TPS)—8.0L ENGINE,		POWERTRAIN CONTROL MODULE	
		THROTTLE	14-57,14-60	(PCM); IGNITION SYSTEM	8D-25

Description	Group-Page	Description	Group-Page	Description	Group-Page
POWERTRAIN CONTROL MODULE (PCM)—DIESEL	14-118	PROGRAMMING, REMOTE KEYLESS ENTRY TRANSMITTER	8P-7	RADIATOR CAP	7-54
POWER-UP MODE	80-2	PROPELLER SHAFT	3-12,3-14	RADIATOR CAPS, PRESSURE TESTING	7-25
PRE-ALIGNMENT	2-3	PROPELLER SHAFT ANGLE MEASUREMENT	3-5	RADIATOR CAP-TO-FILLER NECK SEAL—PRESSURE RELIEF CHECK	7-24
PRECAUTIONS	3-2	PROPELLER SHAFT, FRONT	3-6	RADIATOR COOLANT FLOW TEST	7-19
PRECAUTIONS, ABS SERVICE	5-48	PROPELLER SHAFT JOINT ANGLE	3-2	RADIATOR PRESSURE CAP	7-10,7-3
PRECAUTIONS AND WARNINGS, SAFETY	23-1	PROPELLER SHAFT, REAR	3-7	RADIATOR SIDE TANK, REPLACING WATER-TO-OIL COOLER IN	7-43
PRECAUTIONS, SAFETY: BODY	23-6	PROPELLER SHAFTS	3-1	RADIATORS	7-4
PRECAUTIONS, SAFETY: LAMPS	8L-1	PROPORTIONING VALVE, HEIGHT SENSING	5-12,5-19,5-5	RADIO	8F-1,8F-3,8F-7
PRECAUTIONS, SERVICE WARNINGS	24-3	PTO ACCESSORY EQUIPMENT	21-391	RADIO FREQUENCY INTERFERENCE	8F-7
PRELIMINARY CHECKS	7-14	PTO ADAPTER, NV021	21-389	RADIO NOISE SUPPRESSION	8F-2
PRELIMINARY DIAGNOSIS	21-214,21-95	PTO ADAPTER OPERATING RANGES AND SHIFTING	21-391	RAIL WEATHERSTRIP AND RETAINER, ROOF	23-45
PRELOAD AND GEAR BACKLASH, DIFFERENTIAL BEARING	3-115,3-147,3-45,3-81	PTO ADAPTER SERVICE	21-392	RAIL—3.9/5.2/5.9L ENGINES, FUEL	14-6
PREPARATION, DRIVELINE ANGLE MEASUREMENT	3-4	PTO CAPABILITY	21-360	RAIL—3.9L/5.2L/5.9L ENGINES, FUEL INJECTOR	14-18
PREPARATION, HEADLAMP ALIGNMENT	8L-4	PTO SWITCH SENSE—PCM INPUT	14-39	RAIL—8.0L ENGINE, FUEL	14-6
PRESSURE CAP, RADIATOR	7-10,7-3	PULLEY, PUMP	19-9	RAIL—8.0L V-10 ENGINE, FUEL INJECTOR	14-20
PRESSURE CURVES, GOVERNOR	21-212,21-93	PUMP - GASOLINE ENGINE, POWER STEERING	19-7	RANGES AND SHIFTING, PTO ADAPTER OPERATING	21-391
PRESSURE CUT-OFF SWITCH, HIGH	24-22,24-25,24-7	PUMP - INITIAL OPERATION, POWER STEERING	19-5	RATE AND PRESSURE, PUMP FLOW	19-4
PRESSURE CYCLING CLUTCH SWITCH, LOW	24-22,24-32,24-8	PUMP AIR FILTER—8.0L V-10 ENGINE, AIR INJECTION	25-26	RATINGS, BATTERY SIZE	8A-2
PRESSURE, ENGINE OIL	9-10	PUMP, AIR INJECTION	25-24,25-25	RATINGS, GENERATOR	8C-8
PRESSURE FOR HIGH SPEED OPERATION, TIRE	22-3	PUMP AMPERAGE TEST, FUEL	14-9	RATIOS, GEAR	21-46
PRESSURE GAUGE, OIL	8E-15,8E-6	PUMP AND REACTION SHAFT SUPPORT, OIL	21-154,21-182,21-277,21-305	RATIOS, TRANSMISSION GEAR	21-211,21-3
PRESSURE GAUGES	22-3	PUMP BYPASS HOSE, WATER	7-35		21-92
PRESSURE LEAK DOWN TEST, FUEL	14-8	PUMP CAPACITY TEST, FUEL	14-8	RBI AXLE, 248 AND 267	3-120,3-89
PRESSURE LEAKAGE TEST, CYLINDER COMBUSTION	9-8	PUMP FLOW RATE AND PRESSURE	19-4	RBI AXLE, 286	3-124
PRESSURE (MAP) SENSOR, MANIFOLD ABSOLUTE	8D-23,8D-6	PUMP, FUEL	14-4	RBI AXLES, 248 AND 267	3-120,3-89
PRESSURE (MAP) SENSOR TEST—3.9L/5.2L/5.9L ENGINES, MANIFOLD ABSOLUTE	14-51	PUMP, FUEL INJECTION	14-100,14-74	RBI AXLES, 286	3-152
PRESSURE (MAP) SENSOR TEST—8.0L ENGINE, MANIFOLD ABSOLUTE	14-52	PUMP, FUEL TRANSFER	14-110,14-73	RBI, POWER-LOK—267	3-110
PRESSURE (MAP) SENSOR—3.9L/5.2L/5.9L ENGINES, MANIFOLD ABSOLUTE	14-62	PUMP INLET FILTER, FUEL	14-17	RE TRANSMISSION	21-325
PRESSURE (MAP) SENSOR—8.0L ENGINE, MANIFOLD ABSOLUTE	14-62	PUMP INSPECTION, WATER	7-54	RE TRANSMISSIONS	21-202
PRESSURE (MAP) SENSOR—PCM INPUT, MANIFOLD ABSOLUTE	14-36	PUMP (LDP), LEAK DETECTION	25-16,25-20,25-22	REACTION SHAFT SUPPORT, OIL PUMP	21-154,21-182,21-277,21-305
PRESSURE (MAP) SENSOR—8.0L ENGINE, MANIFOLD ABSOLUTE	14-62	PUMP LEAKAGE DIAGNOSIS	19-5	READING AND COURTESY LAMP	8V-2
PRESSURE (MAP) SENSOR—PCM INPUT, MANIFOLD ABSOLUTE	14-36	PUMP MODULE, FUEL	14-16,14-4	READING AND COURTESY LAMP BULB	8V-7
PRESSURE, OIL PUMP	9-23,9-58,9-92	PUMP, OIL	9-111,9-117,9-118,9-149,9-153,9-197,9-207,9-41,9-48,9-50,9-77,9-82,9-84	READING LAMP BULB, OVERHEAD CONSOLE	8L-9
PRESSURE, PUMP FLOW RATE	19-4	PUMP OUTPUT—DIESEL ENGINE, VACUUM	9-22	READING LAMP, OVERHEAD CONSOLE	8L-14
PRESSURE REGULATOR, FUEL FILTER/FUEL	14-15,14-5	PUMP, POWER STEERING	19-10,19-4	REAR AXLE	3-130,3-64,3-95
PRESSURE REGULATOR VALVE AND SPRING, OIL	9-198	PUMP PRESSURE, OIL	9-23,9-58,9-92	REAR AXLE, 9 1/4	3-57
PRESSURE REGULATOR VALVE, OIL	9-164	PUMP PRESSURE TEST—ALL ENGINES WITH PRESSURE TEST PORT, FUEL	14-7	REAR BAND ADJUSTMENT	21-309
PRESSURE RELEASE PROCEDURE, FUEL SYSTEM	14-11	PUMP PRESSURE/CAPACITY TEST, FUEL TRANSFER	14-78	REAR BEARING, OUTPUT SHAFT	21-125,21-244
PRESSURE RELIEF VALVE, HIGH	24-8	PUMP PULLEY	19-9	REAR BUMPER	13-3
PRESSURE SENSOR, GOVERNOR SOLENOID	21-121,21-240	PUMP RELAY, FUEL	14-58	REAR CLOSURE PANEL TRIM	23-56
PRESSURE SENSOR—PCM INPUT, OIL	14-36	PUMP RELAY—PCM OUTPUT, FUEL	14-42	REAR CLUTCH	21-158,21-182,21-281,21-306
PRESSURE SENSOR—PCM INPUT, TRANSMISSION GOVERNOR	14-123,14-39	PUMP RELAYS, ASD AND FUEL	14-51	REAR DRUM BRAKE	5-38,5-39
PRESSURE SOLENOID—PCM OUTPUT, GOVERNOR	14-44	PUMP TEST, FUEL INJECTION	14-84	REAR, ENGINE MOUNT—	9-30
PRESSURE TEST, CYLINDER COMPRESSION	9-7	PUMP TIMING, FUEL INJECTION	14-88	REAR FENDER (DUAL REAR WHEELS)	23-50
PRESSURE TEST, HYDRAULIC	21-216,21-97	PUMP, VACUUM	9-164,9-198	REAR FLOOR STOWAGE TRAY	23-62
PRESSURE TEST PORT, FUEL PUMP	14-7	PUMP VOLUME CHECK, OIL	21-116,21-235	REAR HOUSING YOKE BUSHING	21-7
PRESSURE TESTING RADIATOR CAPS	7-25	PUMP, WASHER	8K-4	REAR IDENTIFICATION (ID) LAMP BULBS	8L-9
PRESSURE TEST—ALL ENGINES WITH PRESSURE TEST PORT, FUEL PUMP	14-7	PUMP, WATER	7-24	REAR IDENTIFICATION (ID) LAMPS	8L-12
PRESSURE WARNING, FUEL SYSTEM	14-74	PUMP—5.9L DIESEL, WATER	7-11,7-35	REAR LIGHTING, 8W-51	8-1
PRESSURE/CAPACITY TEST, FUEL TRANSFER PUMP	14-78	PUMP—8.0L V-10 ENGINE, WATER	7-31	REAR MOUNT, ENGINE	9-177
PRESSURE—GAS ENGINES, FUEL SYSTEM	14-26	PUMP—DIESEL ENGINE, POWER STEERING	19-7	REAR OIL SEALS, CRANKSHAFT	9-111,9-43,9-77
PRESSURES, TIRE INFLATION	22-2	PUMP—V-6 AND V-8 ENGINES, WATER	7-28	REAR PARK BRAKE CABLE	5-33
PRESSURES—DIESEL ENGINES, FUEL SYSTEM	14-115	PUMPS—V-6, V-8, AND V-10 ENGINES, WATER	7-11	REAR PROPELLER SHAFT	3-7
PRIMARY SEAL, CARGO DOOR	23-44	PURGE SOLENOID, DUTY CYCLE EVAP CANISTER; EMISSION CONTROL SYSTEMS	25-15,25-20	REAR RETAINER BUSHING AND SEAL	21-336
PROBLEM CAUSES, COMMON	21-46	PURGE SOLENOID, DUTY CYCLE EVAP CANISTER; FUEL SYSTEM	14-63	REAR SEAL AREA LEAKS, INSPECTION	9-9
PROBLEMS, CLUTCH	21-47	PURGE SOLENOID VALVE—PCM OUTPUT, DUTY CYCLE EVAP	14-40	REAR SEAL, CRANKSHAFT	9-195
PROBLEMS, TROUBLESHOOTING WIRING	8-10	PUSH RODS, ROCKER ARMS	9-101,9-135,9-67	REAR SEAL HOUSING, CRANKSHAFT	9-195
PRODUCTS, AFTERMARKET REPAIR	23-5	PUSH RODS, ROCKER LEVERS	9-180	REAR SEAL/RETAINER, CRANKSHAFT	9-149
		QUARTER TRIM PANEL—CLUB CAB	23-56	REAR SEAT BELT BUCKLE	23-58
		QUARTER WINTER WINDOW WEATHERSTRIP	23-46	REAR SEAT—CLUB CAB	23-60
		QUARTER WINTER WINDOW—CLUB CAB	23-46	REAR SERVO	21-181,21-305
		QUICK FILL VALVE	21-214,21-95	REAR SERVO PISTON	21-153,21-277
		QUICK-CONNECT FITTINGS	14-12,14-7	REAR SPLASH SHIELDS	23-48
		QUICK-CONNECT FITTINGS—DIESEL ENGINE	14-74	REAR SUSPENSION	2-23,2-26
		RACK PISTON AND WORM SHAFT	19-16	REAR VALENCE PANEL	13-3
		RADIAL-PLY TIRES	22-2	REAR WHEEL ANTILOCK	5-43,5-48
		RADIATOR	7-45,7-54	REAR WHEEL ANTILOCK BRAKES	5-43
				REAR WHEEL ANTI-LOCK BRAKES, 8W-34	8-1
				REAR WHEEL SPEED SENSOR	5-50,5-56
				REAR WHEEL SPEED SENSOR AND EXCITER RING	5-46
				REAR WHEELHOUSE LINER	23-49
				REARVIEW MIRROR	23-63
				REARVIEW MIRROR SUPPORT BRACKET	23-63
				RECEIVER, ASH	8E-31
				RECEIVER, REMOTE KEYLESS ENTRY	8P-3
				RECIRCULATION (EGR) SYSTEM, EXHAUST GAS	25-27

Description	Group-Page	Description	Group-Page	Description	Group-Page
RECIRCULATION (EGR) SYSTEM-DIESEL ENGINE, EXHAUST GAS	25-27	RELAYS; VEHICLE THEFT/SECURITY SYSTEMS	8Q-3	RIGHT FRONT FENDER	23-26
RECLINER—QUAD CLUB, FRONT SEAT	23-16	RELAYS, ASD AND FUEL PUMP	14-51	RING, EXCITER	5-50,5-56
RECOMMENDATIONS, HOISTING	0-26	RELAYS, INTAKE MANIFOLD AIR HEATER	14-134	RING GEAR	3-36
RECOMMENDATIONS, PARTS AND LUBRICANT	0-1	RELAYS—PCM OUTPUT, INTAKE MANIFOLD AIR HEATER	14-121	RING GEAR AND EXCITER RING	3-100,3-135, 3-70
RECOMMENDATIONS, TOWING	0-24	RELEASE BEARING	6-15	RING GEAR, FLYWHEEL	9-196
RECOMMENDED FLUID	21-210,21-91	RELEASE CABLE, CARGO DOOR	23-40	RING, REAR WHEEL SPEED SENSOR AND EXCITER	5-46
RECOMMENDED LUBRICANT AND FILL LEVEL	21-331,21-360,21-391	RELEASE CABLE, HOOD	23-23	RING, RING GEAR AND EXCITER	3-100,3-135, 3-70
RECOVERY, REFRIGERANT	24-23	RELEASE HANDLE, PARK BRAKE	8E-30	RINGS, FITTING	9-130,9-27
RED BRAKE WARNING LAMP	5-10,5-2	RELEASE OR ENGAGEMENT, IMPROPER CLUTCH	6-4	RINGS, FITTING PISTON	9-62,9-96
REFACING, CYLINDER BLOCK	9-169	RELEASE PROCEDURE, FUEL SYSTEM PRESSURE	14-11	RISER—QUAD CAB, FRONT SEAT	23-14
REFERENCES, TORQUE	Intro-10	RELIEF CHECK, RADIATOR CAP-TO-FILLER NECK SEAL—PRESSURE	7-24	ROAD TEST	8H-2
REFILLING COOLING SYSTEM	7-26	RELIEF VALVE, HIGH PRESSURE	24-8	ROAD TEST, ANALYZING	21-215,21-96
REFRIGERANT	24-8	REMINDER INDICATOR LAMP, SERVICE	8E-11, 8E-23	ROAD TESTING	21-215,21-96
REFRIGERANT LINE	24-8	REMINDER INDICATOR (SRI) LAMP, SERVICE	25-1	ROCKER ARMS AND PUSH RODS	9-101,9-135, 9-67
REFRIGERANT LINE COUPLER	24-24,24-9	REMINDER INDICATOR (SRI) LAMP—PCM OUTPUT, SERVICE	14-44	ROCKER LEVERS	9-201
REFRIGERANT OIL	24-24	REMINDER LAMP, SEAT BELT	8E-10,8E-22	ROCKER LEVERS AND PUSH RODS	9-180
REFRIGERANT OIL LEVEL	24-23	REMOTE KEYLESS ENTRY RECEIVER	8P-1	ROD ASSEMBLY, PISTON AND CONNECTING	9-109,9-118,9-147,9-190,9-202, 9-208,9-23,9-41,9-58,9-75,9-83,9-92
REFRIGERANT RECOVERY	24-23	REMOTE KEYLESS ENTRY SYSTEM	8P-1	ROD BEARING AND CRANKSHAFT JOURNAL CLEARANCE, CONNECTING	9-172
REFRIGERANT SYSTEM CHARGE	24-23	REMOTE KEYLESS ENTRY SYSTEM, POWER LOCK SYSTEM	8P-4	ROD BEARINGS, CONNECTING	9-28
REFRIGERANT SYSTEM EVACUATE	24-22	REMOTE KEYLESS ENTRY TRANSMITTER	8P-3,8P-6	ROD BEARINGS, FITTING CONNECTING	9-131, 9-63,9-97
REFRIGERANT SYSTEM LEAKS	24-9	REMOTE KEYLESS ENTRY TRANSMITTER BATTERY REPLACEMENT	8P-7	ROD INSPECTION, PISTON AND CONNECTING	9-49
REFRIGERANT SYSTEM SERVICE EQUIPMENT	24-10	REMOTE KEYLESS ENTRY TRANSMITTER PROGRAMMING	8P-7	RODS, ROCKER ARMS AND PUSH	9-101,9-135, 9-67
REFRIGERANT SYSTEM SERVICE PORT	8C-2	REPAIR, ALUMINUM THREAD	21-117,21-236	RODS, ROCKER LEVERS AND PUSH	9-180
REGULATOR, ELECTRONIC VOLTAGE	23-35	REPAIR, CAM BORE	9-171	ROLLOVER VALVE(S); EMISSION CONTROL SYSTEMS	25-14,25-20
REGULATOR, FRONT DOOR WINDOW	14-15,14-5	REPAIR, CYLINDER BORE	9-169	ROLLOVER VALVE(S); FUEL SYSTEM	14-5,14-74
REGULATOR, FUEL FILTER/FUEL PRESSURE	25-33	REPAIR DAMAGED OR WORN THREADS	9-5	ROOF CLEARANCE LAMP	8L-11
REGULATOR SOLENOID, EGR VALVE	25-30	REPAIR PRODUCTS, AFTERMARKET	23-5	ROOF CLEARANCE LAMP BULB	8L-8
REGULATOR SOLENOID TEST, EGR VALVE VACUUM	9-198	REPAIR, THREADED HOLE	Intro-10	ROOF JOINT MOLDING	23-45
REGULATOR VALVE AND SPRING, OIL PRESSURE	9-164	REPAIR, WIRING	8-10	ROOF RAIL WEATHERSTRIP AND RETAINER	23-45
RELAY, AUTOMATIC SHUTDOWN (ASD); FUEL SYSTEM	14-58	REPAIRING LEAKS	22-6	ROTATION	22-4
RELAY, AUTOMATIC SHUTDOWN (ASD); IGNITION SYSTEM	8D-19	REPAIR-MOLEX CONNECTORS, TERMINAL/CONNECTOR	8-11	ROTOR, DISC BRAKE	5-13
RELAY, BLOWER MOTOR	24-19,24-39,24-5	REPAIR—THOMAS AND BETTS CONNECTORS, TERMINAL/CONNECTOR	8-11	ROTOR MACHINING, DISC	5-16
RELAY, COMPRESSOR CLUTCH	24-21,24-32, 24-6	REPLACEMENT-IN VEHICLE, VALVE SPRING AND STEM SEAL	9-102,9-67	ROTOR - WITH TAPERED BEARINGS, DISC BRAKE	5-24
RELAY, FILTER, CHOKE, AND SPEAKER	8F-2, 8F-5,8F-8	REPLACING WATER-TO-OIL COOLER IN RADIATOR SIDE TANK	7-43	ROTOR WITH 5 STUDS AND HUB BEARINGS, DISC BRAKE	5-25
RELAY, FUEL HEATER	14-73,14-99	REQUIREMENTS, FUEL	14-1	ROTOR WITH 8 STUDS AND HUB/ BEARING, DISC BRAKE	5-25
RELAY, FUEL PUMP	14-58	REQUIREMENTS—DIESEL ENGINE, FUEL RESERVE/OVERFLOW SYSTEM, COOLANT	7-11,7-3	ROTOR—3.9L/5.2L/5.9L ENGINES, DISTRIBUTOR	8D-10
RELAY, FUEL SHUTDOWN SOLENOID	14-110, 14-76	RESERVE/OVERFLOW TANK, COOLANT	7-28	RUN LOWER CHANNELS, FRONT DOOR GLASS	23-35
RELAY, HEADLAMP; POWER LOCK SYSTEMS	8P-3,8P-8	RESERVOIR, MASTER CYLINDER	5-34	RUN WEATHERSTRIP, FRONT DOOR GLASS	23-36
RELAY, HEADLAMP; VEHICLE THEFT/ SECURITY SYSTEMS	8Q-3,8Q-5	RESERVOIR, VACUUM; HEATING AND AIR CONDITIONING	24-10,24-36	RUNNING LAMP MODULE (DRLM), DAYTIME	8L-15
RELAY, HORN; HORN SYSTEMS	8G-1,8G-2,8G-3	RESERVOIR, VACUUM; SPEED CONTROL SYSTEM	8H-2,8H-9	RUNNING LAMPS, DAYTIME	8L-1
RELAY, HORN; POWER LOCK SYSTEMS	8P-4, 8P-8	RESERVOIR, WASHER	8K-3	RUNOUT	3-4
RELAY, HORN; VEHICLE THEFT/ SECURITY SYSTEMS	8Q-3,8Q-5	RESISTANCE, SPARK PLUG CABLE	8D-29	RUNOUT, CLUTCH	6-4
RELAY, INTERMITTENT WIPE	8K-3,8K-6,8K-9	RESISTANCE TESTS, CHARGING SYSTEM	8C-3	RUNOUT, TIRE AND WHEEL	22-8
RELAY SENSE—PCM INPUT, AUTOMATIC SHUTDOWN (ASD)	14-32	RESISTANCE—3.9L/5.2L/5.9L ENGINES, IGNITION COIL	8D-29	RWAL BRAKE BLEEDING	5-48
RELAY, STARTER	8B-10,8B-2	RESISTANCE—8.0L V-10 ENGINE, IGNITION COIL	8D-29	RWAL COMPONENT LOCATION	5-45
RELAY TEST, AUTOMATIC SHUTDOWN (ASD); FUEL SYSTEM	14-127	RESISTOR, BLOWER MOTOR	24-19,24-39,24-5	RWAL PERFORMANCE CHARACTERISTICS	5-43
RELAY TEST, AUTOMATIC SHUTDOWN (ASD); IGNITION SYSTEM	8D-7	RESTRAINT SYSTEM, 8W-67	8-1	RWAL VALVE	5-46,5-49
RELAY TEST, INTAKE MANIFOLD AIR HEATER	14-129	RESTRICTIONS, FUEL SUPPLY	14-78	SAFETY CATCH, HOOD	23-23
RELAY TEST—FUEL HEATER/FUEL SHUTDOWN SOLENOID	14-82	RETAINER BUSHING AND SEAL, REAR	21-336	SAFETY CERTIFICATION LABEL, VEHICLE	Intro-1
RELAY—3.9L/5.2L/5.9L ENGINES, AUTOMATIC SHUTDOWN (ASD)	8D-4	RETAINER, CRANKSHAFT REAR SEAL/ RETAINER, OVERRUNNING CLUTCH CAM/OVERDRIVE PISTON	21-151,21-274	SAFETY PRECAUTIONS; BODY	23-6
RELAY—8.0L V-10 ENGINE, AUTOMATIC SHUTDOWN (ASD)	8D-4	RETAINER, OVERRUNNING CLUTCH/ LOW-REVERSE DRUM/OVERDRIVE PISTON	21-181,21-304	SAFETY PRECAUTIONS; LAMPS	8L-1
RELAY—PCM OUTPUT, AIR CONDITIONING (A/C) CLUTCH	14-40	RETAINER, ROOF RAIL WEATHERSTRIP	23-45	SAFETY PRECAUTIONS AND WARNINGS	23-1
RELAY—PCM OUTPUT, AIR CONDITIONING CLUTCH	14-124	RETRACTOR LATCH SOLENOID, SEAT BELT	8M-14,8M-16	SANDING, BUFFING, AND POLISHING, WET	23-4
RELAY—PCM OUTPUT, AUTO SHUTDOWN (ASD)	14-40	RETRACTOR—CLUB/QUAD CAB, FRONT SEAT BELT	23-57	SCAN TOOL, DRB	7-13
RELAY—PCM OUTPUT, AUTOMATIC SHUTDOWN (ASD)	14-124	RETRACTOR—CONVENTIONAL CAB, SEAT BELT	23-57	SCHEDULE—A	0-19
RELAY—PCM OUTPUT, FUEL PUMP	14-42	RETURN—PCM INPUT, SENSOR	14-39	SCHEDULE—A, HEAVY DUTY	0-14
RELAY—PCM OUTPUT, TRANSMISSION	14-44	REVOLUTIONS PER MILE, TIRE	22-6	SCHEDULE—A, LIGHT DUTY	0-4
RELAYS; POWER LOCK SYSTEMS	8P-7	REWORK, CRANKSHAFT	9-173	SCHEDULE—A, MEDIUM DUTY	0-9

Description	Group-Page	Description	Group-Page	Description	Group-Page
SCHEDULES—LIGHT DUTY VEHICLES, MAINTENANCE	0-4	SEAT TRACK—STD CAB, SPLIT BENCH	23-12	SENSOR, THROTTLE POSITION; IGNITION SYSTEM	8D-23,8D-6
SCHEDULES—MEDIUM DUTY VEHICLES, MAINTENANCE	0-9	SEATBELT CONTROL TIMER MODULE	8M-13, 8M-15	SENSOR (TPS)—3.9L/5.2L/5.9L ENGINES, THROTTLE POSITION	14-56,14-60
SCHEMATICS, HYDRAULIC	21-187,21-310	SEATBELT TIMER CONTROL MODULE	8M-17	SENSOR (TPS)—3.9L/5.2L/5.9L ENGINES—PCM INPUT, THROTTLE POSITION	14-39
SCHEMATICS, VACUUM	25-20	SEAT/CONSOLE, CENTER	23-60	SENSOR (TPS)—8.0L ENGINE, THROTTLE POSITION	14-57,14-60
SEAL AND BEARING, 9 1/4 HD AXLE	3-66	SEAT—CLUB CAB, REAR	23-60	SENSOR (TPS)—8.0L ENGINE—PCM INPUT, THROTTLE POSITION	14-39
SEAL AND BEARING, 9 1/4 LD AXLE	3-66	SEAT—CLUB/QUAD CAB, SPLIT BENCH	23-59	SENSOR, WASHER FLUID LEVEL	8K-4
SEAL AND BUSHING, EXTENSION/ ADAPTER HOUSING	21-53	SEAT—CONVENTIONAL CAB, SPLIT BENCH	23-59	SENSOR, WATER-IN-FUEL	14-135
SEAL AND SPRING REPLACEMENT, VALVE STEM	9-135	SEATS	23-11	SENSOR, WHEEL SPEED	5-53
SEAL AREA LEAKS, INSPECTION FOR REAR	9-9	SECONDARY SEAL, B-PILLAR	23-36	SENSOR—3.9L V-6 ENGINE, CRANKSHAFT POSITION	8D-4
SEAL, AXLE SHAFT OIL	3-35	SECONDARY SEAL, CARGO DOOR	23-44	SENSOR—3.9L/5.2L/5.9L ENGINES, CAMSHAFT POSITION	8D-11,8D-20,8D-6
SEAL, B-PILLAR SECONDARY	23-36	SECONDARY SEAL, FRONT DOOR	23-37	SENSOR—3.9L/5.2L/5.9L ENGINES, CRANKSHAFT POSITION	8D-19
SEAL, CARGO DOOR PRIMARY	23-44	SECTION IDENTIFICATION	8-5	SENSOR—3.9L/5.2L/5.9L ENGINES, ENGINE COOLANT TEMPERATURE	14-54,14-66
SEAL, CARGO DOOR SECONDARY	23-44	SECURITY LAMP; INSTRUMENT PANEL SYSTEMS	8E-11,8E-22	SENSOR—3.9L/5.2L/5.9L ENGINES, INTAKE MANIFOLD AIR TEMPERATURE	14-55, 14-67
SEAL (COVER NOT REMOVED), TIMING CHAIN COVER OIL	9-143	SECURITY LAMP; VEHICLE THEFT/ SECURITY SYSTEMS	8Q-3	SENSOR—3.9L/5.2L/5.9L ENGINES, MANIFOLD ABSOLUTE PRESSURE (MAP)	14-62
SEAL (COVER REMOVED), TIMING CHAIN COVER OIL	9-143	SECURITY SYSTEM, 8W-39 VEHICLE THEFT	8-1	SENSOR—3.9L/5.2L/5.9L ENGINES—PCM INPUT, CAMSHAFT POSITION	14-33
SEAL, CRANKSHAFT FRONT	9-194	SECURITY SYSTEM, VEHICLE THEFT	8Q-1,8Q-3	SENSOR—3.9L/5.2L/5.9L ENGINES—PCM INPUT, CRANKSHAFT POSITION	14-33
SEAL, CRANKSHAFT FRONT OIL	9-43	SELECTION-ADDITIVES, COOLANT	7-10	SENSOR—3.9L/5.2L/5.9L ENGINES—PCM INPUT, ENGINE COOLANT TEMPERATURE	14-34
SEAL, CRANKSHAFT REAR	9-195	SELECTOR INDICATOR, GEAR	8E-27,8E-9	SENSOR—3.9L/5.2L/5.9L ENGINES—PCM INPUT, INTAKE MANIFOLD AIR TEMPERATURE	14-35
SEAL, DOOR OPENING	23-36	SENDING UNIT, FUEL GAUGE	14-10,14-18,14-5, 14-72	SENSOR—3.9L/5.2L/5.9L ENGINES, MANIFOLD ABSOLUTE PRESSURE (MAP)	14-36
SEAL, EXTENSION HOUSING BUSHING	21-364	SENSE—PCM INPUT, AUTOMATIC SHUTDOWN (ASD)	14-119	SENSOR—3.9L/5.2L/5.9L ENGINES—PCM INPUT, MANIFOLD ABSOLUTE PRESSURE (MAP)	14-36
SEAL, FRONT CRANKSHAFT OIL	9-111,9-77	SENSE—PCM INPUT, AUTOMATIC SHUTDOWN (ASD) RELAY	14-32	SENSOR—5.2L/5.9L V-8 ENGINES, CRANKSHAFT POSITION	8D-5
SEAL, FRONT DOOR SECONDARY	23-37	SENSE—PCM INPUT, IGNITION CIRCUIT	14-35	SENSOR—8.0L ENGINE, ENGINE COOLANT TEMPERATURE	14-55,14-67
SEAL, FRONT DOOR UPPER CORNER	23-37	SENSE—PCM INPUT, PTO SWITCH	14-39	SENSOR—8.0L ENGINE, INTAKE MANIFOLD AIR TEMPERATURE	14-56,14-67
SEAL, FRONT OUTPUT SHAFT	21-362	SENSING PROPORTIONING VALVE, HEIGHT	5-12,5-19,5-5	SENSOR—8.0L ENGINE, MANIFOLD ABSOLUTE PRESSURE (MAP)	14-62
SEAL HOUSING, CRANKSHAFT REAR	9-195	SENSITIVE DEVICES, ELECTROSTATIC DISCHARGE (ESD)	8-8	SENSOR—8.0L ENGINE—PCM INPUT, CRANKSHAFT POSITION	14-34
SEAL, PINION	3-132,3-67,3-97	SENSOR, AMBIENT TEMPERATURE	8V-8	SENSOR—8.0L ENGINE—PCM INPUT, ENGINE COOLANT TEMPERATURE	14-34
SEAL, REAR RETAINER BUSHING	21-336	SENSOR AND EXCITER RING, REAR WHEEL SPEED	5-46	SENSOR—8.0L ENGINE—PCM INPUT, INTAKE MANIFOLD AIR TEMPERATURE	14-35
SEAL REPLACEMENT, YOKE	21-120,21-239,21-7	SENSOR, BATTERY TEMPERATURE	8C-2,8C-5, 8C-7	SENSOR—8.0L ENGINE—PCM INPUT, MANIFOLD ABSOLUTE PRESSURE (MAP)	14-36
SEAL REPLACEMENT-IN VEHICLE, VALVE SPRING AND STEM	9-102,9-67	SENSOR, CAMSHAFT POSITION	14-63	SENSOR—8.0L ENGINE—PCM INPUT, CRANKSHAFT POSITION	14-34
SEAL/ RETAINER, CRANKSHAFT REAR	9-149	SENSOR, CRANKSHAFT POSITION; FUEL SYSTEM	14-63	SENSOR—8.0L ENGINE—PCM INPUT, ENGINE COOLANT TEMPERATURE	14-34
SEAL—216 FBI AXLE, PINION SHAFT	3-25	SENSOR, CRANKSHAFT POSITION; IGNITION SYSTEM	8D-11	SENSOR—8.0L ENGINE—PCM INPUT, INTAKE MANIFOLD AIR TEMPERATURE	14-35
SEAL—248 FBI AXLE, PINION SHAFT	3-26	SENSOR, ENGINE COOLANT TEMPERATURE	8D-13,8D-23,8D-6	SENSOR—8.0L ENGINE—PCM INPUT, MANIFOLD ABSOLUTE PRESSURE (MAP)	14-36
SEAL—NV231HD, FRONT OUTPUT SHAFT	21-333	SENSOR, ENGINE SPEED	14-130	SENSOR—8.0L ENGINE—PCM INPUT, CRANKSHAFT POSITION	14-34
SEAL—NV241LD, FRONT OUTPUT SHAFT	21-334	SENSOR, GOVERNOR SOLENOID AND PRESSURE	21-121,21-240	SENSOR—8.0L ENGINE—PCM INPUT, ENGINE COOLANT TEMPERATURE	14-34
SEAL—PRESSURE RELIEF CHECK, RADIATOR CAP-TO-FILLER NECK	7-24	SENSOR, INTAKE MANIFOLD AIR TEMPERATURE; FUEL SYSTEM	14-133	SENSOR—8.0L ENGINE—PCM INPUT, INTAKE MANIFOLD AIR TEMPERATURE	14-35
SEALS, CRANKSHAFT REAR OIL	9-111,9-43, 9-77	SENSOR, INTAKE MANIFOLD AIR TEMPERATURE; IGNITION SYSTEM	8D-13, 8D-23,8D-6	SENSOR—8.0L ENGINE—PCM INPUT, MANIFOLD ABSOLUTE PRESSURE (MAP)	14-36
SEAT, 8W-63 POWER	8-1	SENSOR, MANIFOLD ABSOLUTE PRESSURE (MAP)	8D-23,8D-6	SENSOR—8.0L ENGINE—PCM INPUT, CAMSHAFT POSITION	14-33
SEAT ADJUSTER AND MOTORS, POWER	8R-1, 8R-2,8R-4	SENSOR, MAP	8D-11	SENSOR—8.0L V-10 ENGINE, CAMSHAFT POSITION	8D-21,8D-6
SEAT BACK, BENCH	23-11	SENSOR—2WD, FRONT WHEEL SPEED	5-55	SENSOR—8.0L V-10 ENGINE, CRANKSHAFT POSITION	8D-20,8D-5
SEAT BACK COVER, BENCH	23-12	SENSOR—4WD, FRONT WHEEL SPEED	5-55	SENSOR—DIESEL ENGINE, ENGINE COOLANT TEMPERATURE	25-31,25-33
SEAT BACK COVER—QUAD CAB, FRONT	23-17	SENSOR (O2S)—3.9L/5.2L/5.9L LDC ENGINES—PCM INPUT, OXYGEN	14-36	SENSOR—DIESEL ENGINE, THROTTLE POSITION	14-131
SEAT BACK COVER—STD CAB, SPLIT BENCH	23-13	SENSOR (O2S)—8.0L MDC ENGINES—PCM INPUT, OXYGEN	14-38	SENSOR—PCM INPUT, BATTERY TEMPERATURE	14-119,14-32
SEAT BACK—QUAD CAB, FRONT	23-15	SENSOR (O2S)—HDC ENGINES—PCM INPUT, OXYGEN	14-37	SENSOR—PCM INPUT, ENGINE SPEED	14-119
SEAT BACK—STD CAB, SPLIT BENCH	23-13	SENSOR, REAR WHEEL SPEED	5-50,5-56	SENSOR—PCM INPUT, FUEL LEVEL	14-35
SEAT BELT BUCKLE	23-58	SENSOR RETURN—PCM INPUT	14-39	SENSOR—PCM INPUT, INTAKE MANIFOLD AIR TEMPERATURE	14-119
SEAT BELT BUCKLE, REAR	23-58	SENSOR SUPPLY—PRIMARY, FIVE VOLT	14-35	SENSOR—PCM INPUT, OIL PRESSURE	14-36
SEAT BELT CONTROL SYSTEM, STRUCTURAL	8M-13	SENSOR SUPPLY—SECONDARY, FIVE VOLT	14-35	SENSOR—PCM INPUT, OUTPUT SHAFT SPEED	14-36
SEAT BELT CONTROL SYSTEM TEST MODE	8M-14	SENSOR TEST, ENGINE SPEED	14-127	SENSOR—PCM INPUT, THROTTLE POSITION	14-122
SEAT BELT CONTROL SYSTEMS	8M-13	SENSOR TEST, INTAKE MANIFOLD AIR TEMPERATURE	14-127	SENSOR—PCM INPUT, TRANSMISSION GOVERNOR PRESSURE	14-123,14-39
SEAT BELT REMINDER LAMP	8E-10,8E-22	SENSOR TEST, THROTTLE POSITION	14-129	SENSOR—PCM INPUT, TRANSMISSION TEMPERATURE	14-122,14-39
SEAT BELT RETRACTOR LATCH	8M-14,8M-16	SENSOR TEST, TRANSMISSION TEMPERATURE	14-129	SENSOR—PCM INPUT, WATER-IN-FUEL	14-123
SEAT BELT RETRACTOR—CLUB/QUAD CAB, FRONT	23-57	SENSOR TEST—3.9L/5.2L/5.9L ENGINES, MANIFOLD ABSOLUTE PRESSURE (MAP)	14-51	SENSORS, CAMSHAFT AND CRANKSHAFT POSITION	14-54
SEAT BELT RETRACTOR—CONVENTIONAL CAB	23-57	SENSOR TEST—8.0L ENGINE, MANIFOLD ABSOLUTE PRESSURE (MAP)	14-52	SENSORS—3.9L/5.2L/5.9L LCD ENGINES, OXYGEN (O2S)	14-53
SEAT BELT SWITCH, DRIVER	8U-2,8U-5	SENSOR TEST—8.0L V-10 ENGINE, CAMSHAFT POSITION	8D-12		
SEAT, BENCH	23-58	SENSOR, THROTTLE POSITION; EMISSION CONTROL SYSTEMS	25-33		
SEAT CUSHION COVER, BENCH	23-12				
SEAT CUSHION COVER—QUAD CAB, FRONT	23-18				
SEAT CUSHION COVER—STD CAB, SPLIT BENCH	23-14				
SEAT CUSHION—QUAD CAB, FRONT	23-17				
SEAT RECLINER—QUAD CLUB, FRONT	23-16				
SEAT RISER—QUAD CAB, FRONT	23-14				
SEAT SWITCH, POWER	8R-1,8R-3,8R-4				
SEAT SYSTEM, POWER	8R-1,8R-2				
SEAT TRACK ADJUSTER—QUAD CAB, FRONT	23-14				
SEAT TRACK, BENCH	23-11				
SEAT TRACK—CLUB CAB, EZ ENTRY	23-15				

Description	Group-Page	Description	Group-Page	Description	Group-Page
SENSORS—3.9L/5.2L/5.9L LDC/HDC ENGINES, OXYGEN	14-63	SHOES – 13 INCH BRAKE, BRAKE SHUTDOWN (ASD) RELAY, AUTOMATIC; FUEL SYSTEM	5-30	SOLENOID, DUTY CYCLE EVAP CANISTER PURGE; FUEL SYSTEM	14-63
SENSORS—5.9L HDC ENGINE, OXYGEN (O2S)	14-53	SHUTDOWN (ASD) RELAY, AUTOMATIC; IGNITION SYSTEM	14-58	SOLENOID, EGR VALVE VACUUM REGULATOR	25-33
SENSORS—8.0L ENGINES, OXYGEN	14-64	SHUTDOWN (ASD) RELAY SENSE—PCM INPUT, AUTOMATIC	8D-19	SOLENOID, FUEL SHUTDOWN	14-108,14-75
SENSORS—8.0L HDC/MDC ENGINES, OXYGEN (O2S)	14-54	SHUTDOWN (ASD) RELAY TEST, AUTOMATIC; FUEL SYSTEM	14-32	SOLENOID RELAY, FUEL SHUTDOWN	14-110, 14-76
SEPARATOR, FUEL FILTER/WATER	14-74,14-96	SHUTDOWN (ASD) RELAY TEST, AUTOMATIC; IGNITION SYSTEM	14-127	SOLENOID, RELAY TEST—FUEL HEATER/FUEL SHUTDOWN	14-82
SEQUENCE, 3-4 SHIFT	21-213,21-94	SHUTDOWN (ASD) RELAY TEST, AUTOMATIC; IGNITION SYSTEM	8D-7	SOLENOID, SEAT BELT RETRACTOR LATCH	8M-14,8M-16
SERVICE—DIESEL ENGINE, COOLANT	7-26	SHUTDOWN (ASD) RELAY—3.9L/5.2L/5.9L ENGINES, AUTOMATIC	8D-4	SOLENOID TEST, EGR VALVE VACUUM REGULATOR	25-30
SERVICE—V-6, V-8, AND V-10 ENGINES, COOLANT	7-26	SHUTDOWN (ASD) RELAY—8.0L V-10 ENGINE, AUTOMATIC	8D-4	SOLENOID TEST, FUEL SHUTDOWN	14-84
SERVO CABLE	8H-2,8H-8	SHUTDOWN (ASD) RELAY—PCM OUTPUT, AUTO	14-40	SOLENOID VALVE-PCM OUTPUT, DUTY CYCLE EVAP PURGE	14-40
SERVO, FRONT	21-181,21-304	SHUTDOWN (ASD) RELAY—PCM OUTPUT, AUTOMATIC	14-124	SOLENOID—PCM OUTPUT, GOVERNOR PRESSURE	14-44
SERVO PISTON, FRONT	21-153,21-276	SHUTDOWN (ASD) SENSE—PCM INPUT, AUTOMATIC	14-119	SOLENOID—PCM OUTPUT, THREE-FOUR SHIFT	14-44
SERVO PISTON, REAR	21-153,21-277	SHUTDOWN SOLENOID, FUEL	14-108,14-75	SOLENOID—PCM OUTPUT, TORQUE CONVERTOR CLUTCH (TCC)	14-125,14-44
SERVO, REAR	21-181,21-305	SHUTDOWN SOLENOID RELAY, FUEL	14-110, 14-76	SOLENOIDS—PCM OUTPUT, SPEED CONTROL	14-125,14-43
SERVO, SPEED CONTROL	8H-1,8H-4,8H-5	SHUTDOWN SOLENOID, RELAY TEST—FUEL HEATER/FUEL	14-82	SOURCE (+)—PCM OUTPUT, GENERATOR FIELD	14-124,14-42
SET, OVERSHOOT/UNDERSHOOT FOLLOWING SPEED CONTROL	8H-5	SHUTDOWN SOLENOID TEST, FUEL SHUTFACE HANDLE, CARGO DOOR	14-84	SPARE TIRE WINCH	13-6
SHAFT ANGLE MEASUREMENT, PROPELLER	3-5	SIDE AIRBAG TRIM COVER AND HORN SWITCH, DRIVER	8M-7	SPARE TIRE—TEMPORARY	22-2
SHAFT, AXLE	3-131,3-65,3-96	SIDE BEARINGS, DIFFERENTIAL	3-100,3-135, 3-70	SPARK AT COIL—3.9L/5.2L/5.9L ENGINES, TESTING	8D-7
SHAFT BUSHING, DISTRIBUTOR DRIVE	9-35, 9-74	SIDE BEARINGS—216 FBI AXLE, DIFFERENTIAL	3-33	SPARK PLUG CABLE ORDER—8.0L V-10 ENGINE	8D-28
SHAFT FRONT BEARING, OUTPUT	21-126, 21-245	SIDE BEARINGS—248 AXLES, DIFFERENTIAL	3-34	SPARK PLUG CABLE RESISTANCE	8D-29
SHAFT, FRONT PROPELLER	3-6	SIDE GEAR CLEARANCE	3-84	SPARK PLUG CABLES	8D-13,8D-15,8D-3
SHAFT, HUB BEARING AND AXLE	3-28	SIDE IDENTIFICATION (ID) LAMP BULBS	8L-8	SPARK PLUG CONDITIONS	8D-14
SHAFT, INTERMEDIATE AXLE	3-35	SIDE IDENTIFICATION (ID) LAMPS	8L-12	SPARK PLUGS	8D-17,8D-29,8D-3
SHAFT JOINT ANGLE, PROPELLER	3-2	SIDE MARKER LAMP, PARK, TURN SIGNAL	8L-11	SPEAKER	8F-2,8F-3,8F-8
SHAFT OIL SEAL, AXLE	3-35	SIDE MOLDINGS, BODY	23-47	SPEAKER RELAY, FILTER, CHOKE	8F-2,8F-5,8F-8
SHAFT, PLANETARY GEARTRAIN/OUTPUT	21-161,21-283,21-306	SIDE TANK, REPLACING WATER-TO-OIL COOLER IN RADIATOR	7-43	SPECIAL TOOLS—HEADLAMP ALIGNMENT	8L-6
SHAFT, PROPELLER	3-12,3-14	SIDE VIEW MIRROR, LOW MOUNTED	23-29	SPECIFICATIONS, 3.9L ENGINE	9-52
SHAFT, RACK PISTON AND WORM	19-16	SIDEVIEW MIRROR	23-28	SPECIFICATIONS, 5.2L ENGINE	9-86
SHAFT REAR BEARING, OUTPUT	21-125,21-244	SIGNAL AND BACK-UP LAMP BULB—CAB CHASSIS, TAIL, STOP, TURN	8L-9	SPECIFICATIONS, 5.9L DIESEL ENGINE	9-211
SHAFT, REAR PROPELLER	3-7	SIGNAL AND BACK-UP LAMP BULB—PICKUP, TAIL, STOP, TURN	8L-8	SPECIFICATIONS, 5.9L ENGINE	9-120
SHAFT SEAL, FRONT OUTPUT	21-362	SIGNAL AND BACK-UP LAMPS—CHASSIS CAB, TAIL, STOP, TURN	8L-12	SPECIFICATIONS, 8.0L ENGINE	9-154
SHAFT SEAL—216 FBI AXLE, PINION	3-25	SIGNAL AND BACK-UP LAMPS—PICKUP, TAIL, STOP, TURN	8L-12	SPECIFICATIONS, LUBRICANT	3-124,3-16,3-90
SHAFT SEAL—248 FBI AXLE, PINION	3-26	SIGNAL AND HAZARD WARNING SYSTEMS, TURN	8J-3	SPECIFICATIONS, TORQUE; BODY	23-67
SHAFT SEAL—NV231HD, FRONT OUTPUT	21-333	SIGNAL AND SIDE MARKER LAMP, PARK, TURN	8L-11	SPECIFICATIONS, TORQUE; ENGINE	9-122, 9-157,9-212,9-55,9-89
SHAFT SEAL—NV241LD, FRONT OUTPUT	21-334	SIGNAL GROUND—PCM INPUT	14-39	SPECIFICATIONS, TORQUE; EXHAUST SYSTEM AND INTAKE MANIFOLD	11-21
SHAFT SPEED SENSOR—PCM INPUT, OUTPUT	14-36	SIGNAL INDICATOR LAMP, TURN; INSTRUMENT PANEL SYSTEMS	8E-12,8E-23	SPECIFICATIONS, TORQUE; FRAME AND BUMPERS	13-10
SHAFT SUPPORT, OIL PUMP AND REACTION	21-154,21-182,21-277,21-305	SIGNAL INDICATOR LAMP, TURN; SIGNAL AND HAZARD WARNING SYSTEMS	8J-3	SPECIFICATIONS, TURBOCHARGER	11-21
SHAFT—CARDAN U-JOINT, AXLE	3-28	SIGNAL LAMP, PARK AND TURN	8L-8	SPEED ADJUSTMENT, IDLE	14-86
SHAFTS, PROPELLER	3-1	SIGNAL LAMP, TURN	8J-3	SPEED AND DISTANCE—PCM INPUT, VEHICLE	14-123,14-39
SHAFT/SEALS/BEARING, PITMAN	19-13	SIGNAL SWITCH AND HAZARD WARNING SWITCH, TURN	8J-2	SPEED CONTROL, 8W-33 VEHICLE	8-1
SHIELDS, EXHAUST HEAT	11-2,11-6	SIGNAL SYSTEM, TURN	8J-1	SPEED CONTROL SERVO	8H-1,8H-4,8H-5
SHIELDS, REAR SPLASH	23-48	SIGNALS, 8W-52 TURN	8-1	SPEED CONTROL SET, OVERSHOOT/UNDERSHOOT FOLLOWING	8H-5
SHIELDS—DIESEL, HEAT	11-13	SILENCER, HOOD	23-22	SPEED CONTROL SOLENOID CIRCUITS	8H-1
SHIFT BOOT—AUTOMATIC TRANSMISSION, 4WD FLOOR	23-62	SILL TRIM COVER, DOOR	23-53	SPEED CONTROL SOLENOIDS—PCM OUTPUT	14-125,14-43
SHIFT BOOT—MANUAL TRANSMISSION, 4WD FLOOR	23-61	SINGLE CARDAN UNIVERSAL JOINT	3-8	SPEED CONTROL SWITCHES	8H-1,8H-3,8H-7
SHIFT BOOT—MANUAL TRANSMISSION, FLOOR	23-61	SIZE AND RATINGS, BATTERY	8A-2	SPEED CONTROL SWITCHES—PCM INPUT	14-122,14-39
SHIFT COVER	21-51	SKID PLATE, TRANSFER CASE	13-6	SPEED CONTROL SYSTEM, ON-BOARD DIAGNOSTIC TEST	8H-3
SHIFT COVER INSPECTION	21-80	SLAM BUMPER, TAILGATE	23-52	SPEED INPUT, VEHICLE	8H-2
SHIFT COVER VENT	21-47	SLIDING BACKLITE	23-9	SPEED KNOCK, LOW	3-127,3-17,3-61,3-92
SHIFT FORK PADS, FIFTH-REVERSE	21-47	SLIDING BACKLITE LATCH AND KEEPER	23-10	SPEED OPERATION, TIRE PRESSURE FOR HIGH	22-3
SHIFT INTERLOCK, COLUMN	8D-28	SLIDING VENT GLASS	23-9	SPEED SENSOR AND EXCITER RING, REAR WHEEL	5-46
SHIFT LEVER	21-333,21-362	SLIPS OUT OF GEAR	21-47	SPEED SENSOR, ENGINE	14-130
SHIFT LEVER AND LINKAGE	21-389	SNAP, DRIVELINE	3-127,3-18,3-61,3-92	SPEED SENSOR – 2WD, FRONT WHEEL	5-55
SHIFT LEVER, GEAR	19-25	SOLENOID AND PRESSURE SENSOR, GOVERNOR	21-121,21-240	SPEED SENSOR – 4WD, FRONT WHEEL	5-55
SHIFT LINKAGE	21-409	SOLENOID CIRCUITS, SPEED CONTROL	8H-1	SPEED SENSOR, REAR WHEEL	5-50,5-56
SHIFT LINKAGE ADJUSTMENT	21-355,21-386	SOLENOID, DUTY CYCLE EVAP CANISTER PURGE; EMISSION CONTROL SYSTEMS	25-15,25-20	SPEED SENSOR TEST, ENGINE	14-127
SHIFT MOTOR, AXLE	3-27,3-41			SPEED SENSOR, WHEEL	5-53
SHIFT MOTOR DIAGNOSIS, AXLE VACUUM	3-21			SPEED SENSOR—PCM INPUT, ENGINE	14-119
SHIFT PATTERN	21-46			SPEED SENSOR—PCM INPUT, OUTPUT SHAFT	14-36
SHIFT SEQUENCE, 3-4	21-213,21-94			SPEEDOMETER	8E-16,8E-6
SHIFT SOLENOID—PCM OUTPUT, THREE-FOUR	14-44			SPEEDOMETER SERVICE	21-393
SHIFT TOWER	21-51			SPLASH SHIELDS, REAR	23-48
SHIFT VALVE OPERATION	21-213,21-94			SPLICE INFORMATION, 8W-70	8-1
SHIFTING, HARD	21-4,21-46				
SHIFTING, PTO ADAPTER OPERATING RANGES	21-391				
SHOCK ABSORBER	2-15,2-24,2-8				
SHOCK DIAGNOSIS	2-15,2-8				
SHOCK DIAGNOSIS, SPRING	2-23				
SHOES, DISC BRAKE	5-22				
SHOES – 11 INCH BRAKE, BRAKE	5-28				

Description	Group-Page	Description	Group-Page	Description	Group-Page
SPLICE LOCATIONS	8-1,8-7	STOP, TURN SIGNAL AND BACK-UP		SWITCH, HEADLAMP; INSTRUMENT	
SPLICE LOCATIONS, 8W-95	8-1	LAMP BULB—CAB CHASSIS, TAIL	8L-9	PANEL SYSTEMS	8E-28
SPLIT BENCH SEAT BACK COVER—STD		STOP, TURN SIGNAL AND BACK-UP		SWITCH, HIGH PRESSURE CUT-OFF	24-22, 24-25, 24-7
CAB	23-13	LAMP BULB—PICKUP, TAIL	8L-8	SWITCH, HORN	8G-1,8G-3,8G-4
SPLIT BENCH SEAT BACK—STD CAB	23-13	STOP, TURN SIGNAL AND BACK-UP		SWITCH, IGNITION	19-22
SPLIT BENCH SEAT CUSHION		LAMPS—CHASSIS CAB, TAIL	8L-12	SWITCH, KEY-IN IGNITION	8U-2,8U-4
COVER—STD CAB	23-14	STOP, TURN SIGNAL AND BACK-UP		SWITCH, LOW PRESSURE CYCLING	
SPLIT BENCH SEAT TRACK—STD CAB	23-12	LAMPS—PICKUP, TAIL	8L-12	CLUTCH	24-22, 24-32, 24-8
SPLIT BENCH SEAT—CLUB/QUAD CAB	23-59	STORAGE BIN, CUP HOLDER OR	8E-32	SWITCH, MULTI-FUNCTION; TURN	
SPLIT BENCH SEAT—CONVENTIONAL		STOWAGE TRAY, REAR FLOOR	23-62	SIGNAL AND HAZARD WARNING	
CAB	23-59	STRETCH, MEASURING TIMING CHAIN	9-129, 9-61, 9-95	SYSTEMS	8J-4, 8J-5
SPOOL VALVE	19-14	STRETCH, TIMING CHAIN	9-27	SWITCH, MULTI-FUNCTION; WIPER AND	
SPRING AND SHOCK DIAGNOSIS	2-23	STRIKER, CARGO DOOR LOWER	23-42	WASHER SYSTEMS	8K-9
SPRING AND STEM SEAL		STRIKER, CARGO DOOR UPPER	23-42	SWITCH, OVERDRIVE OFF	21-213, 21-94
REPLACEMENT-IN VEHICLE, VALVE	9-102, 9-67	STRIKER, FRONT DOOR LATCH	23-33	SWITCH, PARK/NEUTRAL POSITION	21-120, 21-215, 21-239, 21-96
SPRING, COIL	2-16	STRIKER, GLOVE BOX LATCH	8E-34	SWITCH, PASSENGER AIRBAG DISARM	8M-3, 8M-8
SPRING EYE BUSHINGS	2-26	STRIKER, HOOD LATCH	23-23, 23-65	SWITCH, POWER LOCK	8P-3, 8P-4, 8P-7
SPRING, LEAF	2-25	STRIKER, TAILGATE LATCH	23-52	SWITCH, POWER MIRROR	8T-1, 8T-2
SPRING, OIL PRESSURE REGULATOR		STRIP, GLOVE BOX OPENING UPPER		SWITCH, POWER SEAT	8R-1, 8R-3, 8R-4
VALVE	9-198	TRIM	8E-34	SWITCH, POWER WINDOW	8S-1, 8S-3, 8S-4
SPRING REPLACEMENT, VALVE STEM		STRIPE, TAPE	23-46	SWITCH REPLACEMENT, BACKUP LAMP	21-47
SEAL	9-135	STRUCTURAL SEAT BELT CONTROL		SWITCH SENSE—PCM INPUT, PTO	14-39
SPRINGS, ADJUSTMENT AT AXLE WITH		SYSTEM	8M-13	SWITCH, STOP LAMP; BRAKES	5-10, 5-17, 5-2, 5-39, 5-48
LEAF	3-12	STUDS AND HUB BEARINGS, DISC		SWITCH, STOP LAMP; SPEED CONTROL	
SPRINGS, COIL	2-9	BRAKE ROTOR WITH 5	5-25	SYSTEM	8H-2, 8H-3, 8H-7
SPRINGS, VALVES AND VALVE	9-103, 9-138, 9-182, 9-205, 9-23, 9-58, 9-69	STUDS AND HUB/BEARING, DISC BRAKE		SWITCH, TURN SIGNAL SWITCH AND	
SPRINGS, VALVES, GUIDES	9-46	ROTOR WITH 8	5-25	HAZARD WARNING	8J-2
SPRINGS—CYLINDER HEAD REMOVED,		STUDS, HUB/BEARING WITH 5	2-18	SWITCH, WIPER SWITCH AND WASHER	8K-2, 8K-6
VALVES AND VALVE	9-34	STUDS, HUB/BEARING WITH 8	2-19	SWITCHES, CHIME WARNING SYSTEM	8U-6
STABILIZER BAR	2-10, 2-17, 2-24	STUDS, WHEEL	2-11	SWITCHES, SPEED CONTROL	8H-1, 8H-3, 8H-7
STALL TEST ANALYSIS	21-100, 21-219	STUDS, WHEEL MOUNTING	2-21	SWITCHES—PCM INPUT, SPEED	
STALL TEST, CONVERTER	21-218, 21-99	STUDS—216 FBI AXLE, BALL	3-30	CONTROL	14-122, 14-39
STANCHION COVER	23-60	STUDS—248 FBI AXLE, BALL	3-31	SWITCH—PCM INPUT, BRAKE	14-119, 14-33
STANDARD DIFFERENTIAL	3-105, 3-125, 3-141, 3-16, 3-41, 3-59, 3-74, 3-90	SUCTION AND DISCHARGE LINE	24-26	SWITCH—PCM INPUT, OVERDRIVE/	
STANDARD SERVICE INFORMATION	9-1	SUCTION TUBE, OIL PAN	9-190	OVERDRIVE	14-36
START TEST—3.9L/5.2L/5.9L ENGINES,		SUN VISOR	23-63	SWITCH—PCM INPUT, PARK/NEUTRAL	
FAILURE TO	8D-8	SUPPLY RESTRICTIONS, FUEL	14-78	POSITION	14-122
STARTER	8B-2, 8B-8	SUPPLY TEST, VACUUM; EMISSION	25-31	SWITCH—PCM INPUT, TRANSMISSION	
STARTER RELAY	8B-10, 8B-2	CONTROL SYSTEMS	25-31	PARK/NEUTRAL	14-39
STARTING PROCEDURE, JUMP	0-24	SUPPLY TEST, VACUUM; SPEED	8H-3	SWITCH-PCM INPUT, OVERDRIVE/	
STARTING SYSTEM	8B-1, 8B-11, 8B-2	CONTROL SYSTEM	8H-3	OVERDRIVE	14-124
STARTING SYSTEM, 8W-21	8-1	SUPPLY—PRIMARY, FIVE VOLT SENSOR	14-35	SYMBOLS	8-5
STARTING, TOWING AND HOISTING,		SUPPLY—SECONDARY, FIVE VOLT	14-35	SYMBOLS, INTERNATIONAL	0-1
JUMP	0-24	SENSOR	14-35	SYMBOLS, INTERNATIONAL VEHICLE	
STATE DISPLAY TEST MODE	25-3	SUPPORT BRACKET, REARVIEW MIRROR	23-63	CONTROL AND DISPLAY	Intro.-6
STATIONARY GLASS	23-6	SUPPORT, OIL PUMP AND REACTION		SYSTEM, 8W-20 CHARGING	8-1
STEERING COLUMN	19-22, 19-23	SHAFT	21-154, 21-182, 21-277, 21-305	SYSTEM, 8W-21 STARTING	8-1
STEERING COLUMN OPENING COVER		SUPPORT PLATE, BRAKE	5-32	SYSTEM, 8W-39 VEHICLE THEFT	
AND KNEE BLOCKER	8E-30	SUPPRESSION, RADIO NOISE	8F-2	SECURITY	8-1
STEERING GEAR	19-18	SURFACE TOUCH-UP, PAINTED	23-4	SYSTEM, 8W-43 AIRBAG	8-1
STEERING GEAR LEAKAGE DIAGNOSIS,		SUSPENSION, ALIGNMENT IFS	2-3	SYSTEM, 8W-47 AUDIO	8-1
POWER	19-12	SUSPENSION, ALIGNMENT LINK/COIL	2-4	SYSTEM, 8W-67 RESTRAINT	8-1
STEERING GEAR, POWER	19-11, 19-12, 19-20, 19-21	SUSPENSION ARM, LOWER	2-10, 2-16	SYSTEM, AIR IN FUEL	14-77
STEERING KNUCKLE	2-16, 2-9	SUSPENSION ARM, UPPER	2-10, 2-16	SYSTEM, AIRBAG	8M-1, 8M-4
STEERING KNUCKLE—216 FBI AXLE	3-29	SUSPENSION COMPONENT	2-23	SYSTEM AND REMOTE KEYLESS ENTRY	
STEERING KNUCKLE—248 FBI AXLE	3-29	SUSPENSION, IFS FRONT	2-13	SYSTEM, POWER LOCK	8P-4
STEERING LINKAGE	19-26, 19-27, 19-29, 19-30	SUSPENSION (IFS), FRONT	2-7	SYSTEM, ANTILOCK BRAKE	5-51
STEERING LINKAGE—IFS SUSPENSION	19-26	SUSPENSION (IFS), INDEPENDENT	2-7	SYSTEM, AUDIO	8F-1, 8F-3
STEERING LINKAGE—LINK/COIL		FRONT	2-7	SYSTEM, AUTOMATIC DAY/NIGHT	
SUSPENSION	19-28	SUSPENSION, LINK/COIL	2-22	MIRROR	8T-4
STEERING, POWER	19-1	SUSPENSION LINK/COIL, FRONT	2-14	SYSTEM, BASE BRAKE	5-1, 5-7
STEERING PUMP - GASOLINE ENGINE,		SUSPENSION, REAR	2-23, 2-26	SYSTEM, BLEEDING ABS BRAKE	5-53
POWER	19-7	SUSPENSION, STEERING LINKAGE—IFS	19-26	SYSTEM, BRAKE	5-2
STEERING PUMP - INITIAL OPERATION,		SUSPENSION, STEERING LINKAGE—		SYSTEM CHARGE, REFRIGERANT	24-24
POWER	19-5	LINK/COIL	19-28	SYSTEM, CHARGING	8C-2
STEERING PUMP, POWER	19-10, 19-4	SWITCH AND HAZARD WARNING		SYSTEM CLEANING/REVERSE FLUSHING,	
STEERING PUMP—DIESEL ENGINE,		SWITCH, TURN SIGNAL	8J-2	COOLING	7-27
POWER	19-7	SWITCH AND KEY CYLINDER, IGNITION	8D-25	SYSTEM COMPONENTS AND FLOW—	
STEERING SYSTEM	19-1	SWITCH AND KEY LOCK CYLINDER,		DIESEL, COOLING	7-3
STEERING SYSTEM, FLUSHING POWER	19-6	IGNITION	8D-7	SYSTEM COMPONENTS AND FLOW—	
STEERING SYSTEM, POWER	19-2	SWITCH AND WASHER SWITCH, WIPER	8K-2, 8K-6	GAS ENGINES, COOLING	7-2
STEERING WHEEL	8M-12	SWITCH, BLOWER MOTOR	24-20, 24-5	SYSTEM, COOLANT RESERVE/	
STEM SEAL AND SPRING		SWITCH, CLUTCH PEDAL POSITION	6-4	OVERFLOW	7-11, 7-3
REPLACEMENT, VALVE	9-135	SWITCH, DOOR JAMB; PASSIVE		SYSTEM, COOLING	7-2
STEM SEAL REPLACEMENT-IN VEHICLE,		RESTRAINT SYSTEMS	8M-14, 8M-16	SYSTEM DESCRIPTION	25-2
VALVE SPRING	9-102, 9-67	SWITCH, DOOR JAMB; VEHICLE		SYSTEM DIAGNOSIS, LOW-PRESSURE	
STOP LAMP (CHMSL) BULB, CENTER		THEFT/SECURITY SYSTEMS	80-2, 80-4	FUEL	14-76
HIGH MOUNTED	8L-8	SWITCH, DOOR LOCK CYLINDER	80-3, 80-4	SYSTEM, DIESEL FUEL	14-116
STOP LAMP (CHMSL), CENTER HIGH		SWITCH, DRIVER DOOR JAMB	8U-2, 8U-3	SYSTEM, DRAINING COOLING	7-26
MOUNTED	8L-11	SWITCH, DRIVER SEAT BELT	8U-2, 8U-5	SYSTEM, ENGINE LUBRICATION	9-24
STOP LAMP SWITCH; BRAKES	5-10, 5-17, 5-2, 5-39, 5-48	SWITCH, DRIVER SIDE AIRBAG TRIM		SYSTEM EVACUATE, REFRIGERANT	24-23
STOP LAMP SWITCH; SPEED CONTROL		COVER AND HORN	8M-7	SYSTEM, EVAPORATION (EVAP)	
SYSTEM	8H-2, 8H-3, 8H-7	SWITCH, FOG LAMP	8E-29	CONTROL	25-14
		SWITCH, GLOVE BOX LAMP	8E-34		
		SWITCH, HEADLAMP; CHIME/BUZZER			
		WARNING SYSTEMS	8U-2, 8U-4		

Description	Group-Page	Description	Group-Page	Description	Group-Page
SYSTEM, EXHAUST	11-1	SYSTEMS, SEAT BELT CONTROL	8M-13	TEMPERATURE WARNING LAMP,	
SYSTEM, EXHAUST GAS		SYSTEMS, TURN SIGNAL AND HAZARD		TRANSMISSION OIL	8E-11,8E-23
RECIRCULATION (EGR)	25-27	WARNING	8J-3	TEMPERATURE WARNING LAMP—PCM	
SYSTEM FAN DRIVE—DIESEL ENGINE,		TABLES AND CHARTS—RE		OUTPUT, TRANSMISSION	14-125
COOLING	7-53	TRANSMISSION, DIAGNOSIS	21-101,21-220	TENSIONER, AUTOMATIC BELT	7-51,7-7
SYSTEM FAN—GAS ENGINES, COOLING	7-52	TACHOMETER	8E-16,8E-6	TENSIONER, PARKING BRAKE CABLE	5-40
SYSTEM, FLUSHING POWER STEERING	19-6	TACHOMETER—PCM OUTPUT	14-125,14-44	TENSIONER, TIMING CHAIN	9-37
SYSTEM FOR LEAKS, TESTING COOLING	7-19	TAIL, STOP, TURN SIGNAL AND		TENSION—ALL ENGINES, BELT	7-5
SYSTEM, FOUR WHEEL ANTILOCK		BACK-UP LAMP BULB—CAB CHASSIS	8L-9	TERMINAL REPLACEMENT	8-13
BRAKE	5-51	TAIL, STOP, TURN SIGNAL AND		TERMINAL REPLACEMENT, CONNECTOR	8-12
SYSTEM, FUEL	14-68	BACK-UP LAMP BULB—PICKUP	8L-8	TERMINAL/CONNECTOR REPAIR—MOLEX	
SYSTEM, HAZARD WARNING	8J-1	TAIL, STOP, TURN SIGNAL AND		CONNECTORS	8-11
SYSTEM, HEATED MIRROR	8N-1,8N-2,8N-3	BACK-UP LAMPS—CHASSIS CAB	8L-12	TERMINAL/CONNECTOR REPAIR—	
SYSTEM, HORN	8G-1	TAIL, STOP, TURN SIGNAL AND		THOMAS AND BETTS CONNECTORS	8-11
SYSTEM HOSES AND CLAMPS, COOLING	7-11	BACK-UP LAMPS—PICKUP	8L-12	TEST ANALYSIS, STALL	21-100,21-219
SYSTEM, HYDRAULIC CONTROL	21-213,21-94	TAILGATE	23-51	TEST, ANALYZING ROAD	21-215,21-96
SYSTEM LAMP, ANTI-LOCK BRAKE	8E-17,8E-7	TAILGATE APPLIQUE	23-53	TEST, AUTOMATIC SHUTDOWN (ASD)	
SYSTEM LEAKS, REFRIGERANT	24-22	TAILGATE CHECK CABLE	23-50	RELAY; FUEL SYSTEM	14-127
SYSTEM, LUBRICATION	9-127,9-162,9-59,9-93	TAILGATE DECALS	23-52	TEST, AUTOMATIC SHUTDOWN (ASD)	
SYSTEM, METRIC	Intro-10	TAILGATE HANDLE ESCUTCHEON	23-51	RELAY; IGNITION SYSTEM	8D-7
SYSTEM, ON-BOARD DIAGNOSTIC TEST		TAILGATE LATCH	23-52	TEST, CHECK VALVE	25-30
FOR CHARGING	8C-6	TAILGATE LATCH HANDLE	23-51	TEST, COLD CRANKING	8B-3
SYSTEM, ON-BOARD DIAGNOSTIC TEST		TAILGATE LATCH STRIKER	23-52	TEST, CONTROL CIRCUIT	8B-6
FOR SPEED CONTROL	8H-3	TAILGATE SLAM BUMPER	23-52	TEST, CONVERTER STALL	21-218,21-99
SYSTEM OPERATION, AIR INJECTION	25-23	TAILPIPE, EXHAUST	11-6	TEST, CURRENT OUTPUT	8C-4
SYSTEM OPERATION, CHARGING	8C-1	TAILPIPE—DIESEL, EXHAUST	11-12	TEST, CYLINDER COMBUSTION	
SYSTEM OPERATION, EGR	25-27	TAKE OUTS	8-8	PRESSURE LEAKAGE	9-8
SYSTEM, POSITIVE CRANKCASE		TAMPER ALERT	8Q-2	TEST, CYLINDER COMPRESSION	
VENTILATION (PCV)	25-16	TANK CAPACITY—DIESEL ENGINE, FUEL	14-115	PRESSURE	9-7
SYSTEM, POWER LOCK	8P-1,8P-4	TANK CAPACITY—GAS ENGINES, FUEL	14-26	TEST, EGR SYSTEM	25-29
SYSTEM, POWER LOCK SYSTEM AND		TANK, COOLANT RESERVE/OVERFLOW	7-28	TEST, EGR VALVE	25-30
REMOTE KEYLESS ENTRY	8P-4	TANK FILLER TUBE CAP, FUEL	14-23,14-6	TEST, EGR VALVE VACUUM REGULATOR	
SYSTEM, POWER MIRROR	8T-1,8T-2	TANK, FUEL	14-5,14-74,14-98	SOLENOID	25-30
SYSTEM, POWER SEAT	8R-1,8R-2	TANK MODULE, FUEL	14-72,14-98	TEST, ENGINE SPEED SENSOR	14-127
SYSTEM, POWER STEERING	19-2	TANK, REPLACING WATER-TO-OIL		TEST, FEED CIRCUIT	8B-3
SYSTEM, POWER WINDOW	8S-1,8S-2	COOLER IN RADIATOR SIDE	7-43	TEST FOR CHARGING SYSTEM,	
SYSTEM PRESSURE RELEASE		TANK—ALL ENGINES, FUEL	14-21	ON-BOARD DIAGNOSTIC	8C-6
PROCEDURE, FUEL	14-11	TAPE STRIPE	23-46	TEST FOR SPEED CONTROL SYSTEM,	
SYSTEM PRESSURE WARNING, FUEL	14-74	TAPERED BEARINGS, DISC BRAKE		ON-BOARD DIAGNOSTIC	8H-3
SYSTEM PRESSURE—GAS ENGINES,		ROTOR - WITH	5-24	TEST, FUEL HEATER	14-81
FUEL	14-26	TAPPET	9-189,9-206	TEST, FUEL INJECTION PUMP	14-84
SYSTEM PRESSURES—DIESEL		TAPPETS, HYDRAULIC	9-103,9-114,9-139,9-34,	TEST, FUEL INJECTOR	14-11,14-83
ENGINES, FUEL	14-115		9-46,9-69,9-80,9-9	TEST, FUEL PRESSURE LEAK DOWN	14-8
SYSTEM, REFILLING COOLING	7-26	TEMPERATURE CONTROL CABLE	24-40,24-48	TEST, FUEL PUMP AMPERAGE	14-9
SYSTEM, REMOTE KEYLESS ENTRY	8P-1	TEMPERATURE GAUGE, COOLANT	8E-14,8E-5	TEST, FUEL PUMP CAPACITY	14-8
SYSTEM RESISTANCE TESTS, CHARGING	8C-3	TEMPERATURE SENSOR, AMBIENT	8V-8	TEST, FUEL SHUTDOWN SOLENOID	14-84
SYSTEM SERVICE EQUIPMENT,		TEMPERATURE SENSOR, BATTERY	8C-2,8C-5,	TEST, FUEL TRANSFER PUMP	
REFRIGERANT	24-9		8C-7	PRESSURE/CAPACITY	14-78
SYSTEM SERVICE PORT, REFRIGERANT	24-10	TEMPERATURE SENSOR, ENGINE		TEST, HIGH-PRESSURE FUEL LINE LEAK	14-85
SYSTEM, STARTING	8B-1,8B-11,8B-2	COOLANT	8D-13,8D-23,8D-6	TEST, HYDRAULIC PRESSURE	21-216,21-97
SYSTEM, STEERING	19-1	TEMPERATURE SENSOR, INTAKE		TEST, HYDROMETER	8A-6
SYSTEM, STRUCTURAL SEAT BELT		MANIFOLD AIR; FUEL SYSTEM	14-133	TEST, IGNITION-OFF DRAW	8A-10
CONTROL	8M-13	TEMPERATURE SENSOR, INTAKE		TEST INDICATOR, BUILT-IN	8A-5
SYSTEM SWITCHES, CHIME WARNING	8U-6	MANIFOLD AIR; IGNITION SYSTEM	8D-13,	TEST, INTAKE MANIFOLD AIR HEATER	14-128
SYSTEM TEST, EGR	25-29		8D-23,8D-6	TEST, INTAKE MANIFOLD AIR HEATER	
SYSTEM TEST MODE, SEAT BELT		TEMPERATURE SENSOR TEST, INTAKE		RELAY	14-129
CONTROL	8M-14	MANIFOLD AIR	14-127	TEST, INTAKE MANIFOLD AIR	
SYSTEM, TURN SIGNAL	8J-1	TEMPERATURE SENSOR TEST,		TEMPERATURE SENSOR	14-127
SYSTEM, VACUUM	24-16	TRANSMISSION	14-129	TEST, LOAD	8A-8
SYSTEM, VEHICLE THEFT SECURITY	8Q-1,8Q-3	TEMPERATURE SENSOR—3.9L/5.2L/5.9L		TEST MODE, CIRCUIT ACTUATION	25-3
SYSTEM, WASHER	8K-10,8K-5	ENGINES, ENGINE COOLANT	14-54,14-66	TEST MODE, SEAT BELT CONTROL	
SYSTEM, WINDSHIELD WASHER	8K-1	TEMPERATURE SENSOR—3.9L/5.2L/5.9L		SYSTEM	8M-14
SYSTEM, WINDSHIELD WIPER	8K-1	ENGINES, INTAKE MANIFOLD AIR	14-55,14-67	TEST MODE, STATE DISPLAY	25-3
SYSTEM, WIPER	8K-4	TEMPERATURE SENSOR—3.9L/5.2L/5.9L		TEST, OPEN-CIRCUIT VOLTAGE	8A-8
SYSTEM-DIESEL ENGINE, EXHAUST GAS		ENGINES—PCM INPUT, ENGINE		TEST, OVERFLOW VALVE	14-81
RECIRCULATION (EGR)	25-27	COOLANT	14-34	TEST PORT, FUEL PUMP PRESSURE	
SYSTEM-DIESEL ENGINE, FUEL		TEMPERATURE SENSOR—3.9L/5.2L/5.9L		TEST—ALL ENGINES WITH PRESSURE	14-7
DELIVERY	14-70	ENGINES—PCM INPUT, INTAKE		TEST, RADIATOR COOLANT FLOW	7-19
SYSTEM-DIESEL ENGINE, FUEL		MANIFOLD AIR	14-35	TEST, ROAD	8H-2
INJECTION	14-117	TEMPERATURE SENSOR—8.0L ENGINE,		TEST, THROTTLE POSITION SENSOR	14-129
SYSTEM-GASOLINE ENGINE, FUEL		ENGINE COOLANT	14-55,14-67	TEST, TRAC-LOK	3-130,3-64
DELIVERY	14-3	TEMPERATURE SENSOR—8.0L ENGINE,		TEST, TRAC-LOK/POWER-LOK	3-95
SYSTEM-GASOLINE ENGINES, FUEL		INTAKE MANIFOLD AIR	14-56,14-67	TEST, TRANSMISSION TEMPERATURE	
INJECTION	14-27	TEMPERATURE SENSOR—8.0L		SENSOR	14-129
SYSTEM-HDC GAS ENGINES, AIR		ENGINE—PCM INPUT, ENGINE		TEST, VACUUM SUPPLY; EMISSION	
INJECTION	25-23	COOLANT	14-34	CONTROL SYSTEMS	25-31
SYSTEM—8.0L V-10 ENGINE,		TEMPERATURE SENSOR—8.0L		TEST, VACUUM SUPPLY; SPEED	
CRANKCASE VENTILATION	25-18	ENGINE—PCM INPUT, INTAKE		CONTROL SYSTEM	8H-3
SYSTEM—8.0L V-10 ENGINE, IGNITION	8D-2	MANIFOLD AIR	14-35	TEST, VOLTAGE DROP	8A-11
SYSTEM—DIESEL POWERED ENGINE,		TEMPERATURE SENSOR—DIESEL		TESTING COOLING SYSTEM FOR LEAKS	7-19
FUEL DELIVERY	14-70	ENGINE, ENGINE COOLANT	25-31,25-33	TESTING FOR SPARK AT COIL—3.9L/	
SYSTEM—GASOLINE POWERED		TEMPERATURE SENSOR—PCM INPUT,		5.2L/5.9L ENGINES	8D-7
ENGINES, FUEL DELIVERY	14-3	BATTERY	14-119,14-32	TESTING ONE-WAY CHECK VALVE	25-25
SYSTEM—V-6/V-8 ENGINES, IGNITION	8D-2	TEMPERATURE SENSOR—PCM INPUT,		TESTING RADIATOR CAPS, PRESSURE	7-25
SYSTEMS, 8W-30 FUEL/IGNITION	8-1	INTAKE MANIFOLD AIR	14-119	TESTING, ROAD	21-215,21-96
SYSTEMS, AIRBAG	8M-1	TEMPERATURE SENSOR—PCM INPUT,		TESTING TRANSMISSION CLUTCH AND	
SYSTEMS, LAMP	8L-15	TRANSMISSION	14-122,14-39	BAND OPERATION, AIR	21-100,21-219
SYSTEMS, MONITORED	25-9			TEST—3.9/5.2/5.9L ENGINE, PCV VALVE	25-19

Description	Group-Page	Description	Group-Page	Description	Group-Page
TEST—3.9L/5.2L/5.9L ENGINES, FAILURE TO START	8D-8	TIMING CHAIN COVER OIL SEAL (COVER NOT REMOVED)	9-143	TRACK—CLUB CAB, EZ ENTRY SEAT	23-15
TEST—3.9L/5.2L/5.9L ENGINES, IGNITION COIL	8D-7	TIMING CHAIN COVER OIL SEAL (COVER REMOVED)	9-143	TRACK—STD CAB, SPLIT BENCH SEAT	23-12
TEST—3.9L/5.2L/5.9L ENGINES, MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR	14-51	TIMING CHAIN STRETCH	9-27	TRAC-LOK	3-144,3-79
TEST—8.0L ENGINE, MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR	14-52	TIMING CHAIN STRETCH, MEASURING	9-129, 9-61,9-95	TRAC-LOK DIFFERENTIAL	3-107,3-142
TEST—8.0L V-10 ENGINE, CAMSHAFT POSITION SENSOR	8D-12	TIMING, FUEL INJECTION PUMP	14-88	TRAC-LOK DIFFERENTIAL, 9 1/4	3-75
TEST—ALL ENGINES WITH PRESSURE TEST PORT, FUEL PUMP PRESSURE	14-7	TIMING, IGNITION	8D-11,8D-28	TRAC-LOK OPERATION	3-125,3-59
TEST—FUEL HEATER/FUEL SHUTDOWN SOLENOID, RELAY	14-82	TIMING PIN	9-164,9-184	TRAC-LOK/POWER-LOK	3-112
TESTS, CHARGING SYSTEM RESISTANCE	8C-3	TIMING PIN HOUSING ASSEMBLY	9-185	TRAC-LOK/POWER-LOK OPERATION	3-90
TESTS, TROUBLESHOOTING	8-9	TIMING, VALVE	9-129,9-26,9-61,9-95	TRAC-LOK DIFFERENTIAL NOISE	3-127,3-61
TESTS—8.0L V-10 ENGINE, IGNITION COIL PACK	8D-8	TIRE AND WHEEL BALANCE	22-10	TRAC-LOK TEST	3-130,3-64
THEFT SECURITY SYSTEM, 8W-39 VEHICLE	8-1	TIRE AND WHEEL RUNOUT	22-8	TRAC-LOK/POWER-LOK DIFFERENTIAL NOISE	3-92
THEFT SECURITY SYSTEM, VEHICLE	8Q-1,8Q-3	TIRE INFLATION PRESSURES	22-2	TRAC-LOK/POWER-LOK TEST	3-95
THERMOMETER	8V-1,8V-4	TIRE NOISE OR VIBRATION	22-4	TRAILER HITCH	13-7
THERMOMETER DISPLAY MODULE, COMPASS	8V-2,8V-7	TIRE PRESSURE FOR HIGH SPEED OPERATION	22-3	TRAILER TOW, 8W-54	8-1
THERMOSTAT	7-4	TIRE REVOLUTIONS PER MILE	22-6	TRANSFER CASE	21-333,21-336,21-362,21-364
THERMOSTAT—3.9L V-6 OR 5.2/5.9L V-8	7-39	TIRE WEAR PATTERNS	22-3	TRANSFER CASE CLEANING AND INSPECTION	21-352,21-384
THERMOSTAT—8.0L V-10	7-40	TIRE WINCH, SPARE	13-6	TRANSFER CASE IDENTIFICATION	21-330, 21-360
THERMOSTAT—DIESEL	7-24,7-5	TIRE—TEMPORARY, SPARE	22-2	TRANSFER CASE, NV231HD AND NV241LD	21-330
THERMOSTAT—DIESEL ENGINE	7-41	TIRES	22-1	TRANSFER CASE, NV241HD	21-358
THERMOSTAT—GAS ENGINES	7-24	TIRES, CLEANING	22-6	TRANSFER CASE SKID PLATE	13-6
THERMOSTAT—V-6, V-8, AND V-10	7-5	TIRES, RADIAL-PLY	22-2	TRANSFER PUMP, FUEL	14-110,14-73
THREAD REPAIR, ALUMINUM	21-117,21-236	TIRES, REPLACEMENT	22-3	TRANSFER PUMP PRESSURE/CAPACITY TEST, FUEL	14-78
THREADED HOLE REPAIR	Intro-10	TO START TEST—3.9L/5.2L/5.9L ENGINES, FAILURE	8D-8	TRANSMISSION	21-117,21-141,21-180,21-200, 21-236,21-262,21-304,21-54,21-7,21-80
THREADS, REPAIR DAMAGED OR WORN THREE-FOUR SHIFT SOLENOID—PCM OUTPUT	14-44	TONE WHEEL	5-56	TRANSMISSION, 42RE	21-89
THROTTLE BODY MINIMUM AIR FLOW CHECK PROCEDURE	14-57	TOOL, DRB SCAN	7-13	TRANSMISSION, 46/47RE	21-207,21-323
THROTTLE BODY—3.9L/5.2L/5.9L ENGINES	14-44,14-58	TOOLS, TROUBLESHOOTING	8-8	TRANSMISSION, 4WD FLOOR SHIFT BOOT—AUTOMATIC	23-62
THROTTLE BODY—8.0L ENGINE	14-44,14-59	TOOLS—HEADLAMP ALIGNMENT, SPECIAL	8L-6	TRANSMISSION, 4WD FLOOR SHIFT BOOT—MANUAL	23-61
THROTTLE CABLE	14-114,14-24	TOP COVER, INSTRUMENT PANEL	8E-37	TRANSMISSION CLUTCH AND BAND OPERATION, AIR TESTING	21-100,21-219
THROTTLE CABLE, GEARSHIFT LINKAGE	21-215, 21-96	TORQUE; CLUTCH	6-17	TRANSMISSION COMPONENTS	21-38
THROTTLE LINKAGE ADJUSTMENT—DIESEL ENGINE	14-93	TORQUE; COOLING SYSTEM	7-55	TRANSMISSION CONTROLS, 8W-31	8-1
THROTTLE POSITION SENSOR; EMISSION CONTROL SYSTEMS	25-33	TORQUE; DIFFERENTIAL AND DRIVELINE	3-14, 3-152,3-50,3-84	TRANSMISSION DIAGNOSIS, AUTOMATIC	21-214,21-95
THROTTLE POSITION SENSOR; IGNITION SYSTEM	8D-23,8D-6	TORQUE; TRANSMISSION AND TRANSFER CASE	21-355,21-386,21-41,21-83	TRANSMISSION DIAGNOSIS TABLES AND CHARTS—RE	21-101,21-220
THROTTLE POSITION SENSOR TEST	14-129	TORQUE CART	19-27	TRANSMISSION FILL PROCEDURE	21-116, 21-235
THROTTLE POSITION SENSOR (TPS)—3.9L/5.2L/5.9L ENGINES	14-56,14-60	TORQUE CHART; BRAKES	5-42,5-50,5-56	TRANSMISSION, FLOOR SHIFT BOOT—MANUAL	23-61
THROTTLE POSITION SENSOR (TPS)—3.9L/5.2L/5.9L ENGINES—PCM INPUT	14-39	TORQUE CHART; CHARGING SYSTEM	8C-8	TRANSMISSION GEAR RATIOS	21-211,21-3, 21-92
THROTTLE POSITION SENSOR (TPS)—8.0L ENGINE	14-57,14-60	TORQUE CHART; EMISSION CONTROL SYSTEMS	25-22,25-26,25-34	TRANSMISSION GOVERNOR PRESSURE SENSOR—PCM INPUT	14-123,14-39
THROTTLE POSITION SENSOR (TPS)—8.0L ENGINE—PCM INPUT	14-39	TORQUE CHART; FUEL SYSTEM	14-26,14-68	TRANSMISSION IDENTIFICATION	21-210,21-46, 21-91
THROTTLE POSITION SENSOR—DIESEL ENGINE	14-131	TORQUE CHART; IGNITION SYSTEM	8D-29	TRANSMISSION LUBRICANT	21-1
THROTTLE POSITION SENSOR—PCM INPUT	14-122	TORQUE CHART; SPEED CONTROL SYSTEM	8H-10	TRANSMISSION LUBRICANT LEVEL AND CAPACITY	21-1
THROTTLE VALVE CABLE ADJUSTMENT, TRANSMISSION	21-184,21-307	TORQUE CHART; STEERING	19-10,19-20,19-25, 19-29	TRANSMISSION NOISE	21-4
TIMER CONTROL MODULE, SEATBELT	8M-17	TORQUE CHART; SUSPENSION	2-12,2-22,2-26	TRANSMISSION, NV3500 MANUAL	21-1,21-41
TIMER MODULE, 8W-45 CENTRAL	8-1	TORQUE CHART; TIRES AND WHEELS	22-11	TRANSMISSION, NV4500 MANUAL	21-44,21-83
TIMER MODULE, CENTRAL; CHIME/BUZZER WARNING SYSTEMS	8U-1,8U-3	TORQUE CHART—DIESEL ENGINE	14-135	TRANSMISSION OIL COOLER, AUXILIARY	7-6
TIMER MODULE, CENTRAL; HORN SYSTEMS	8G-2	TORQUE CHART—DIESEL ENGINES	14-116	TRANSMISSION OIL COOLER—3.9L/5.2L/5.9L ENGINES, AUXILIARY	7-43
TIMER MODULE, CENTRAL; INSTRUMENT PANEL SYSTEMS	8E-31,8E-4	TORQUE CONVERTER	21-120,21-239	TRANSMISSION OIL COOLER—5.9L DIESEL ENGINE, AUXILIARY	7-45
TIMER MODULE, CENTRAL; POWER LOCK SYSTEMS	8P-2,8P-5	TORQUE CONVERTER, ELECTRONIC LOCK-UP	21-210,21-91	TRANSMISSION OIL COOLER—8.0L ENGINE, AUXILIARY	7-44
TIMER MODULE, CENTRAL; VEHICLE THEFT/SECURITY SYSTEMS	8Q-2	TORQUE CONVERTOR CLUTCH (TCC) SOLENOID—PCM OUTPUT	14-125,14-44	TRANSMISSION OIL COOLERS—DIESEL ENGINE, AUTOMATIC	7-7
TIMER MODULE, CENTRAL; WIPER AND WASHER SYSTEMS	8K-3	TORQUE REFERENCES	Intro-10	TRANSMISSION OIL COOLERS—GAS ENGINES, AUTOMATIC	7-6
TIMER MODULE, SEATBELT CONTROL	8M-13, 8M-15	TORQUE SPECIFICATIONS; BODY	23-67	TRANSMISSION OIL TEMPERATURE WARNING LAMP	8E-11,8E-23
TIMING CHAIN	9-105,9-142,9-71	TORQUE SPECIFICATIONS; ENGINE	9-122,9-157, 9-212,9-55,9-89	TRANSMISSION PARK/NEUTRAL SWITCH—PCM INPUT	14-39
TIMING CHAIN AND TENSIONER	9-37	TORQUE SPECIFICATIONS; EXHAUST SYSTEM AND INTAKE MANIFOLD	11-21	TRANSMISSION, RE	21-325
TIMING CHAIN COVER	9-104,9-140,9-36,9-70	TORQUE SPECIFICATIONS; FRAME AND BUMPERS	13-10	TRANSMISSION RELAY—PCM OUTPUT	14-44
		TOUCH-UP, PAINTED SURFACE	23-4	TRANSMISSION TEMPERATURE SENSOR TEST	14-129
		TOW, 8W-54 TRAILER	8-1	TRANSMISSION TEMPERATURE SENSOR—PCM INPUT	14-122,14-39
		TOWER, SHIFT	21-51	TRANSMISSION TEMPERATURE WARNING LAMP—PCM OUTPUT	14-125
		TOWING AND HOISTING, JUMP STARTING	0-24	TRANSMISSION THROTTLE VALVE CABLE ADJUSTMENT	21-184,21-307
		TOWING, FOUR-WHEEL-DRIVE VEHICLE	0-26	TRANSMISSION—2WD	21-4,21-48
		TOWING RECOMMENDATIONS	0-24	TRANSMISSION—46/47RE, AUTOMATIC	21-206
		TOWING, TWO-WHEEL-DRIVE VEHICLE	0-26	TRANSMISSION—4WD	21-49,21-6
		(TPS)—3.9L/5.2L/5.9L ENGINES, THROTTLE POSITION SENSOR	14-56,14-60		
		(TPS)—3.9L/5.2L/5.9L ENGINES—PCM INPUT, THROTTLE POSITION SENSOR	14-39		
		(TPS)—8.0L ENGINE, THROTTLE POSITION SENSOR	14-57,14-60		
		(TPS)—8.0L ENGINE—PCM INPUT, THROTTLE POSITION SENSOR	14-39		
		TRACK ADJUSTER—QUAD CAB, FRONT SEAT	23-14		
		TRACK BAR	2-15,2-18		
		TRACK, BENCH SEAT	23-11		

Description	Group-Page	Description	Group-Page	Description	Group-Page
TRANSMISSION—42RE, AUTOMATIC	21-88	V-10 ENGINE, AIR CLEANER HOUSING/ AIR CLEANER ELEMENT (FILTER)— 8.0L	14-65	VALVE, COMBINATION	5-12,5-18,5-4
TRANSMISSIONS, RE	21-202	V-10 ENGINE, AIR INJECTION PUMP AIR FILTER—8.0L	25-26	VALVE, CONVERTER DRAINBACK	21-214,21-95
TRANSMITTER BATTERY REPLACEMENT, REMOTE KEYLESS ENTRY	8P-7	V-10 ENGINE, AUTOMATIC SHUTDOWN (ASD) RELAY—8.0L	8D-4	VALVE, EGR	25-32
TRANSMITTER PROGRAMMING, REMOTE KEYLESS ENTRY	8P-7	V-10 ENGINE, CAMSHAFT POSITION SENSOR TEST—8.0L	8D-12	VALVE, HEIGHT SENSING PROPORTIONING	5-12,5-19,5-5
TRANSMITTER, REMOTE KEYLESS ENTRY	8P-3,8P-6	V-10 ENGINE, CAMSHAFT POSITION SENSOR—8.0L	8D-21,8D-6	VALVE, HIGH PRESSURE RELIEF	24-8
TRAY, REAR FLOOR STOWAGE	23-62	V-10 ENGINE, CRANKCASE VENTILATION SYSTEM—8.0L	25-18	VALVE, OIL FILTER BYPASS	9-197
TREAD WEAR INDICATORS	22-3	V-10 ENGINE, CRANKSHAFT POSITION SENSOR—8.0L	8D-20,8D-5	VALVE, OIL PRESSURE REGULATOR	9-164
TRIM, A-PILLAR	23-55	V-10 ENGINE, FUEL INJECTOR RAIL—8.0L	14-20	VALVE, ONE-WAY CHECK	25-25,25-26
TRIM, B—PILLAR	23-55	V-10 ENGINE, IGNITION COIL PACK TESTS—8.0L	8D-8	VALVE OPERATION, SHIFT	21-213,21-94
TRIM, C—PILLAR	23-55	V-10 ENGINE, IGNITION COIL PACKS— 8.0L	8D-18	VALVE, OVERFLOW	14-112,14-74
TRIM COVER AND HORN SWITCH, DRIVER SIDE AIRBAG	8M-7	V-10 ENGINE, IGNITION COIL RESISTANCE—8.0L	8D-29	VALVE, QUICK FILL	21-214,21-95
TRIM COVER, COWL	23-54	V-10 ENGINE, IGNITION SYSTEM—8.0L	8D-2	VALVE, RWAL	5-46,5-49
TRIM COVER, DOOR SILL	23-53	V-10 ENGINE, SPARK PLUG CABLE ORDER—8.0L	8D-28	VALVE SERVICE	9-115,9-151,9-166,9-81
TRIM PANEL, CARGO DOOR	23-37	V-10 ENGINE, WATER PUMP—8.0L	7-31	VALVE SERVICE, CONVERTER DRAINBACK CHECK	21-116,21-235
TRIM PANEL, FRONT DOOR	23-29	V-10 ENGINES, COOLANT SERVICE—V-6, V-8	7-26	VALVE, SPOOL	19-14
TRIM PANEL—CLUB CAB, QUARTER	23-56	V-10 ENGINES, WATER PUMPS—V-6, V-8	7-11	VALVE SPRING AND STEM SEAL REPLACEMENT-IN VEHICLE	9-102,9-67
TRIM PANELS, INTERIOR	23-21	V-10, EXHAUST MANIFOLD	11-11	VALVE SPRINGS, VALVES	9-103,9-138,9-182, 9-205,9-23,9-58,9-69
TRIM, REAR CLOSURE PANEL	23-56	V-10, INTAKE MANIFOLD	11-8	VALVE SPRINGS—CYLINDER HEAD REMOVED, VALVES	9-34
TRIM STRIP, GLOVE BOX OPENING UPPER	8E-34	V-10, THERMOSTAT—8.0L	7-40	VALVE STEM SEAL AND SPRING REPLACEMENT	9-135
TRIP DEFINITION	25-11	V-10, THERMOSTAT—V-6, V-8	7-5	VALVE TEST, CHECK	25-30
TRIP ODOMETER, ODOMETER	8E-15,8E-5	V-6 ENGINE, CRANKSHAFT POSITION SENSOR—3.9L	8D-4	VALVE TEST, EGR	25-30
TROUBLE CODES, DIAGNOSTIC	25-3	V-6 ENGINE, ENGINE FIRING ORDER— 3.9L	8D-28	VALVE TEST, OVERFLOW	14-81
TROUBLESHOOTING TESTS	8-9	V-6 OR 5.2/5.9L V-8, THERMOSTAT— 3.9L	7-39	VALVE, TESTING ONE-WAY CHECK	25-25
TROUBLESHOOTING TOOLS	8-8	V-8, AND V-10 ENGINES, COOLANT SERVICE—V-6	7-26	VALVE TEST—3.9/5.2/5.9L ENGINE, PCV	25-19
TROUBLESHOOTING WIRING PROBLEMS	8-10	V-8, AND V-10 ENGINES, WATER PUMPS—V-6	7-11	VALVE TIMING	9-129,9-26,9-61,9-95
TUBE CAP, FUEL TANK FILLER	14-23,14-6	V-8, AND V-10, THERMOSTAT—V-6 V-8 ENGINES, CRANKSHAFT POSITION SENSOR—5.2L/5.9L	8D-5	VALVE, VACUUM CHECK	24-10,24-35
TUBE, EGR	25-32	V-8 ENGINES, ENGINE EXHAUST MANIFOLD—V-6	11-10,11-3	VALVE VACUUM REGULATOR SOLENOID, EGR	25-33
TUBE, FIXED ORIFICE	24-22,24-32,24-7	V-8 ENGINES, ENGINE FIRING ORDER—5.2L/5.9L	8D-28	VALVE VACUUM REGULATOR SOLENOID TEST, EGR	25-30
TUBE, OIL PAN AND SUCTION	9-190	V-8 ENGINES, INTAKE MANIFOLD—V-6	11-3	VALVE-PCM OUTPUT, DUTY CYCLE EVAP PURGE SOLENOID	14-40
TUBES, FLUSHING COOLERS	21-117,21-236	V-8 ENGINES, WATER PUMP—V-6	7-28	VALVES AND VALVE SPRINGS	9-103,9-138, 9-182,9-205,9-23,9-58,9-69
TUBES/LINES/HOSES AND CLAMPS, FUEL	14-11	V-8, THERMOSTAT—3.9L V-6 OR 5.2/5.9L	7-39	VALVES AND VALVE SPRINGS— CYLINDER HEAD REMOVED	9-34
TURBOCHARGER	11-16	VACUUM ACTUATOR, MODE DOOR	24-42	VALVES, GUIDES AND SPRINGS	9-46
TURBOCHARGER SPECIFICATIONS	11-21	VACUUM BRAKE BOOSTER	5-20	VALVE(S), ROLLOVER; EMISSION CONTROL SYSTEMS	25-14,25-20
TURBOCHARGER—5.9L DIESEL ENGINE	11-3	VACUUM CHECK VALVE	24-10,24-35	VALVE(S), ROLLOVER; FUEL SYSTEM	14-5, 14-74
TURN SIGNAL AND BACK-UP LAMP BULB—CAB CHASSIS, TAIL, STOP	8L-9	VACUUM PUMP	9-164,9-198	VARIATION ADJUSTMENT, COMPASS	8V-4
TURN SIGNAL AND BACK-UP LAMP BULB—PICKUP, TAIL, STOP	8L-8	VACUUM PUMP OUTPUT—DIESEL ENGINE	9-22	VECI LABEL; FUEL SYSTEM	14-26,14-68
TURN SIGNAL AND BACK-UP LAMPS— CHASSIS CAB, TAIL, STOP	8L-12	VACUUM REGULATOR SOLENOID, EGR VALVE	25-33	VECI LABEL; IGNITION SYSTEM	8D-28
TURN SIGNAL AND BACK-UP LAMPS— PICKUP, TAIL, STOP	8L-12	VACUUM RESERVOIR; HEATING AND AIR CONDITIONING	24-10,24-36	VEHICLE CONTROL AND DISPLAY SYMBOLS, INTERNATIONAL	Intro-6
TURN SIGNAL AND HAZARD WARNING SYSTEMS	8J-3	VACUUM RESERVOIR; SPEED CONTROL SYSTEM	8H-2,8H-9	VEHICLE DIMENSIONS; FRAME AND BUMPERS	13-7
TURN SIGNAL AND SIDE MARKER LAMP, PARK	8L-11	VACUUM SCHEMATICS	25-20	VEHICLE DIMENSIONS; INTRODUCTION	Intro-4
TURN SIGNAL INDICATOR LAMP; INSTRUMENT PANEL SYSTEMS	8E-12,8E-23	VACUUM SHIFT MOTOR DIAGNOSIS, AXLE	3-21	VEHICLE EMISSION CONTROL INFORMATION (VECI) LABEL	25-18
TURN SIGNAL INDICATOR LAMP; TURN SIGNAL AND HAZARD WARNING SYSTEMS	8J-3	VACUUM SUPPLY TEST; EMISSION CONTROL SYSTEMS	25-31	VEHICLE IDENTIFICATION NUMBER	Intro-1
TURN SIGNAL LAMP	8J-3	VACUUM SUPPLY TEST; SPEED CONTROL SYSTEM	8H-3	VEHICLE SAFETY CERTIFICATION LABEL	Intro-1
TURN SIGNAL LAMP, PARK	8L-8	VACUUM SYSTEM	24-16	VEHICLE SERVICE, CYLINDER HEAD COMPONENTS—IN	9-32
TURN SIGNAL SWITCH AND HAZARD WARNING SWITCH	8J-2	VALENCE PANEL, REAR	13-3	VEHICLE SPEED AND DISTANCE—PCM INPUT	14-123,14-39
TURN SIGNAL SYSTEM	8J-1	VALUE, LOAD	25-13	VEHICLE SPEED CONTROL, 8W-33	8-1
TURN SIGNALS, 8W-52	8-1	VALVE AND SPRING, OIL PRESSURE REGULATOR	9-198	VEHICLE SPEED INPUT	8H-2
TWO-WHEEL-DRIVE VEHICLE TOWING	0-26	VALVE BODY	21-122,21-126,21-179,21-186, 21-241,21-245,21-302,21-309	VEHICLE THEFT SECURITY SYSTEM	8Q-1,8Q-3
U-JOINT, AXLE SHAFT—CARDAN	3-28	VALVE CABLE ADJUSTMENT, TRANSMISSION THROTTLE	21-184,21-307	VEHICLE THEFT SECURITY SYSTEM, 8W-39	8-1
U-JOINT, CARDAN	3-42	VALVE CLEARANCE ADJUSTMENT	9-210	VEHICLE TOWING, FOUR-WHEEL-DRIVE	0-26
UNBALANCE	3-3			VEHICLE TOWING, TWO-WHEEL-DRIVE	0-26
UNDERHOOD LAMP BULB	8L-9			VEHICLE, VALVE SPRING AND STEM SEAL REPLACEMENT-IN	9-102,9-67
UNIT, FUEL GAUGE SENDING	14-10,14-18,14-5, 14-72			VENT, BODY	23-46
UNIT, HYDRAULIC CONTROL	5-52			VENT, CARGO DOOR EXHAUST	23-39
UNIT, OVERDRIVE	21-124,21-165,21-183, 21-243,21-288,21-306			VENT GLASS, SLIDING	23-9
UNIVERSAL JOINT, SINGLE CARDAN	3-8			VENT, SHIFT COVER	21-47
UNSCHEDULED INSPECTION	0-14,0-19,0-4,0-9			VENT WINDOW, CARGO DOOR	23-43
UP/DOWN, FRONT DOOR	23-66			VENT WINDOW WEATHERSTRIP, CARGO DOOR	23-43
UPPER BALL JOINT	2-11,2-8			VENT WINDOW WEATHERSTRIP, QUARTER	23-46
UPPER CORNER SEAL, FRONT DOOR	23-37			VENT WINDOW—CLUB CAB, QUARTER	23-46
UPPER FASCIA, FRONT BUMPER	13-1			VENTILATION (PCV) SYSTEM, POSITIVE CRANKCASE	25-16
UPPER LATCH, CARGO DOOR	23-41			VENTILATION SYSTEM—8.0L V-10 ENGINE, CRANKCASE	25-18
UPPER STRIKER, CARGO DOOR	23-42			VIBRATION	3-127,3-17,3-3,3-61,3-92
UPPER SUSPENSION ARM	2-10,2-16			VIBRATION DAMPER	9-104,9-140,9-36,9-69
UPPER TRIM STRIP, GLOVE BOX OPENING	8E-34				
UPSHIFT INDICATOR LAMP	8E-12,8E-24				
USAGE, FASTENER	Intro-10				

Description	Group-Page	Description	Group-Page	Description	Group-Page
VIBRATION, TIRE NOISE OR	22-4	WASHER SWITCH, WIPER SWITCH	8K-2,8K-6	WHEEL INSTALLATION	22-9
VIEW MIRROR, LOW MOUNTED SIDE	23-29	WASHER SYSTEM	8K-10,8K-5	WHEEL MOUNTING STUDS	2-21
VISCOUS FAN DRIVE	7-12,7-21	WASHER SYSTEM, WINDSHIELD	8K-1	WHEEL RUNOUT, TIRE	22-8
VISOR, SUN	23-63	WASTEGATE ADJUSTMENT	11-19	WHEEL SPEED SENSOR	5-53
VISUAL INSPECTION	14-125	WATER DAM, FRONT DOOR	23-30	WHEEL SPEED SENSOR AND EXCITER	
VISUAL INSPECTION—3.9L/5.2L/5.9L		WATER LEAKS	23-2	RING, REAR	5-46
ENGINES	14-45	WATER PUMP	7-24	WHEEL SPEED SENSOR – 2WD, FRONT	5-55
VISUAL INSPECTION—8.0L ENGINE	14-48	WATER PUMP BYPASS HOSE	7-35	WHEEL SPEED SENSOR – 4WD, FRONT	5-55
VOLT SENSOR SUPPLY—PRIMARY, FIVE	14-35	WATER PUMP INSPECTION	7-54	WHEEL SPEED SENSOR, REAR	5-50,5-56
VOLT SENSOR SUPPLY—SECONDARY,		WATER PUMP—5.9L DIESEL	7-11,7-35	WHEEL, STEERING	8M-12
FIVE	14-35	WATER PUMP—8.0L V-10 ENGINE	7-31	WHEEL STUDS	2-11
VOLTAGE DROP TEST	8A-11	WATER PUMP—V-6 AND V-8 ENGINES	7-28	WHEEL, TONE	5-56
VOLTAGE REGULATOR, ELECTRONIC	8C-2	WATER PUMPS—V-6, V-8, AND V-10		WHEELHOUSE LINER, FRONT	23-24
VOLTAGE TEST, OPEN-CIRCUIT	8A-8	ENGINES	7-11	WHEELHOUSE LINER, REAR	23-49
VOLTAGE—PCM INPUT, BATTERY	14-119,14-32	WATERDAM, CARGO DOOR	23-38	WHEELS	22-7
VOLTMETER	8E-16,8E-6	WATER-IN-FUEL LAMP	8E-12,8E-24	WHEELS INFORMATION	22-7
VOLUME CHECK, OIL PUMP	21-116,21-235	WATER-IN-FUEL SENSOR	14-135	WIDE-OPEN-THROTTLE CHECKS—	
WAIT-TO-START LAMP	8E-12,8E-24	WATER-IN-FUEL SENSOR—PCM INPUT	14-123	DIESEL ENGINE	14-93
WAIT-TO-START LAMP WARNING		WATER-IN-FUEL WARNING LAMP—PCM		WINCH, SPARE TIRE	13-6
LAMP—PCM OUTPUT	14-125	INPUT	14-123	WIND NOISE	23-3
WARNING, FUEL SYSTEM PRESSURE	14-74	WATER-TO-OIL COOLER IN RADIATOR		WINDOW, CARGO DOOR VENT	23-43
WARNING LAMP, ABS	5-53	SIDE TANK, REPLACING	7-43	WINDOW MOTOR, POWER	8S-1,8S-3,8S-4
WARNING LAMP, BRAKE	8E-17,8E-7	WATER-TO-OIL COOLER—5.9L DIESEL		WINDOW REGULATOR, FRONT DOOR	23-35
WARNING LAMP, LOW FUEL	8E-20,8E-9	ENGINE	7-44	WINDOW SWITCH, POWER	8S-1,8S-3,8S-4
WARNING LAMP, LOW WASHER FLUID	8E-20,	WEAR INDICATORS, TREAD	22-3	WINDOW SYSTEM, POWER	8S-1,8S-2
8E-9		WEAR PATTERNS, TIRE	22-3	WINDOW WEATHERSTRIP, CARGO DOOR	
WARNING LAMP, RED BRAKE	5-10,5-2	WEATHERSTRIP AND RETAINER, ROOF		VENT	23-43
WARNING LAMP, TRANSMISSION OIL		RAIL	23-45	WINDOW WEATHERSTRIP, QUARTER	
TEMPERATURE	8E-11,8E-23	WEATHERSTRIP, CARGO DOOR VENT		VENT	23-46
WARNING LAMP—PCM INPUT,		WINDOW	23-43	WINDOW—CLUB CAB, QUARTER VENT	23-46
WATER-IN-FUEL	14-123	WEATHERSTRIP, FRONT DOOR GLASS		WINDOWS, 8W-60 POWER	8-1
WARNING LAMP—PCM OUTPUT,		RUN	23-36	WINDSHIELD	23-6
TRANSMISSION TEMPERATURE	14-125	WEATHERSTRIP, FRONT DOOR INNER		WINDSHIELD WASHER SYSTEM	8K-1
WARNING LAMP—PCM OUTPUT,		BELT	23-34	WINDSHIELD WIPER SYSTEM	8K-1
WAIT-TO-START LAMP	14-125	WEATHERSTRIP, FRONT DOOR OUTER		WIPE RELAY, INTERMITTENT	8K-3,8K-6,8K-9
WARNING LAMPS, BRAKE	5-47	BELT	23-34	WIPER ARM	8K-7
WARNING SWITCH, TURN SIGNAL		WEATHERSTRIP, QUARTER VENT		WIPER ARM AND BLADE	8K-2
SWITCH AND HAZARD	8J-2	WINDOW	23-46	WIPER BLADE	8K-7
WARNING SYSTEM, HAZARD	8J-1	WEIGHT DISTRIBUTION	2-23	WIPER LINKAGE AND PIVOT	8K-2,8K-8
WARNING SYSTEM SWITCHES, CHIME	8U-6	WET SANDING, BUFFING, AND		WIPER MOTOR	8K-2,8K-8
WARNING SYSTEMS, TURN SIGNAL AND		POLISHING	23-4	WIPER SWITCH AND WASHER SWITCH	8K-2,
HAZARD	8J-3	WHEEL ALIGNMENT	2-1	8K-6	
WARNINGS & CAUTIONS, SERVICE	5-2	WHEEL ANTILOCK BRAKE SYSTEM,		WIPER SYSTEM	8K-4
WARNINGS AND PRECAUTIONS,		FOUR	5-51	WIPER SYSTEM, WINDSHIELD	8K-1
SERVICE	24-3	WHEEL ANTI-LOCK BRAKES, 8W-34		WIPERS, 8W-53	8-1
WARNINGS, NOTES, CAUTIONS	8-7	REAR	8-1	WIRING PROBLEMS,	
WARNINGS, SAFETY PRECAUTIONS	23-1	WHEEL ANTILOCK BRAKES, REAR	5-43	TROUBLESHOOTING	8-10
WASHER FLUID LEVEL SENSOR	8K-4	WHEEL ANTILOCK, REAR	5-43,5-48	WIRING REPAIR	8-10
WASHER FLUID WARNING LAMP, LOW	8E-20,	WHEEL BALANCE, TIRE	22-10	WIRING/TERMINAL	8-14
8E-9		WHEEL BEARING, FRONT	5-28	WORM SHAFT, RACK PISTON	19-16
WASHER NOZZLE AND PLUMBING	8K-4	WHEEL BEARINGS	2-11,2-12	WORN THREADS, REPAIR DAMAGED OR	9-5
WASHER PUMP	8K-4	WHEEL CYLINDER	5-31,5-37,5-39	YOKE BUSHING, REAR HOUSING	21-7
WASHER RESERVOIR	8K-3	WHEEL INSPECTION	22-8	YOKE SEAL REPLACEMENT	21-120,21-239,21-7